
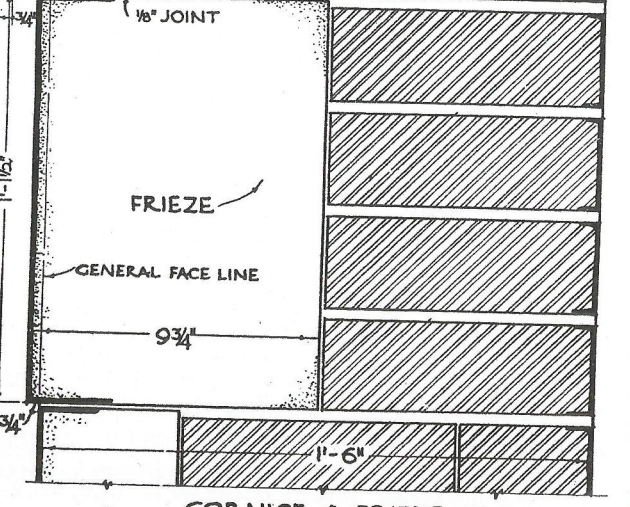
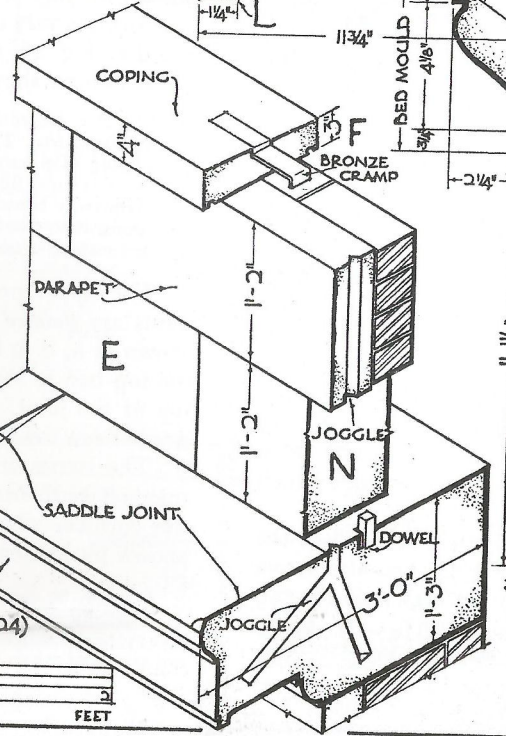
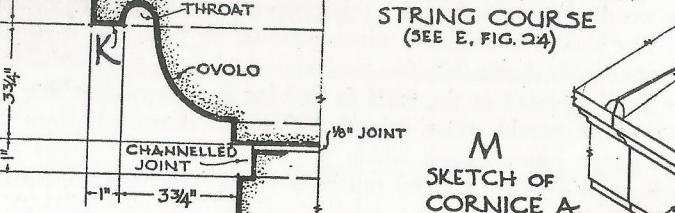
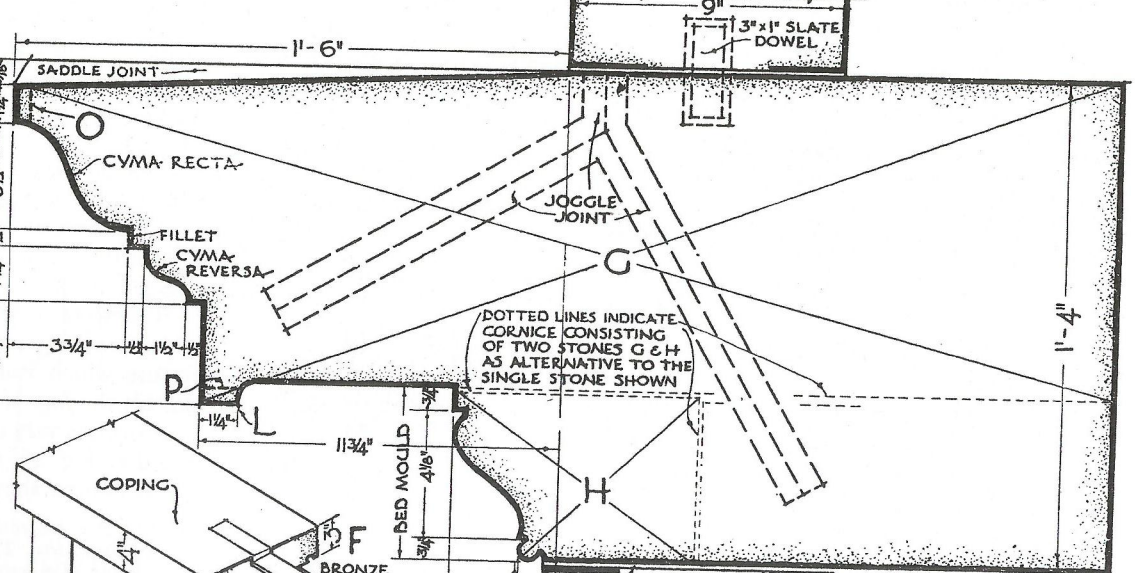
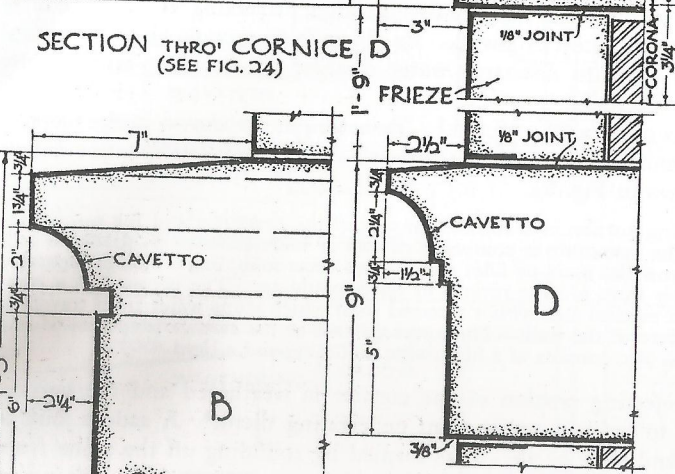
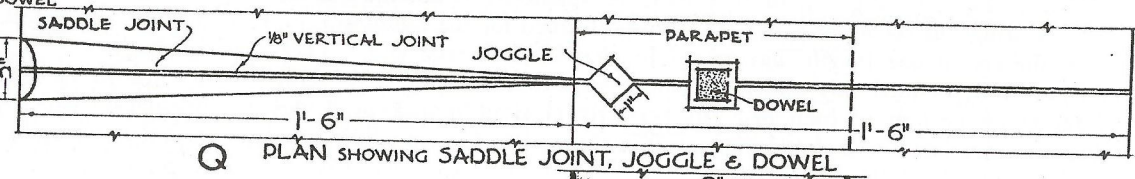
 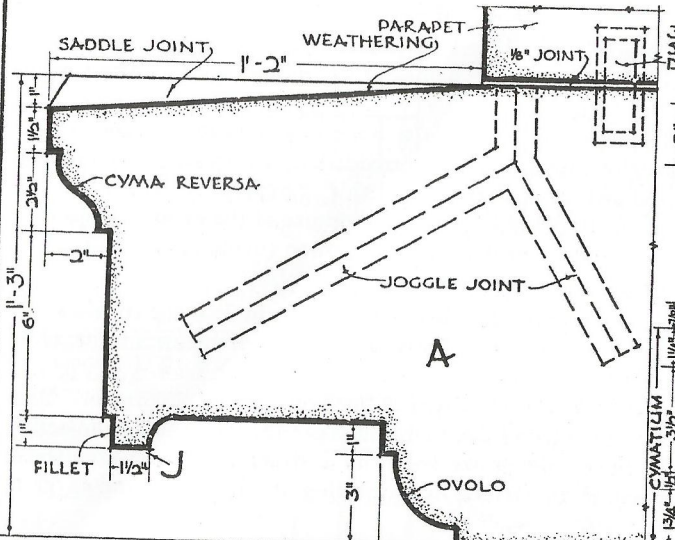


# CORNICES



NOTE. WATER IS CAUSED TO DRIP FROM THE OVERHANGING MEMBERS AT J, K, E, L & IS THUS PREVENTED FROM STAINING THE WORK BELOW THEM.

 


FIGURE 26