

# USER'S GUIDE



**punch!**  
SOFTWARE®

# HOME DESIGN

*Architectural Series™* **3000**

**© 2003 Punch! Software, L.L.C.**

**PUNCH! Home Design Architectural Series 3000 User's Guide**

All rights reserved. This document, as well as the software described in it, is furnished under license and can only be used or copied in accordance with the terms of the license.

Portions of the software described in this document © 1995-2003 Microsoft Corporation.

Except as permitted by such license, no part of this document can be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of Punch! Software, L.L.C.

Punch! Software, L.L.C. reserves the right to improve, enhance and revise its products without notice.

Punch! Home Design Architectural Series 3000 is a registered trademark of Punch! Software, L.L.C. Microsoft Windows is a registered trademark of Microsoft Corporation. All other product names mentioned in this document are trademarks or registered trademarks of their respective manufacturers.

The information in this document is furnished for informational use only, is subject to change without notice and should not be construed as a commitment by Punch! Software, L.L.C. Punch! assumes no liability for any errors or inaccuracies that may appear in this document.

First edition, 2003

Printed in the United States of America

# Table of Contents

<b>Part 1: The Basics</b> .....	<b>1</b>
<b>Chapter 1: Welcome</b> .....	<b>3</b>
Contents of Package .....	4
System Requirements .....	4
Tips for Users of Other Punch! Programs .....	4
Installing Punch! Home Design Architectural Series 3000 .....	4
Registering Punch! Home Design Architectural Series 3000 .....	4
Speed Tips .....	5
Important System Settings .....	5
Display Settings .....	5
Online Help .....	5
Video Tutorials .....	6
Technical Support .....	6
<b>Chapter 2: Window Layout</b> .....	<b>7</b>
Title Bar .....	8
Menu Bar .....	8
Plan Tabs and Toolbars .....	8
Tool Guides .....	8
Elevation Slider .....	9
Virtual Ruler .....	9
Snaps Bar .....	9
Annotation Bar .....	9
Measurement Tools .....	9
Working Floor Button .....	10
Status Bar .....	10
Scroll Bars .....	10
LiveView Icons .....	10
Properties Bar .....	10
Preview Bars .....	10

<b>Chapter 3: A Quick Tour</b> .....	<b>11</b>
About This Guide .....	12
Changing the Lot Size .....	12
Setting the Scale .....	13
Setting Unit of Measurement .....	13
Using the Grid .....	13
<b>Chapter 4: File Management</b> .....	<b>15</b>
Opening a File .....	16
Saving a File .....	16
Closing a File .....	16
Accessing the Pre-Drawn Homeplans .....	16
Importing Files .....	17
Exporting Files .....	17
Printing Floorplans .....	17
Printing a 3D LiveView Rendering .....	18
<b>Chapter 5: Snaps and Annotations</b> .....	<b>19</b>
Snap to Endpoint .....	20
Snap to Segment Centerpoint .....	21
Snap to Object Center .....	22
Snap to Object Corner .....	24
Snap to Intersection .....	24
Snap to Perpendicular .....	25
Snap to Segment-Offset .....	25
Dimensioning .....	26
Using the Virtual Ruler .....	28
Calculating Square Footage .....	28
Adding Text .....	29
<b>Chapter 6: Controlling Views</b> .....	<b>31</b>
Viewing the 2D Plan .....	32
Zooming In and Out in 2D .....	32
Panning Across the 2D Drawing .....	32
Using Viewpoints .....	32
Arranging 2D and 3D Windows .....	33
<b>Chapter 7: Plan Tabs</b> .....	<b>35</b>
Selecting a Plan Tab .....	36
Customizing Visible Plans .....	36
Moving Features to Different Plans .....	37
Selecting the Properties Bar .....	37

**Part 2: Creating Your Home Design . . . . . 39**

**Chapter 8: Foundation Plan Tab . . . . . 41**

- Defining the Foundation Perimeter . . . . . 42
- Setting the Foundation Perimeter Options . . . . . 42
- Editing Foundation Walls . . . . . 43
- Adding Stiffener Beams . . . . . 44
- Defining Foundation Piers . . . . . 44
- Adding Post Tension Strands . . . . . 45
- Drawing the Foundation Slope . . . . . 45
- Creating a Basement . . . . . 45
- Creating a Split-Level Foundation . . . . . 46
- Creating a Slab Foundation . . . . . 46

**Chapter 9: Floor Plan Tab . . . . . 47**

- Drawing Exterior Walls . . . . . 48
- Changing Exterior Wall Segment Length . . . . . 48
- Drawing Interior Walls . . . . . 49
- Setting Wall Options . . . . . 50
- Editing Walls . . . . . 51
- Defining Gable Wall Segments . . . . . 51
- Drawing Irregular Walls . . . . . 51
- Changing Interior Wall Segment Length . . . . . 52
- Defining Wall Height . . . . . 53
- Moving Walls . . . . . 53
- Drawing a Curved Wall . . . . . 53
- Breaking a Wall . . . . . 54
- Adding Doors and Openings . . . . . 54
- Moving an Opening or Door . . . . . 55
- Changing Door Settings . . . . . 55
- Adding Windows . . . . . 56
- Moving a Window . . . . . 56
- Changing Window Settings . . . . . 56
- Elevating a Window . . . . . 57
- Stacking Windows . . . . . 57
- Removing a Window . . . . . 57
- Adding a Second Floor . . . . . 57
- Creating a Split Level . . . . . 58
- Placing a Staircase . . . . . 59
- Modifying a Staircase . . . . . 59
- Adding Railings . . . . . 60
- Modifying a Railing . . . . . 60
- Adding Flooring . . . . . 61
- Calculating the Flooring Square Footage . . . . . 62
- Adding a Floor Cutout . . . . . 62

**Part 3: Utilities in Your Home Design . . . . . 63**

**Chapter 10: Electrical Plan Tab . . . . . 65**

- Placing Outlets and Switches . . . . . 66
- Adding Connector Switches . . . . . 66
- Adding Fixture Lighting . . . . . 67
- Adding Flood Lights . . . . . 68
- Placing Phone and Cable Jacks . . . . . 69
- Adding Smoke Detectors and Thermostats . . . . . 70
- Adding a Ceiling Fan . . . . . 70

**Chapter 11: Plumbing Plan Tab . . . . . 71**

- Placing Toilets . . . . . 72
- Placing Sinks . . . . . 72
- Placing Bathtubs or Spa Tubs . . . . . 73
- Placing a Shower . . . . . 73
- Placing the Hot Water Heater . . . . . 74
- Placing an Outdoor Hose Bib . . . . . 74
- Placing a Gas Bib . . . . . 75
- Adding Floor Drains . . . . . 75

**Chapter 12: HVAC Plan Tab . . . . . 77**

- Placing Air Ducts . . . . . 78
- Placing Vents and Registers . . . . . 79
- Adding Heating, Air Conditioning Units and Pumps . . . . . 79
- Placing Baseboard Registers . . . . . 80

**Part 4: Working on Your Home’s Exterior . . . . . 83**

**Chapter 13: Roofing Plan Tab . . . . . 85**

- Adding a Roof . . . . . 86
- Using the Freehand Roof Tools . . . . . 87
- Editing Roofs . . . . . 88
- Drawing a Gambrel Roof . . . . . 89
- Drawing a Saltbox Roof . . . . . 90
- Adding a Soffit . . . . . 91

**Chapter 14: Deck Plan Tab . . . . . 93**

- Adding a Deck . . . . . 94
- Calculating Square Footage of a Deck . . . . . 94
- Changing the Deck Height . . . . . 94
- Editing Skirt Trim Options . . . . . 94
- Editing Handrail Options . . . . . 95
- Editing Step Options . . . . . 95
- Adding Custom Railings . . . . . 96
- Modifying a Custom Railing . . . . . 96

Placing a Custom Staircase . . . . . 96  
 Modifying a Custom Staircase . . . . . 97

**Chapter 15: Landscape Plan Tab . . . . . 99**

Defining the Property Line . . . . . 100  
 Calculating Square Footage of the Property . . . . . 100  
 Adding a Ground Fill Region . . . . . 100  
 Calculating Square Footage of a Fill Region . . . . . 101  
 Adding Berms . . . . . 101  
 Adding Fill . . . . . 102  
 Drawing Sidewalks, Pathways or Driveways . . . . . 103  
 Calculating Square Footage of a Pathway . . . . . 104  
 Edging an Area . . . . . 104  
 Drawing Fences and Gates . . . . . 105  
 Drawing Retaining Walls . . . . . 106  
 Placing Sprinkler Heads . . . . . 107  
 Altering Topography . . . . . 108

**Chapter 16: Detail Plan Tab . . . . . 111**

Drawing Rectangles and Squares . . . . . 112  
 Drawing Circles and Ovals . . . . . 112  
 Drawing Lines . . . . . 112  
 Drawing Polygons . . . . . 113  
 Drawing Arcs . . . . . 113  
 Drawing Circular Arcs . . . . . 114  
 Drawing Multigons . . . . . 114  
 Drawing Curves . . . . . 115  
 Using Rules and Fills . . . . . 115  
 Converting Details to Intelligent Features . . . . . 116  
 Editing Detail Shapes . . . . . 117  
 Adding Smoothing Tension . . . . . 118

**Part 5: Customizing Your Drawing . . . . . 119**

**Chapter 17: Editing Your Drawing . . . . . 121**

Editing Using Cut, Copy, Paste and Clear . . . . . 122  
 Using Undo . . . . . 122  
 Copying Objects to Different Floors . . . . . 122  
 Moving Objects to Different Floors . . . . . 122  
 Moving Features to Different Plans . . . . . 123  
 Moving the Entire Floor Plan . . . . . 123  
 Rotating the Entire Floor Plan . . . . . 123  
 Flipping the Entire Floor Plan . . . . . 123  
 Using Nudge . . . . . 124  
 Rotating a Selection . . . . . 124

Customizing Floorplan Colors ..... 124  
 Elevating Objects ..... 125  
 Using Elevation Slider ..... 126

**Chapter 18: Working with LiveView ..... 127**

Opening a LiveView Window ..... 128  
 Moving around in 3D ..... 128  
 Accessing the Rendering Styles ..... 129  
 Adjusting Rendering Quality ..... 130  
 Using the 3D Cut-away Slider ..... 131  
 Adding Lighting and Shadows ..... 131  
 Setting the Viewpoint Angle ..... 132  
 Customizing LiveView ..... 132

**Chapter 19: Personalizing Your Design ..... 135**

Objects Preview Bar ..... 136  
 Editing Objects ..... 136  
 Moving Objects ..... 137  
 Object Organizer ..... 137  
 Elevating Objects ..... 139  
 Building Rooms Using Templates ..... 139  
 Creating New Templates ..... 140  
 Template Organizer ..... 140  
 Plants Preview Bar ..... 141  
 Viewing Hardiness Zones ..... 142  
 PlantFinder ..... 142  
 Making Plants Grow ..... 143  
 Applying Wall Trims ..... 144  
 Applying Color ..... 145  
 Using Custom Colors ..... 145  
 Applying Building Materials ..... 146  
 Customize Materials ..... 146

**Part 6: Companion Programs and PowerTools ..... 149**

**Chapter 20: FloorPlan Trace ..... 151**

Importing a Floorplan Image ..... 152  
 Matching the Drawing Scale ..... 152  
 Tracing the Imported Floorplan ..... 152  
 Hiding an Imported Floorplan ..... 153

**Chapter 21: Estimator ..... 155**

Launching Estimator ..... 156  
 Customizing the Spreadsheet ..... 156  
 Selecting a Plan Tab ..... 157  
 Calculating Construction Costs ..... 157



Completing the Various Schedules .....	157
Creating a Master Pricelist .....	157
Exporting a Pricelist .....	158
Printing a Pricelist .....	159
<b>Chapter 22: PhotoView &amp; PhotoView Editor .....</b>	<b>161</b>
Tips for Using PhotoView .....	161
Importing PhotoView Images .....	162
Moving PhotoView Images .....	162
Replacing PhotoView Images .....	163
Elevating PhotoView Images .....	163
Altering PhotoView Images .....	163
Masking PhotoView Images .....	164
Landscaping Using PhotoView Images .....	165
Right in Your Own Backyard .....	165
PhotoView Editor .....	166
File Management .....	166
Editing Your PhotoView Image .....	166
Editing Shapes .....	168
Editing Material Perspective .....	169
<b>Chapter 23: RealModel® .....</b>	<b>171</b>
Preparing to Construct a RealModel .....	172
Defining Scale .....	172
Choosing the Construction Material .....	172
Setting Print Setup .....	172
Printing Templates .....	172
Constructing Wall Templates .....	173
Constructing Roof Templates .....	173
Printing Template Materials and Colors .....	173
Attaching Template Materials and Colors to Your Model .....	174
<b>Chapter 24: Cabinet Wizard .....</b>	<b>175</b>
Designing Full Cabinets .....	176
Designing Base Cabinets .....	176
Designing Top Cabinets .....	177
Designing Islands .....	177
Designing Cabinets with Built-in Appliances .....	178
Defining Dimension Increments .....	180
Specifying a Trim Style .....	180
Customizing Cabinet Features .....	180
Moving around in Cabinet Wizard .....	183
Applying Material or Color to Cabinets .....	184
Adding Lighting and Shadows .....	184
Rendering Options .....	185
Saving a Cabinet .....	185

Closing a File .....	185
Exporting to 3D Custom Workshop .....	186
<b>Chapter 25: Framing Editor .....</b>	<b>187</b>
Launching Framing Editor .....	188
Adding Structural Components .....	188
Customizing Framing Beam Properties .....	188
Customizing Joist Properties .....	189
Specifying Support Column Properties .....	190
Customizing Door and Window Headers .....	190
Specifying Estimation Options .....	190
LiveView Window Options .....	190
Adding Lighting and Shadows .....	192
Using ClearView .....	192
Adjusting Rendering Quality .....	192
Viewing Elevations .....	193
Customizing LiveView .....	193
Using the 3D Cut-away Slider .....	194
Printing and Exporting Files .....	194
Moving Features to Different Plans .....	195
<b>Chapter 26: Elevation Editor .....</b>	<b>197</b>
Launching Elevation Editor .....	198
Adding and Modifying Doors and Windows .....	198
Moving an Opening or Door .....	198
Changing Door Settings .....	198
Adding Windows .....	199
Moving a Window .....	199
Changing Window Settings .....	200
Controlling Views .....	201
Using the 3D Cut-away Slider .....	201
Controlling the Appearance of your Drawing .....	202
Applying Material .....	202
Applying Color .....	203
Using Custom Colors .....	203
Applying Wall Trims .....	204
Changing the Light and Rendering Methods .....	204
Customizing LiveView .....	205
Dimensioning .....	205
Adding Text .....	206
Modifying the Elevation Editor Options .....	207
Modifying Screen Colors .....	207
Outputting Elevation Data .....	208

<b>Chapter 27: Layout Manager</b> .....	<b>209</b>
Launching Layout Manager .....	210
Creating a Layout .....	210
Adding Home Design Layout Boxes .....	210
Adding Image Layout Boxes .....	210
Adding LiveView Layout Boxes .....	211
Using LiveView Tools .....	211
Adding Lighting and Shadows .....	212
Setting the Viewpoint Angle .....	212
Using ClearView .....	212
Adjusting Rendering Quality .....	212
Customizing LiveView .....	213
Manipulating Layout Boxes .....	214
Annotating your Layout with CAD tools .....	214
Using Rules and Fills .....	217
Using Snaps to Draw CAD Objects .....	219
Adding Text .....	220
Viewing your Layout .....	221
Printing your Layout .....	221
Using Layout Templates .....	222
<b>Chapter 28: DXF/DWG Export &amp; Import</b> .....	<b>223</b>
Exporting and Importing a DXF/DWG File .....	224
Converting DXF/DWG Lines and Shapes .....	224
Copying Objects to Different Floors .....	225
Moving DXF Features .....	225
Viewing the 2D Plan .....	226
Zooming In and Out in 2D .....	226
Panning Across the 2D Drawing .....	226
Using Nudge .....	227
Rotating a Selection .....	227
<b>Chapter 29: Fireplace Wizard</b> .....	<b>229</b>
Fireplace Wizard .....	230
Defining Dimension Increments .....	230
Customizing the General Dimensions .....	231
Customizing Hearth & Mantel Dimensions .....	231
Customizing the Chimney Dimensions .....	232
Moving around in Fireplace Wizard .....	232
Applying Material or Color to Fireplaces .....	233
Adding Lighting and Shadows .....	234
Rendering Options .....	234
Saving a Fireplace .....	234
Closing a File .....	235
Exporting to 3D Custom Workshop .....	235

**Part 7: Punch! Animator ..... 237**

**Chapter 30: File Management and Editing Controls ..... 239**

Exporting an AVI File ..... 240  
 Opening a Video File ..... 240  
 Saving Animation Paths ..... 240  
 Importing Animation Paths ..... 240  
 Closing a File ..... 241  
 Using Undo ..... 241  
 Editing Using Cut, Copy, Paste and Clear ..... 241  
 Using Nudge ..... 242  
 Moving a Selection ..... 242  
 Rotating a Selection ..... 242

**Chapter 31: KeyPoints and Animation Paths ..... 243**

Drawing Animation Paths ..... 244  
 Adding and Deleting KeyPoints ..... 244  
 Naming and Ordering Animation Paths ..... 244  
 Previewing ..... 245  
 Exporting an AVI File ..... 245

**Chapter 32: Segment Tab ..... 247**

Defining Segment Times ..... 248  
 Customizing Segment Options ..... 248  
 Using the 3D Cut-away Slider ..... 248  
 Adding Lighting and Shadows ..... 249  
 Adjusting Rendering Quality ..... 249  
 Using ClearView Mode ..... 250  
 Using Shaded Mode ..... 250  
 Defining Viewing Angles ..... 250  
 Defining Path Transitions ..... 250  
 Customizing Point Tension ..... 251  
 Customizing KeyPoint Views ..... 252  
 Naming and Ordering Animation Paths ..... 252

**Chapter 33: Video Tab ..... 255**

Setting the Display Size ..... 256  
 Setting the Frames per Second ..... 256  
 Setting the Export Quality ..... 256  
 Setting the Blank Frames ..... 256  
 Assigning a Codec ..... 256  
 Assigning a Temporary Directory ..... 257  
 Setting the Preview Speed ..... 257

**Part 8: 3D Custom Workshop ..... 259**

- Chapter 34: Window Layout ..... 261**
  - Title Bar ..... 262
  - Menu Bar ..... 262
  - Toolbars ..... 262
  - Position Readout Bar ..... 262
  - Status Bar ..... 262
  - Scroll Bars ..... 262
  - Preview Bar ..... 262
- Chapter 35: File Management ..... 263**
  - Opening a New File ..... 264
  - Opening an Existing Object ..... 264
  - Saving a File ..... 264
  - Closing a File ..... 265
  - Exporting Files ..... 265
  - Printing Objects ..... 265
- Chapter 36: Drawing Grids ..... 267**
  - Drawing on the Front Grid ..... 268
  - Drawing on the Floor Grid ..... 268
  - Drawing on the Side Grid ..... 268
  - Changing Grid Settings ..... 269
  - Using 2D Views ..... 269
- Chapter 37: Drawing in 3D ..... 271**
  - Drawing a 3D Rectangle ..... 272
  - Drawing a 3D Oval ..... 272
  - Drawing a 3D Multigon ..... 273
  - Drawing a 3D Polygon ..... 274
  - Drawing a 3D Closed Arc ..... 275
  - Drawing a 3D Circular Closed Arc ..... 275
  - Drawing a 3D Open Arc ..... 276
  - Drawing a 3D Circular Arc ..... 277
  - Drawing a 3D Plane ..... 278
  - Drawing a 3D Curve ..... 279
  - Using Object Selection Mode ..... 279
  - Using Point Selection Mode ..... 280
  - Drawing from Corner ..... 280
  - Drawing from Center ..... 281
- Chapter 38: Drawing in 2D ..... 283**
  - Drawing a 2D Rectangle ..... 284
  - Drawing a 2D Oval ..... 284
  - Drawing a 2D Multigon ..... 285

Drawing a 2D Polygon .....	285
Drawing a 2D Closed Arc .....	286
Drawing a 2D Circular Closed Arc .....	286
Drawing a 2D Open Arc .....	287
Drawing a 2D Circular Arc .....	287
Drawing a 2D Line .....	288
Drawing a 2D Curve .....	288
Changing Curve Tension .....	289
<b>Chapter 39: Converting 2D Objects to 3D .....</b>	<b>291</b>
Extruding a 2D Object .....	292
Revolving a 2D Object .....	292
<b>Chapter 40: Editing 3D Objects .....</b>	<b>295</b>
Applying Skew .....	296
Rotating an Object .....	296
Specifying Object Size .....	297
Working in Layers .....	297
Setting a Nudge Distance .....	298
Using Flip .....	298
Using Mirror .....	299
Duplicating Objects .....	300
Grouping Objects .....	301
<b>Chapter 41: Controlling Views .....</b>	<b>303</b>
Using Perspective or Orthographic Views .....	304
Using Different Views .....	304
Using Zoom .....	305
Setting the Camera Angle .....	306
<b>Chapter 42: Applying Color and Material .....</b>	<b>307</b>
Setting the Object Color .....	308
Applying Color and Materials .....	308
Using Custom Colors .....	308

---

Part 1

# The Basics

Chapter 1: Welcome .....	3
Chapter 2: Window Layout .....	7
Chapter 3: A Quick Tour .....	11
Chapter 4: File Management .....	15
Chapter 5: Snaps and Annotations .....	19
Chapter 6: Controlling Views .....	31
Chapter 7: Plan Tabs .....	35





# Welcome

Punch! Home Design Architectural Series 3000 is a professional-level home design system developed for anyone who needs fast, accurate home drawings and wants the flexibility to view and edit their plan in 3D.

Uses for Punch! Home Design Architectural Series 3000 include:

- Architectural drawings
- Presentations
- Kitchen design
- 3D visualization
- Plumbing installation
- DXF/DWG Import and Export
- Electrical plans
- Framing customization
- 3D visualization
- Interior design
- Landscaping

In addition, Punch! Home Design Architectural Series 3000 contains a useful variety of Power Tools that perform specific tasks. For instance, Framing Editor lets you customize almost every facet, like the framing material, spacing and even the direction studs and trusses are to be placed and Layout Manager makes it easy to make professional presentations of your designs to an architect or builder. Once you're finished with your design, you can even record an AVI movie to send to your friends, architect, builder and so on.

It's simple to get started planning the home of your dreams. Take a few minutes to familiarize yourself with the contents of this manual, so you'll know where to quickly find the answers. Be sure to see Chapters 2 and 3 for a quick tour of the program and an overview of the screen layout.

The most important thing to do before beginning work with Punch! AS3000 will be setting your display to 32-bit color. To do this, right-click the Desktop, then click Properties on the pop-up menu. Click the Settings Tab on the Display Properties dialog box, then select True Color (32-bit); if this is not available on your computer, select 24-bit.

## Contents of Package

Punch! Home Design Architectural Series 3000 comes with everything you need to install and use the software. The package includes the following items:

- Punch! Home Design Architectural Series 3000 CD
- PUNCH! Home Design Architectural Series 3000 User's Guide
- Homeplan booklet

## System Requirements

In order to run Punch! Home Design Architectural Series 3000, it is recommended that you have a Pentium-based computer. In addition, your system should include the following:

### System Requirements

- Intel® Pentium, Celeron® or AMD® Athlon™ Processor
- Windows 95 or higher
- 64 MB of RAM
- 900 MB of hard disk space
- VGA video card displaying at least 800x600 with 24-bit color (32-bit, if available)
- CD-ROM drive
- Mouse or other pointing device
- 32 MB Video Card Memory

## Tips for Users of Other Punch! Programs

Punch! AS3000 will open all floorplans designed with other Punch! programs. One major difference involves the use of interior, exterior and foundation walls. Walls drawn in some previous Punch! programs may import as interior walls, so these walls will need to be customized in Punch! AS3000. In addition, flooring may need to be drawn on upper floors and some roofing sections might need to be redesigned.

### To update a file from a previous Punch! program

- 1 Open the file.
- 2 Define your design's exterior walls. For more information, see "To convert interior walls to exterior walls", which begins on page 51.
- 3 Use the Wall Segment Properties dialog box to match all roof sections. For more information, see "Defining Gable Wall Segments", which begins on page 51.
- 4 Use the Automatic Flooring feature on the upper floors. For more information, see "To control automatic flooring", which begins on page 50.

- 5 (optional) Draw flooring on the upper floors. For more information, see "Adding Flooring", which begins on page 61.
- 6 Customize any complex roofing sections. For more information, see "Using the Freehand Roof Tools", which begins on page 87.

**Tip:** The most important thing to remember when beginning a new drawing is to complete your foundation or exterior walls first. A completely-closed exterior perimeter will ensure that floor square footage measurements will be correctly calculated.

## Installing Punch! Home Design Architectural Series 3000

To install Punch! Home Design Architectural Series 3000, you must run Setup. You can't install or reconfigure Punch! AS3000 by copying files directly from the distribution CD to your hard drive.

### To install Punch! AS3000

- 1 Insert the Punch! AS3000 CD into your CD-ROM drive. Installation begins as soon as you insert the CD.
- 2 Follow the installation prompts that appear.

**Note:** If installation did not begin when you inserted the Punch! AS3000 CD into your CD-ROM drive, Autorun may be turned off on your computer.

### To install Punch! AS3000 if installation does not begin automatically

- 1 Insert the Punch! AS3000 CD into your CD-ROM drive.
- 2 On the Windows Start menu, click Run. The Run dialog box is displayed.
- 3 Type M:\PL2Setup.exe, then click OK. If you are installing from a different drive, substitute the correct letter in place of the letter M.
- 4 Follow the installation prompts that are displayed.

## Registering Punch! Home Design Architectural Series 3000

Take a moment to register online during installation. After registering, you are eligible for technical support and for early notification when new product releases become available.

Your serial number is conveniently located on the back of the CD jewel case.

You can also register your software by calling our toll free number at 1-800-365-4832 or visit our Web site at [www.punchsoftware.com](http://www.punchsoftware.com) to register.

## Speed Tips

You can “Speed Up” Punch! AS3000 by changing some of the program's default settings.

- Close the LiveView window when you are not working in 3D. No 3D calculations are performed when the LiveView window is closed.
- Choose the Quarter-View window size for LiveView instead of Full-View to increase 3D rendering speed. 3D rendering speed increases as the LiveView window becomes smaller in size.
- Turn off shadow rendering. For more information, see “Adding Lighting and Shadows”, which begins on page 131.
- Set your Display Screen Settings to 24-bit (32-bit, if available), 65,000 colors for optimum 3D rendering speed.
- You don’t have to wait for a 3D view to render every time. Just click the mouse in the LiveView window to interrupt rendering.
- Hide the floors that are not being drawn. By turning off the inactive floors, the program will not waste resources on them. For more information, see “To view the working floor only”, which begins on page 32.

## Important System Settings

Some of your computer’s settings can impact Punch! AS3000’s efficiency. By changing one (or more) of these settings, you can control how the program performs.

- Set your Display Settings to 800x600 pixels and High Color (24-bit) or True Color (32-bit). On your Start menu, select Settings>Control Panel>Display>Settings.
- If you notice that the 3D display is not clear, set back the Graphics Acceleration. On your Start menu, select Settings>Control Panels> System>Performance> Graphics, then set the acceleration back one notch.
- By default, all measurements display in Inches; to choose Centimeters go to Design>Unit of Measure... select Metric.

## Display Settings

Punch! AS3000 is designed to run effectively based on the system requirements printed on the software packaging. However, there are some specific settings you can select to obtain the best display possible.

## To adjust your display settings

- 1 On the Start menu, click Settings, Control Panel. The Control Panel program group is displayed.
- 2 Double-click Display. The Display Properties dialog box is displayed.
- 3 Click to the Settings page tab.
- 4 In the Colors list box, click True Color (32-bit).

**Note:** If 32-bit is unavailable, click True Color (24-bit).

- 5 In the Screen Area section, move the slider to display at least 800 x 600 pixels.
- 6 Click OK. The new window settings are applied. You may be prompted to restart your computer to apply the new settings. If so, click OK or Yes.

## Online Help

Punch! AS3000 includes an extensive online help system. This system includes all of the information found in the *PUNCH! Home Design Architectural Series 3000 User’s Guide*.

### To access the online help files

- On the Help menu, click Contents or press F1.

### To access help for a specific part of your 2D drawing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the Context Help Button.
- 3 Click the feature, object or plant that you want help with. The Quick Access menu for that feature, object or plant is displayed on the right side of the window.




- 4 Click the Tool Help listing on the pop-up window. Help for that feature, object or plant is displayed.
- 5 (optional) Pressing F1 while many tools are active will access the help file for that Tool.

## Video Tutorials

Video Tutorials are available for drawing tools and other commonly-used features. These tutorials can be accessed three ways.

### To access video tutorials from Tool Guides

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the feature, object or plant that you want help with, then click the Tool Guide tool. The Tips and Tricks menu for that tool is displayed.

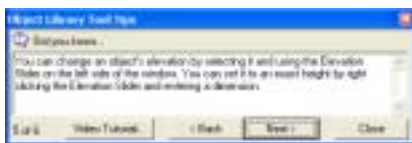

- 3 Click the Video Tutorial button on the Tips and Tricks menu. A short video will be played showing how the tool works.

### To access video tutorials with a right-click

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the Context Help Button.
- 3 Right-click the feature, object or plant that you want help with. The Quick Access menu for that tool, object or plant is displayed.



- 4 Click Video Tutorial on the pop-up window. A short video will be played showing how the tool works.

**Note:** The player will automatically close upon completion of the video.

### To access video tutorials from Help

- 1 On the Help menu, click Contents or press F1.
- 2 Navigate through the Help System until the topic you need is displayed.



- 3 Click the Show Me button. A short video will be played showing how the tool or feature works.

## Technical Support

Before contacting Punch! Technical Support, please verify that the answer to your question is not available from one of the following resources:

- Punch! AS3000 User's Guide
- Punch! AS3000 Online Help System
- Video Tutorials

In addition, be sure to visit our online support page at [www.punchsoftware.com](http://www.punchsoftware.com). There you will find a list of FAQs (Frequently Asked Questions). You might find the answer you're looking for!

Plus, the Punch! Online Community - [forums.punchsoftware.com](http://forums.punchsoftware.com) - is available, where users can post questions and trade useful tips and tricks.

If you cannot find the answer to your question at one of these areas, you can email your question to Punch! technical support.

Punch! Technical Support can only answer questions related to the features of Punch! Home Design Architectural Series 3000. They cannot answer specific questions about home building, local building codes, and so on. You can email technical support questions by writing to [techsupport@punchsoftware.com](mailto:techsupport@punchsoftware.com).

When contacting technical support, please provide:


- Serial Number on back of jewel case
- Your computer's operating system
- Make and model of your computer
- Video card manufacturer and model
- Video card driver date and version
- Video RAM
- Display settings, including hardware acceleration

Technical support by telephone is free for 60 days from the date of registration and \$10 per call thereafter. When you call, you should be in front of your computer with the program running and have the above information handy. The technical support phone number can be found on our online support page at [www.punchsoftware.com](http://www.punchsoftware.com).

# ***Window Layout***

The Punch! AS3000 window provides an assortment of features that make it easy to create precise home plans. This chapter describes the basic components.

In most cases, this chapter does not provide detailed information on standard Windows concepts or on specific menu items. For information on standard Windows concepts, such as the mouse, the Control menu, the window border, the maximize button, dialog box controls and so on, refer to Windows online Help.

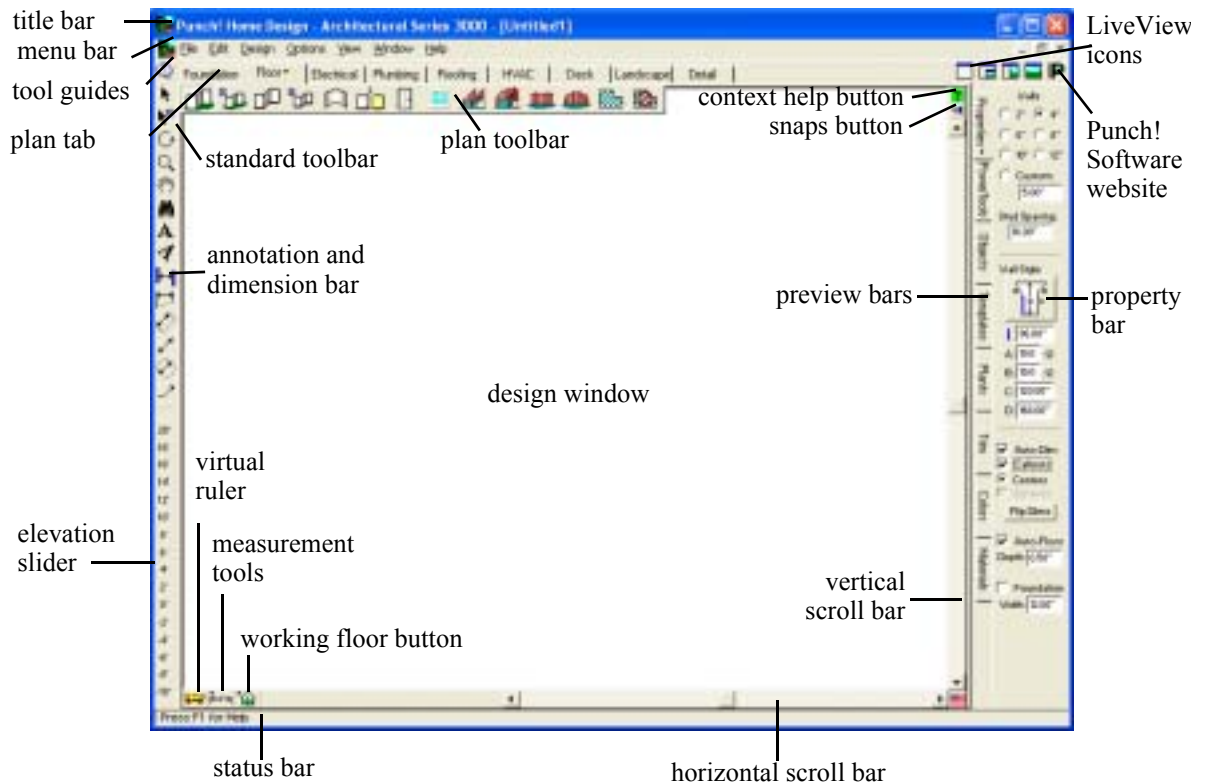

## Title Bar

The title bar extends across the top of the application window. It displays the name of the program and the name of the current drawing file. Using the buttons at the right end of the title bar you can minimize, maximize, close or restore the window. You can also maximize or restore a window by double-clicking on the title bar. Double-clicking the Control menu box at the left end of the title bar is a quick way to exit. If the application is running in a window, rather than maximized, dragging the title bar moves the entire window on the desktop.

## Menu Bar

You can choose menu items using either the mouse or the keyboard. To use the mouse, click the menu name; when the menu drops down, click the item you want. Menu items with an arrow to the right display cascading menus when you place the pointer over one of them. When you highlight a menu item, a description is displayed on the status bar.

To use the keyboard, press the ALT key and type the underlined letter in the menu name, then type the underlined letter in the menu item's name. If there is a cascading menu, you must type another letter. You can also use the arrow keys to move through menu items and press ENTER to select one. The ESC key backs out of the menu items one level at a time.

There are single-key or key combination shortcuts for certain frequently-used menu items. Each menu lists available shortcut keys to the right of the item's name. You can use the techniques for choosing menu items in combination.

## Plan Tabs and Toolbars

Clicking one of the plan tabs will activate the toolbar for that plan layer. For example, if you select the Landscape tab, the Landscape toolbar will appear. In addition, when you click the small arrow next to the title of the tab, you have the option of viewing or hiding other plans. This will be useful, for example, if you want to see the foundation plan with landscaping, but without exterior and interior walls.


To find out what a certain tool represents, hold the pointer over the tool and read the description on the status bar at the bottom of the window.

## Tool Guides

Punch! AS3000 makes it easy to get started by providing users with tips and tricks for each Tool. Tool Guides provide information about each tool and some general information about the program. Tool Guides can be turned off and on to suit your needs.

### To access general tool guides

- On the Standard toolbar, click the Tool Guide Tool.

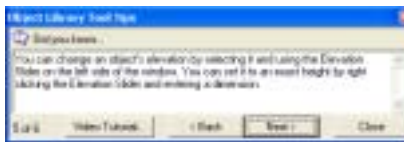

### To access tool guides for a specific tool


- 1 On any plan tab, click the tool you want to learn more about.
- 2 Click the Tool Guide tool, the Tips and Tricks menu for that tool is displayed.

### To access tool guides for a part of your 2D drawing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the Context Help Button.
- 3 Click the feature, object or plant that you want help with. The Quick Access menu for that feature, object or plant is displayed on the right side of the window.



- 4 Click the Tool Guide listing at the top of the pop-up window. The Tool Tips menu for that feature, object or plant is displayed.

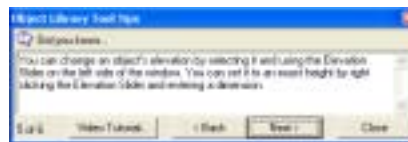

- 5 (optional) Click Back or Next to cycle through the tips available for that feature, object or plant.

## To turn tool guides on and off

- To turn off Tool Guides, click (Turn-Off Tool Guides).



- To turn on Tool Guides, on the Help Menu click Show Tool Guides.




## Elevation Slider

With Punch! AS3000's Elevation Slider you can easily move selected items vertically off "ground level". This feature makes it a snap to make sure windows, doors, plants and so on are in exactly the position you want. Simply select the object or feature to be raised and move slider by clicking and dragging with the mouse. For a more information, see "Using Elevation Slider" on page 126.



## Virtual Ruler

The Virtual Ruler works like a real-world tape measure. It stores away in the corner of the window until you need it. Then with one click it is displayed in the middle of the window, where you can move it into any position necessary to make a needed measurement. It then stores away until you need it again. To move the Virtual Ruler, click and drag from the center. To resize, click and drag on one of the large black dots at either end.

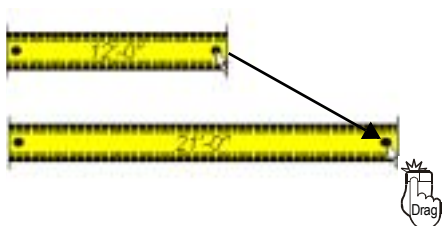

You are not constrained to vertical or horizontal, the Vertical Ruler can be stretched in any direction necessary.

## Snaps Bar

On the Snaps bar you will find ten tools that you will begin to find indispensable. Each tool has a very specific function and will allow you to place walls, doors, windows and many other things exactly where you want them - the first time! For more information, see "Snaps and Annotations", which begins on page 19.



From placing a window exactly 6'4" from a corner to placing a table lamp exactly in the center of the end table, you will begin to use Snaps in concert with almost every other drawing tool in Punch! AS3000.

## Annotation Bar

On the Annotation bar there are two tools for text, straight and angled, and several tools to let you dimension part of your design where automatic dimensioning may not be available.

With these tools you will be able to measure and label any part of your drawing. If you want, you can store these labels on the Detail Tab so you have the option of turning them off when you want to see your design in a more unobstructed state. For more information, see "Snaps and Annotations", which begins on page 19.



## Measurement Tools

The measurement tools include associative dimensions, window/door callouts and the shortcuts to calculate floor square footage.



Associative Dimensioning are the measurements that appear as you are adding features. For example, the Associative Dimensioning feature will show how far from the ends of each wall the window is positioned.

When the Window/Door Callouts option is checked, the measurements of all window and door openings will be shown with the wall measurements and be displayed in the floorplan view.

Selecting one of the three square footage options will cause Punch! AS3000 to make that calculation and display it in the Status Bar.

## Working Floor Button

Use the Working Floor button to switch the current view based on the number of floors in your home plan. When you click the Working Floor button, a pop-out menu is displayed. Simply click the floor on which you would like to work to switch the current working floor.



## Status Bar

The status bar is located in the lower left of the window and displays prompts, program messages and measurements. It is a good place to look when you are holding the pointer over certain buttons or menu items to find their function.

## Scroll Bars

Scroll bars provide a way for you to pan across the drawing, that is, to change the part of the drawing visible in the window, without changing the level of magnification. To pan the drawing in small increments, click the scroll arrow that points in the direction you want to pan. To pan in larger increments, click the control shaft, between the scroll box and a scroll arrow. To pan by a custom increment, drag the scroll box in the direction you want to pan.

## LiveView Icons

It is in the LiveView window where you see your designs come to life! The default view is Plan Full View. When you load Punch! AS3000, this is the view you will see. With the 3D Quarter View option, use most of your window for drawing, yet be able to view your design in 3D. For a full explanation see the chapter titled “Working with LiveView”, which begins on page 127.



When you want to focus primarily on your 2D actions while maintaining a clear view of the 3D design, select Split Plan/3D View. Then, when you’re ready to add materials and colors to your Dream Home it will be easier in the 3D Full View mode.

## Properties Bar

You can easily modify features you have previously drawn by selecting them and editing their properties on the Properties Bar. You can even set the Properties Bar to automatically display when a feature is selected by clicking Auto Activate.

## Preview Bars

You can click and drag objects, templates, materials, colors and so on from their Preview Bars onto your plan. The Preview Bar changes to reflect your selection. For instance, if you click the Plant Bar, plant options will be displayed.

Clicking one of the buttons on the PowerTool bar launches one of the associated Punch! AS3000 applications.

- Launch Framing Editor. To learn more about Framing Editor, see the chapter titled “Framing Editor”, which begins on page 187.
- Launch Estimator. To learn more about Home Estimator, see the chapter titled “Estimator”, which begins on page 155.
- Launch Elevation Editor. To learn more about Elevation Editor, see the chapter titled “Elevation Editor”, which begins on page 197.

All PowerTools launch in this same fashion, whether they were written by Punch! Software, LLC or by a third-party developer.



# ***A Quick Tour***

To get the most benefit from Punch! Home Design Architectural Series 3000, you should take a minute to become familiar with some of its basic concepts. This chapter describes a few settings you should know, as well as some of the terms used throughout this guide.

Punch! Home Design Architectural Series 3000 is not just one software application, but several applications that can be used together. Once you've mastered Punch! AS3000, additional tools are available to customize your home plans: Home Estimator, Cabinet Wizard, PhotoView, RealModel and 3D Custom Workshop. Information on the use of all these tools can be found in this User's Manual.

With Punch! AS3000 you can set a precise drawing scale, define units of measurement and set the reference grid. There are also many performance settings you can apply to optimize drawing speed and 3D viewing.

## About This Guide

The text and graphics in this guide are tailored to help you find the information you need quickly and get the most out of Punch! AS3000. Each section of this guide is divided into a series of step-by-step instructions, making it easy for you to scan a page to find exactly what you need. You can also refer to the index for additional topics on the same subject, if necessary.

Instructions for installing and using Microsoft Windows do not appear in this guide. If you're uncomfortable with your knowledge of Windows or with the concepts associated with a user interface object, you should review Windows online Help before attempting any serious work with Punch! AS3000.

## Basic Terms

The following is a list of terms used throughout this guide. Take a moment to familiarize yourself with the language used in this guide and to reinforce your understanding of basic terminology.

### Click

Pressing and releasing the left mouse button once.

### Right-click

Pressing and releasing the right mouse button once.

### Double-click

Pressing and releasing the left mouse button twice.

### Click and drag

Pressing the left mouse button, holding it down and moving the mouse simultaneously.

### Drag-and-drop

Clicking to select an item, holding down the mouse button, then dragging and releasing.




### Scroll

Using the scroll bars on the sides of the application window by clicking the slider box, holding down the mouse button and dragging.

## Graphic Cues

This guide uses several types of graphic elements. Some show the window or a dialog box that will appear during an operation. When this type of graphic illustration is used, every effort is made to show the element exactly as it is displayed on the window.

### Graphic Cues Used in this Guide


Convention	Meaning
	mouse click that selects a point—the number, when present, specifies the mouse click's position in a series of clicks
	click and drag operation—beginning of arrow indicates where to start; end of arrow indicates where to stop
	a right mouse click—the number, when present, specifies the mouse click's position in a series of clicks

## Changing the Lot Size

With Punch! AS3000 you can define a lot size that matches your physical lot up to a maximum of 500 x 500 feet. The default lot size is 200 x 200 feet. For more information on matching your lot if it is not rectangular, see “Defining the Property Line”, which begins on page 100.

### To set the lot size

- 1 On the Design menu, click Lot Size or press CTRL+L. The Lot Size dialog box is displayed.

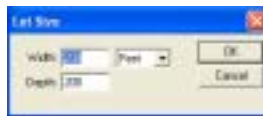

- 2 Type the new lot size in the dialog box, then click OK. The lot is altered
- 3 (optional) Click to select meters if you want to use metric measurements.

## Setting the Scale

Scale is the ratio between real-world size of objects and items in your drawing and their size when printed.

The default drawing scale is 1/4" = 1', meaning that 1/4" on your drawing plan equals one foot in real-world size. You can customize scale settings at any time to suit your needs, as well as print your drawing to scale.

### To set the drawing scale

- 1 On the Design menu, click Plan Scale. The Plan Scale dialog box is displayed.



- 2 Click a new scale setting, then click OK. The new scale is applied to your plan drawing.

## Setting Unit of Measurement

You can set units of measurement in Punch! AS3000 by selecting either English measurements in feet and inches or Metric measurements in meters and centimeters.

### To set the unit of measurement

- 1 On the Design menu, click Unit of Measure. The Unit of Measure dialog box is displayed.
- 2 Click either English or Metric, then click OK. The unit of measurement you selected is applied.



## Using the Grid

With Punch! AS3000 you can set specific grid properties that aid in drawing your home plan. You can set points based on the reference grid which is useful when you want to make sure certain points are specified precisely.

Grid settings have a direct impact on the ease of aligning objects, snapping objects to the grid and so on. When using the Snap to Grid feature, items that are dragged and dropped on the design window are automatically snapped, or placed, to align with the current grid. By default, Snap to Grid is turned on.

You can customize grid settings by selecting grid spacing, grid style and whether the grid is hidden from view or displayed.

Grid properties can also be set by accessing the right-click menu with nothing selected.

### To define Snap to Grid settings

- 1 On the Options menu, click Grid Properties or right-click on your design window and click Grid Properties on the pop-up menu that is displayed. The Grid Properties dialog box is displayed.



- 2 On the Grid Spacing dialog box, type new measurements into the Snap Grid section, then click OK. Items you draw or drag-and-drop into the design window will now snap to the measurements you defined.

**Note:** Initially, the grid is set at 12 inches, making it easy to visualize each plan square as exactly one square foot, but can be customized to meet your particular design needs.

**Note:** Snap settings can be set as low as 0.10 inch (English), 0.002 m (Metric) and still show visible movement along the grid. Snap settings can be set as high as 500 inches (English), 12.70 m (Metric).

### To select grid spacing

- 1 On the Options menu, click Grid Properties or right-click on your design window and click Grid Properties on the pop-up menu that is displayed. The Grid Properties dialog box is displayed.
- 2 Type new horizontal and vertical measurements in the Grid Dots/Lines section of the Grid Spacing page, then click OK. The new grid spacing measurements are applied.




is disabled. To enable Snap to Grid, simply recheck the menu item.

### To display the grid

- On the Options menu, click to check Grid Visible or right-click on your design window and click Grid Visible on the pop-up menu that is displayed. The grid is displayed on the design window.


### To change the grid style

- 1 On the Options menu, click Grid Properties or right-click on your design window and click Grid Properties on the pop-up menu that is displayed. The Grid Properties dialog box is displayed.
- 2 Click the Grid Style page tab.
- 3 Click either Grid Dots or Grid Lines, then click OK. The new grid style is applied.

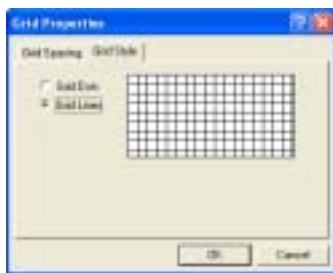

**Note:** Grid Dots/Lines can be set to as low as 1 inch (English), 0.02 m (Metric) and still be viewable. Grid Dots/Lines can be set as high as 500 inches (English), 12.70 m (Metric).

### To move objects/features along the grid

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the object or feature you want to move.
- 3 Using the arrow keys on your keyboard, move the object or feature into position.

**Note:** Each time you press an arrow key, the object or feature will move one increment that you have set in “To define Snap to Grid settings” on page 13.

### To turn off Snap to Grid

- On the Options menu, click to uncheck Snap to Grid, press CTRL+R, or right-click on your design window and click Snap to Grid on the pop-up menu. The feature

# ***File Management***

When you start Punch! AS3000, a new blank drawing file is displayed. If you are returning to work on an existing drawing, you must open it, or display it on the screen. Opening a file involves clicking Open on the File menu and specifying the name of the file you want to open. Once you have opened a file, you can edit, import, export, print, view and save it.

You can have more than one file open at a time. The exact number of files you can have open depends on the amount of memory in your system and the complexity of the home plan file. When you open a file, Punch! AS3000 displays it in a new window.

The changes you make to a plan drawing occur only in your computer's memory until you save them. To preserve a drawing for later use, you must save it to a file. If you want to save a drawing using its current name or if you want to save a new, untitled drawing, use Save. If you want to save a drawing using a new name, use Save As.

At any point during the design process you can import objects created in 3D Custom Workshop or cabinets from Cabinet Wizard. In addition, you can export a 3D LiveView rendering as a BMP file or to Virtual Reality Modeling Language (VRML).

## Opening a File

Opening a file copies the data it contains into memory, making it available for you to edit or print the plan drawing.

### To open an existing file

- 1 On the File menu, click Open. The Open dialog box is displayed.
- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK.

### To see a list of recently opened files

- 1 On the File menu, highlight Open Recent. The Open Recent listing is displayed.
- 2 On the Open Recent pop-up, click the file you want to open. The file loads into memory.

## Saving a File

When you open a file, Punch! AS3000 copies the file to your computer's memory. As you work, you modify the copy stored in memory. Any system failure or loss of power destroys that copy. To save your work permanently, you must save it to a file on a disk. A good rule of thumb is to save every 15 minutes or after you've completed any work you wouldn't want to redo.

When you click the Save command, Punch! AS3000 saves the active drawing using the name and location you last gave it. You can create more than one version of a drawing or save copies on another disk for safekeeping. You can save each version under a different name, or you can save them under the same name in different folders or on different disks.

### To save an existing file

- On the File menu, click Save or right-click, then click Save on the pop-up menu that is displayed or press Ctrl+S.

### To save a new, unnamed file

- 1 On the File menu, click Save As. The Save As dialog box is displayed.
- 2 Type a file name in the File Name text box. Punch! AS3000 automatically adds the PRO extension, unless you specify another extension.

- 3 Click OK.

### To save a file to a different name, drive, or folder

- 1 On the File menu, click Save As. The Save As dialog box is displayed.
- 2 If you want to save the drawing under another name, type a name in the File Name text box.
- 3 If you want to save the drawing to a different drive or folder, click a different drive and folder, or type the complete path in the File Name text box.
- 4 Click OK.

## Closing a File

When you finish working with a file, close it to remove the window from the screen and to free up your computer's memory. When you are done working in Punch! AS3000, close all your files and exit the program.

### To close a file

- On the File menu, click Close. If you have unsaved changes in your plan drawing, Punch! AS3000 prompts you to save them before it closes the file.

### To close all open files and exit Punch! AS3000

- On the File menu, click Exit. If any open drawings have unsaved changes, Punch! AS3000 prompts you to save them before it closes their files.

## Accessing the Pre-Drawn Homeplans

Punch! AS3000 includes a wide variety of homeplans for you to alter. The included homeplans are located in the directory where you installed the program, in a subdirectory called "Plans".

### To open a pre-drawn homeplan

- 1 On the file menu, click Open.
- 2 Navigate to the directory where Punch! AS3000 is installed.
- 3 Double-click the Plans subdirectory. The subdirectory opens.
- 4 Click the plan you want to open. Click OK.

**Note:** All plans included with Punch! AS3000 are the copyright of Wolfgang Trost Architects. The plans and 3D computer images are for conceptual purposes only. You must have any plans provided in, or generated by, Punch! Home Design Architectural Series 3000 checked by a licensed architect before you build. Punch Software LLC and Wolfgang Trost Architects are not liable for errors, omissions or any other deficiencies in these conceptual plans. Complete sets of building plans for these homes are available by contacting Wolfgang Trost Architects at [www.wolfgangtrost.com](http://www.wolfgangtrost.com)

## Importing Files

Punch! Home Design Architectural Series 3000 is 22 programs in one. All of these programs integrate seamlessly; objects created with Punch! 3D Custom Workshop and cabinets designed in Punch! Cabinet Wizard are available for import into your floor plan.

### To import a 3D Custom Workshop object

- 1 On the File menu, click Import>Punch! 3D Custom Workshop Object. The Import Punch! 3D Object dialog box is displayed.
- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK. The object is placed in the center of your 2D design.

**Note:** Double-click the object to re-open it in 3D Custom Workshop.

### To import a Cabinet Wizard object

- 1 On the File menu, click Import>Punch! Cabinet Wizard Object. The Import Punch! Cabinet Wizard Object dialog box is displayed.
- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK. The cabinet is placed in the center of your 2D design.

**Note:** Double-click the cabinet to re-open it in Cabinet Wizard.

## Exporting Files

By exporting your design to VRML, it becomes available for viewing with a VRML viewer or through a web browser (provided an appropriate plug-in is installed). These helper applications and plug-ins are available as free downloads on the Internet.

You can also export a rendering to BMP format. Files can be exported in BMP format in Textured, Wire-Frame and ClearView modes. The exported file will appear just as your LiveView window does. Be sure to render your drawing in high-resolution before exporting. Size is also controlled by how your LiveView window appears, the larger the LiveView window, the larger the BMP file will be. For more information on controlling the LiveView environment, see “Working with LiveView”, which begins on page 127.

### To export to BMP

- 1 On the File menu, click Export>BMP. The Export BMP dialog box is displayed.
- 2 In the File Name text box, type a name. Punch! AS3000 automatically adds the BMP extension, then click OK.

**Note:** For instructions on printing the BMP file, see “Printing a 3D LiveView Rendering” on page 18.

### To export to VRML


- 1 On the File menu, click Export>3D VRML World.
- 2 In the File Name text box, type a name. Punch! AS3000 automatically adds the WRL extension, then click OK.

## Printing Floorplans

Punch! AS3000 prints using the current Windows printer drivers. You can, however, print using any installed printer. Using the Print dialog box you can specify a printer or plotter from those currently installed. You can print your drawing in color or in black and white; it can be printed to scale or you can print it all on one page, whatever you require. Follow these steps to print your 2D drawing.

### To print to fit page

- 1 On the File menu, click Print to Fit Page or press Ctrl+P. A Print Manager menu will ask if you want to print your drawing in color. Click Yes to print in color, click no to print in greyscale.

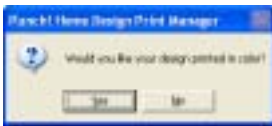

**Note:** Gridlines will print if they are visible when the drawing is printed.

- 2 The Print dialog box is displayed.



- 3 Click the printer you want to use.
- 4 (optional) Change the paper orientation and size.
- 5 Click OK.

### To print to scale

- 1 On the Design menu, click Plan Scale. The Plan Scale dialog box is displayed.



- 2 Click the radio button next to the scale you want to use. Click OK.

**Note:** Gridlines will print if they are visible when the drawing is printed.

- 3 On the File menu, click Print to Scale. A Print Manager menu will ask if you want to print your drawing in color. Click Yes to print in color, click no to print in greyscale.
- 4 The Print dialog box is displayed.
- 5 Click the printer you want to use.
- 6 (optional) Change the paper orientation and size.
- 7 Click OK.

## Printing a 3D LiveView Rendering

Punch! AS3000 streamlines the process used to print the 3D LiveView images. With just a couple of clicks, you can print beautiful, full-color renderings of your design.

### To print a 3D LiveView rendering

- 1 On the File menu, click Print 3D LiveView, then select the quality needed. The print dialog box is displayed.
- 2 Click the printer you want to use.
- 3 (optional) Change the paper orientation and size.
- 4 Click OK.



# ***Snaps and Annotations***

Punch! Home Design Architectural Series 3000's powerful Snaps Toolbar has many tools that make precision placement easier. On the Snaps Toolbar there are a wide variety of precision drawing aids that will help in exact placement of walls, doors, windows and so on.

Often, drawing a plan to scale is not enough to convey precise measurements. In such cases, you must notate the measurements using manual dimension notes. Punch! AS3000, by default, automatically displays dimensions as you draw. This makes it easy to create accurate drawings from the start.

In addition to the Virtual Ruler you can use a variety of dimension tools available in Punch! AS3000 to measure items that are not automatically dimensioned. You can also obtain total square footage measurements for each floor of your home design with the Square Footage menu item.

With the text tools you can add either straight or angled text to any area of your drawing. This feature is useful if you'd like to name your home plan or add your address to the final drawing, for instance. You can select from any font installed on your computer, as well as select style and size.

This chapter describes the dimension and measurement tools in Punch! AS3000 and how to add text to your drawing.

## Snap to Endpoint

Punch! AS3000 gives you the power of snaps. With snaps, you can define exactly what distance interior walls are placed from other walls or begin exactly at the end of the wall when drawing a roof section. You can move through the Snaps Toolbar with the Tab key. Each time you press Tab, the next Snap Tool is activated, Shift-Tab reverses the process.



The following examples show a few ways that Snaps will help you during the design process; each Snap Tool works in concert with many other tools in Punch! AS3000.


### Accessing the Snaps toolbar

- 1 Click the Snaps On Tool. The Snaps toolbar is displayed.




### To snap a wall from the end of another wall


- 1 On the Floor Plan tab, click the Interior Wall Tool. 
- 2 On the Snaps toolbar, click the Snap to Endpoint Tool or press TAB. 
- 3 Click a wall on the design window. The wall will “snap to” the endpoint nearest where you clicked.

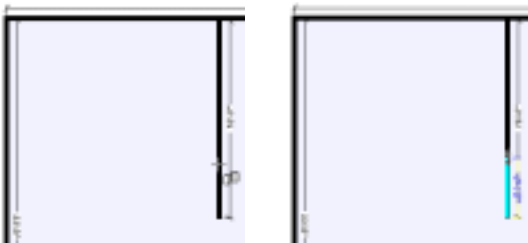

- 4 Hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.

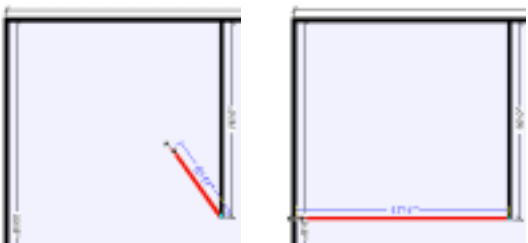

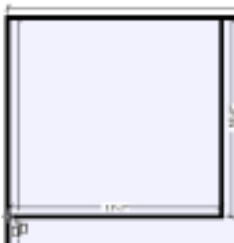

- 5 Release the mouse button when the wall length you want is reached.




**Note:** Each Snap Tool defaults back to “No Snap” after it is used; double-click the Snap Tool to lock it in active mode. If you have locked a Snap Tool and use the Tab key to activate another tool, it will be also be locked as active. To unlock it, click “No Snap”.


**Note:** Walls are drawn from a centerline. When moving or otherwise manipulating them, you are always working from the centerline and snapping to them will do the same.

### To snap a roof


- 1 On the Roofing Plan tab, click one of the Roof Tools. The Preview Bar displays the pitches that are available. 
- 2 Click the roof pitch to select it.
- 3 On the Snaps toolbar, click the Snap to Endpoint Tool or press TAB. 
- 4 Click a wall on the design window. The roof will “snap to” the endpoint nearest where you clicked.

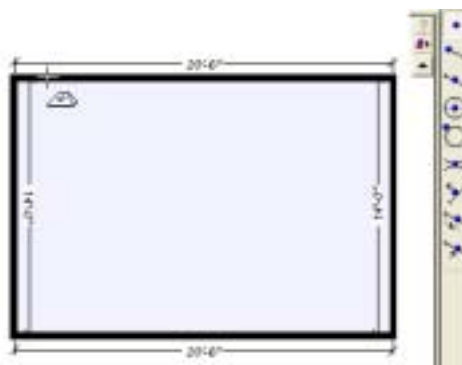

- 5 Hold down the mouse button and drag until the cursor touches another wall.

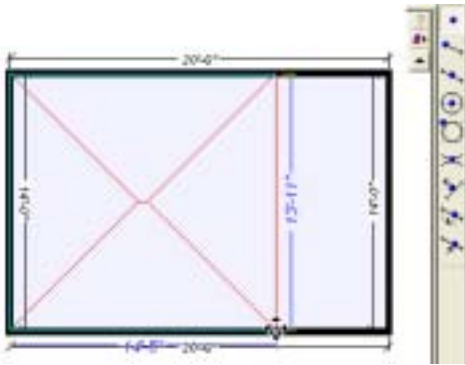

- Press Tab to re-activate the Snap to Endpoint Tool. The roof will automatically extend to cover the entire perimeter.

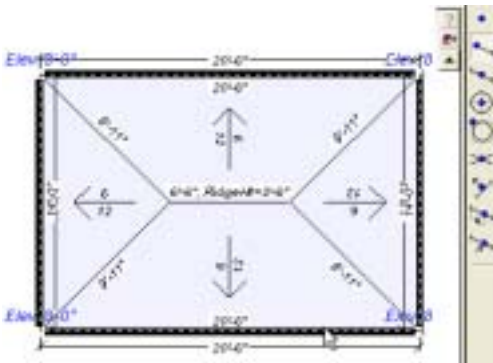




- Release the mouse button.

## Snap to Segment Centerpoint


Snap to Segment Centerpoint will be useful when drawing walls, placing doors or windows, and so on. You can move through the Snaps Toolbar with the Tab key. Each time you press Tab, the next Snap Tool is activated, Shift-Tab reverses the process.

### To snap a wall from the center of another wall

- On the Floor Plan tab, click the Interior Wall Tool. 
- On the Snaps toolbar, click the Snap to Segment Centerpoint Tool or press TAB to move through the tools on the Snaps toolbar. 
- Click a wall on the design window. The wall will “snap to” the centerpoint of the wall.

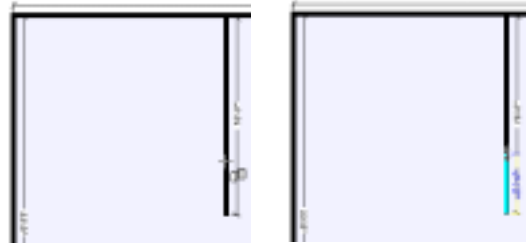

- Hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.

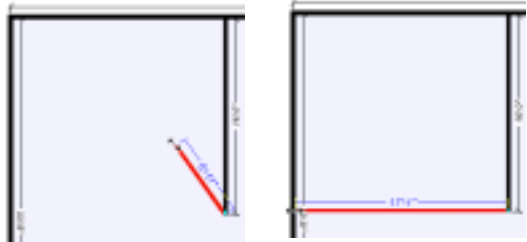



- Release the mouse button when the wall length you want is reached.



**Note:** Each Snap Tool defaults back to “No Snap” after it is used; double-clicking the Snap Tool will lock it in active mode. If you have locked a Snap Tool and use the Tab key to activate another tool, it will be also be locked as active. To unlock it, click “No Snap”.

**To snap a window in the center of a wall**

- 1 On the Floor Plan tab, click the Window Tool. The Preview Bar displays the styles that are available. 
- 2 On the Snaps toolbar, click the Snap to Segment Centerpoint Tool or press TAB to move through the tools on the Snaps toolbar. 



- 3 Click a wall on the design window. The window will “snap to” the centerpoint of the wall.






- 4 (optional) Customize the window properties as shown in the section “To add a window” on page 56.

**Snap to Object Center**


Snap to Object Center will make placing items in the center of rooms easy. Details down to placing a coffee table exactly in the center of the floor rug just take a couple of clicks.

**To snap a stairway to the center of a room**


- 1 On the Floor Plan tab, click the Stairway Tool. 
- 2 On the Snaps toolbar, click the Snap to Object Centerpoint Tool or press TAB to move through the tools on the Snaps toolbar. 

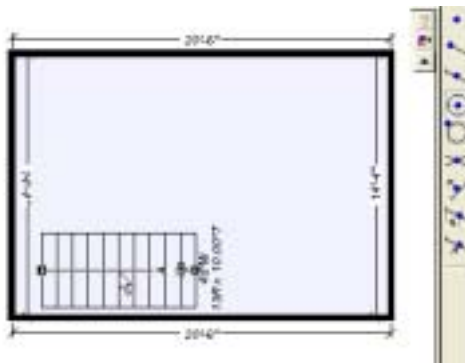


- 3 Click a stairway on the design window. The cursor will “snap to” the centerpoint of the stairway.

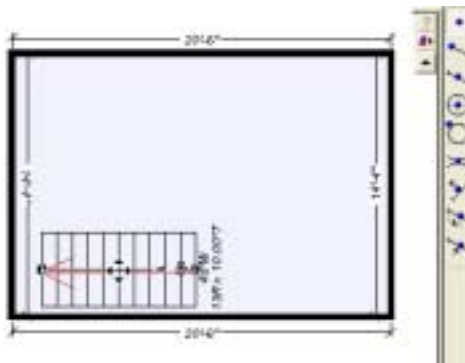

- 4 Hold down the mouse button and drag until the cursor touches the outside perimeter of the room. Notice that a red arrow is displayed showing the centerline of the stairway. The stairway will automatically move to the center of the room when the cursor touches the perimeter.

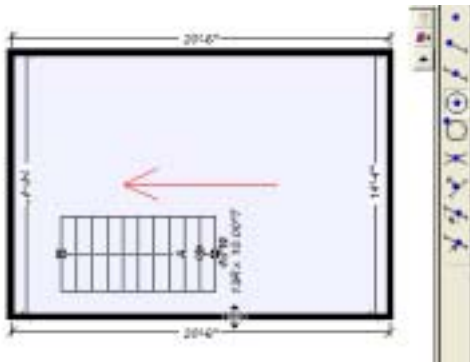


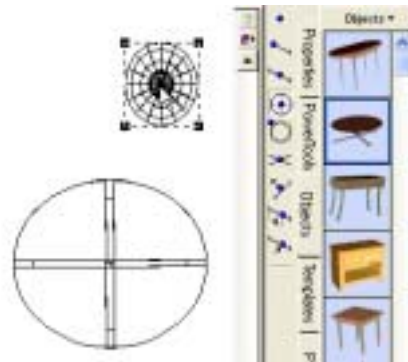
5 Release the mouse button.

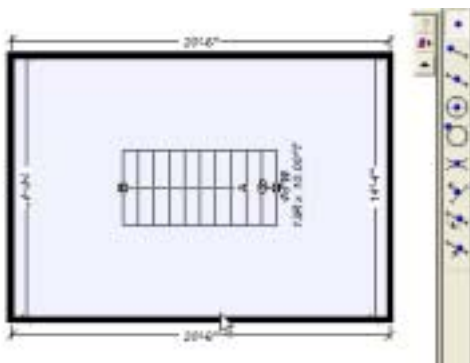

**Note:** Each Snap Tool defaults back to “No Snap” after it is used; double-clicking the Snap Tool will lock it in active mode. If you have locked a Snap Tool and use the Tab key to activate another tool, it will be also be locked as active. To unlock it, click “No Snap”.


**To snap a lamp to the center of a table**

- 1 Click the Object Tab. The Preview Bar displays furnishing objects.
- 2 Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click another object library.
- 3 Scroll to view the available objects. Drag and drop a table and a lamp onto your design window.
- 4 On the Snaps toolbar, click the Snap to Object Centerpoint Tool or press TAB to move through the tools on Snaps toolbar. 




5 Click the lamp on the design window. The cursor will “snap to” the centerpoint of the lamp.


6 Press TAB to move through the tools on the Snaps toolbar until the Snap to Object Centerpoint is again active.

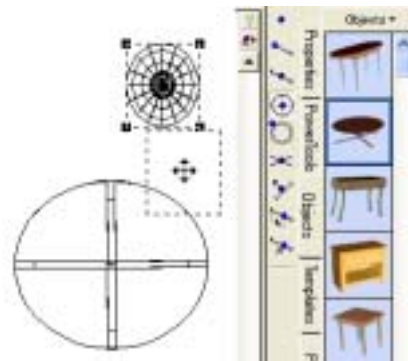

7 Hold down the mouse button and drag until the cursor touches the outside perimeter of the table.

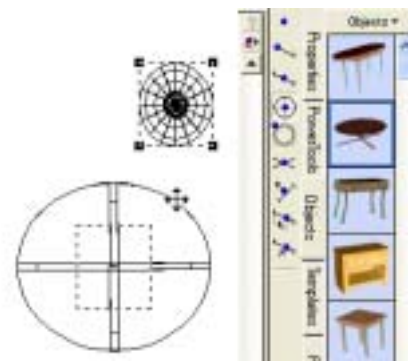

**Note:** The lamp will automatically move to the center of the table when the cursor touches the perimeter of the table.

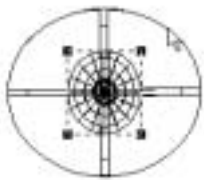


8 Release the mouse button.


**Note:** For more information on placing objects, see “Objects Preview Bar”, which begins on page 136.

### Snap to Object Corner

Snap to Object Corner makes it easy to grab an object or other element by its corner and move it precisely into position. You can use any snap tool in conjunction with other snaps to move features and objects into the perfect position, the first time.

#### To snap a planter to the corner of a deck

- 1 Click the Object Tab. The Preview Bar displays furnishing objects.
- 2 Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click another object library.
- 3 Scroll to view the available objects. Drag and drop a planter onto your design window.
- 4 On the Snaps toolbar, click the Snap to Object Cornerpoint Tool or press TAB to move through the tools on Snaps toolbar. 

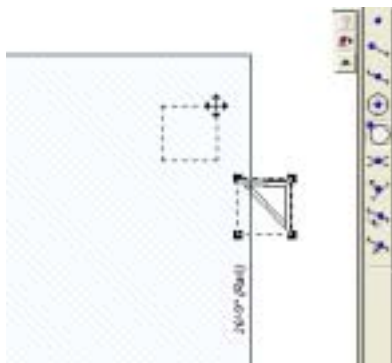

- 5 Click the planter on the design window. When you drag the planter the cursor will “snap to” the cornerpoint.
- 6 Press TAB to move through the tools on Snaps toolbar until the Snap to Object Cornerpoint is active again.



- 7 Hold down the mouse button and drag until the cursor touches the outside perimeter of the deck.



**Note:** The planter will automatically move to the corner of the deck when the cursor touches the perimeter of the deck.


8 Release the mouse button.


**Note:** For more information on placing objects, see “Objects Preview Bar”, which begins on page 136.

### Snap to Intersection

Using the Snap to Intersection control, you can position walls, objects and other features where you want them the first time.

#### To snap a wall exactly opposite another wall

- 1 On the Floor Plan tab, click the Interior Wall Tool. 

- On the Snaps toolbar, click the Snap to Intersection Tool or press TAB to move through the tools on the Snaps toolbar. 
- Click a wall on the design window. The wall will “snap to” the endpoint nearest where you clicked.



- Hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.



- Release the mouse button when the wall length you want is reached.



**Note:** Each Snap Tool defaults back to “No Snap” after it is used; double-clicking the Snap Tool will lock it in active mode. If you have locked a Snap Tool and use the Tab key to activate another tool, it will be also be locked as active.

**Note:** Walls are drawn from a centerline. When manipulating them, you are always working from the centerline and snapping to them will do the same.


## Snap to Perpendicular

Snap to Perpendicular makes it easy to add a CAD line perpendicular to a circle or oval. For instance, if you want to draw a pathway at a perpendicular angle to a curved retaining wall.

### To snap a perpendicular line

- On the Detail Plan tab, click the Line Tool. 
- On the Snaps toolbar, click the Snap to Perpendicular Tool or press TAB to move through the tools on Snaps toolbar. 

- Click the perimeter of a circle or oval drawn previously. The line will “snap to” an angle perpendicular to the edge.

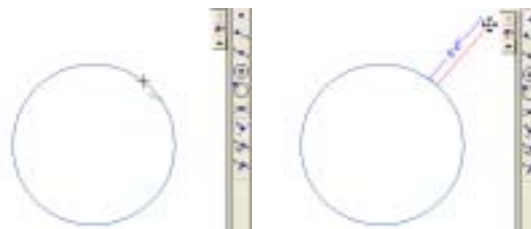




- Hold down the mouse button and drag. Notice that the line follows the pointer and automatically displays dimensions.
- Release the mouse button when the length you want is reached.


## Snap to Segment-Offset

You can easily place walls, objects, and so on, where you want them the first time with Snap to Segment-Offset.

### To snap a planter 18" from the corner of a deck


- On the Floor Plan Tab, click the Object Tool. 
- Scroll to view the available objects. Drag and drop a planter onto your design window.
- On the Snaps toolbar, click the Snap to Segment-Offset Tool. The Snap to Segment-Offset dialog box is displayed. 

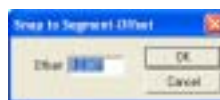

- Type 18 in the text box. Click OK.
- On the Snaps toolbar, click the Snap to Object Cornerpoint Tool or press TAB to move through the tools on the Snaps toolbar. 



- 6 Click the planter on the design window. The cursor will “snap to” the cornerpoint of the planter.
- 7 Press TAB to move through the tools on the Snaps toolbar until the Snap to Segment-Offset tool is active.

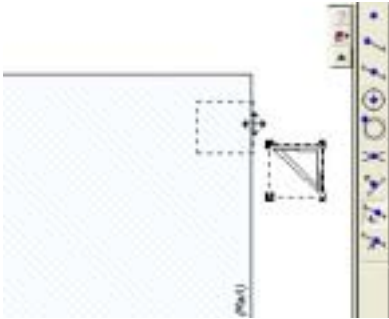

- 8 Hold down the mouse button and drag until the cursor touches the outside perimeter of the deck.



**Note:** When the cursor touches the deck perimeter, the planter will automatically move to the distance from the corner of the deck specified in Step 4.


- 9 Release the mouse button.

**Note:** Each Snap Tool defaults back to “No Snap” after it is used; double-clicking the Snap Tool will lock it in active mode. If you have locked a Snap Tool and use the Tab key to activate another tool, it will be also be locked as active.


## Dimensioning


Punch! AS3000 automatically displays dimensions as you draw, making it easy to precisely place walls, doors and other items in your plan drawing. The powerful Dimension Wall tool will be especially useful to add interactive dimensions between walls, where they are not automatically generated. Dimensions drawn with the Dimension Wall tool are automatically updated when either wall is moved. You’ll find this tool extremely useful when measuring between the main house and the walls of other buildings, like a garden shed or playhouse. In some instances, you might want to print your plan drawing without dimension annotation. You have the option of turning off automatic dimensioning if you don’t want it displayed on the drawing page or as you draw.

### To use the wall-spacing dimension tool

- 1 On the Annotation toolbar, click the Dimension Wall Tool. 
- 2 Click a wall on the design window to define the starting point, hold down the mouse button and drag to the second wall.
- 3 Release the mouse button to set the measurement.



### To use the offset dimension tool

- 1 On the Annotation toolbar, click the Offset Dimension Tool. 
- 2 Click on the design window to define the starting point, hold down the mouse button and drag to the ending point of the measurement you require.

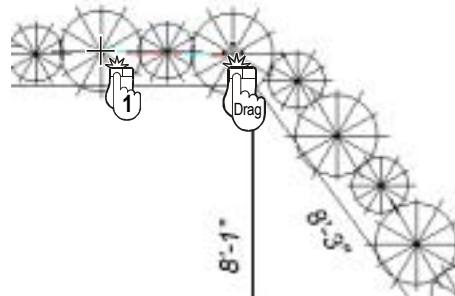





- 3 Release the mouse button.
- 4 Move the mouse in the direction you want to offset the dimension.

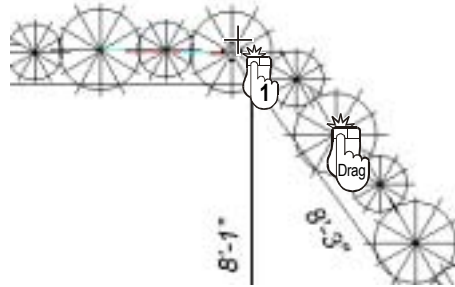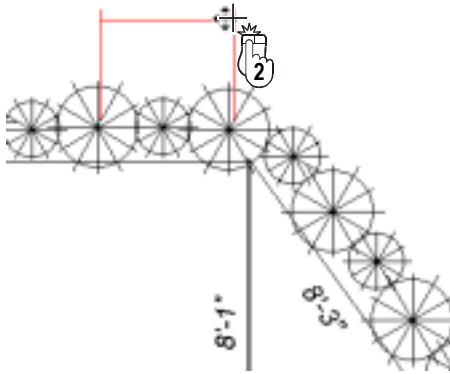


- 3 Release the mouse button.
- 4 Move the mouse in the direction you want to offset the dimension.


- 5 Click to end.

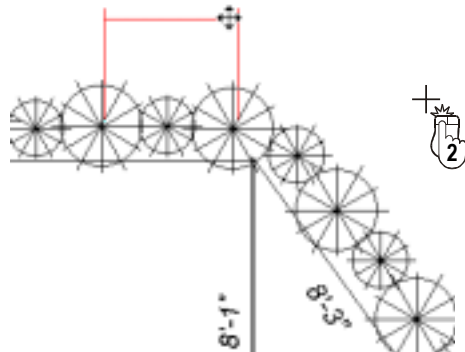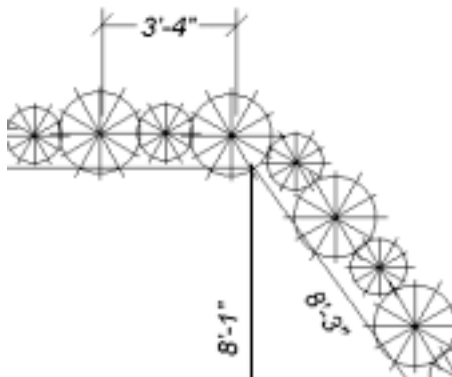


- 5 Click to end.

**To use the length dimension tool**


- 1 On the Annotation toolbar, click the Length Dimension Tool. 
- 2 Click on the design window to define the starting point, hold down the mouse button and drag to the ending point of the measurement you require.

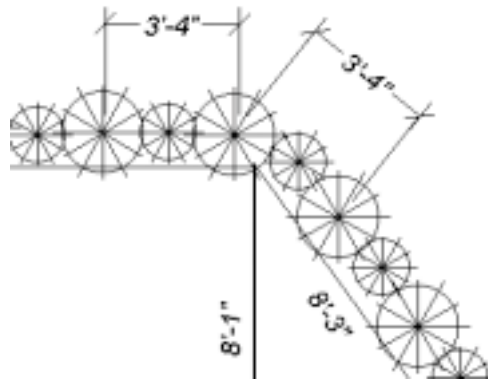


**To use the zero-offset dimension tool**

- 1 On the Annotation toolbar, click the Zero-Offset Dimension Tool. 
- 2 Click on the design window to define the starting point, hold down the mouse button and drag to the ending point of the measurement you require.
- 3 Release the mouse button to set the measurement.

**To use the diameter dimension tool**

- 1 On the Annotation toolbar, click the Diameter Dimension Tool. 
- 2 Click one edge of a circle drawn on the Details Tab to define the starting point. The dimension will automatically snap to the opposite edge of the circle.
- 3 (optional) Move the mouse clockwise or counter-clockwise to position the diameter dimension before releasing the mouse button.


**To use the leader dimension tool**

- 1 On the Annotation toolbar, click the Leader Dimension Tool. 
- 2 Click on the design window to define the starting point, hold down the mouse button and drag to draw the first segment of the dimension.
- 3 Release the mouse button and move the mouse in the direction you want the second segment to be placed.
- 4 Click to end.


**To turn off automatic dimensioning**

- On the Options menu, click to uncheck Automatic Dimensioning.

OR

- At the bottom of the window, click the Dimension button, then click to uncheck Automatic Dimensioning on the pop-up menu that is displayed. 

**To hide window and door dimensions**

- At the bottom of the window, click the Dimension button, then click to uncheck Window/Door callouts on the pop-up menu that is displayed. 

**To change the end point style**

- 1 On the Options menu, click Dimension Properties. The Dimension Properties menu is displayed.



- 2 Click to select the end point style you want to use, then click OK.


**To remove custom dimensions**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Press DELETE.


**Using the Virtual Ruler**

The Virtual Ruler is a handy feature for measuring items in your home plan that are not automatically dimensioned. You can “undock” the ruler at any time, leaving it active, or hide it from view with one mouse click. The Virtual Ruler is an easy way to measure at an angle, too.

**To measure using the Virtual Ruler**

- 1 Click the Virtual Ruler button at the bottom of the design window. The Virtual Ruler is displayed on the drawing page. 
- 2 Click one of the black circles on the ruler edges and drag in the direction you want to measure. The measurement is displayed in the center of the Virtual Ruler.
- 3 (optional) Click the center of the Virtual Ruler and drag it to a new location on the design window.

**To hide the Virtual Ruler**

- Click the Virtual Ruler button at the bottom of the design window. The Virtual Ruler is “docked.” 

**Calculating Square Footage**

Punch! AS3000 can automatically calculate square footage of each floor of your home plan. This feature makes it easy to figure how much carpet you’ll need to cover the first floor, for instance, or simply estimate your overall home size. If square footage is incorrect, check to make sure the exterior perimeter is intact. For more information, see “Defining the Foundation Perimeter”, which begins on page 42.

**To calculate floor square footage**

- At the bottom of the window, click the Dimension button, then click First Floor Square Footage (or 


Second or Third floor). Punch! AS3000 calculates the square footage and the total is displayed on the status bar.


**Note:** The square footage calculation is based on wall centerline measurements.

## Adding Text

Use text to add information to your drawing. For example, you might add text to annotate rooms, specify a home address, the date the drawing was created or a specific feature in your plan. Punch! AS3000 gives you the flexibility to place text anywhere in your plan drawing, using different formatting techniques for each text instance. Text you place in your drawing is displayed on all 2D printed output.

### To place text in your drawing

- 1 On the Annotation toolbar, click the Multi-Line Text tool. 
- 2 Click the area where you want to place text on the drawing page. An edit text dialog box is displayed.

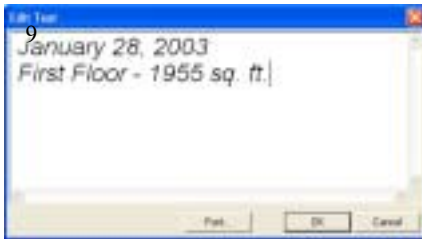


- 3 Type the annotation in the text box. Click OK to end edit mode.
- 4 (optional) Click Font, the Font dialog box is displayed. Choose the Font, Style and Size, then click OK.



### To change alignment of multi-line text

- 1 Using the selection tool, click the text you want to change.
- 2 Click Center on the Properties Bar.

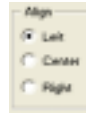

- 3 (optional) Click Right on the Properties Bar.


### To edit text

- Double-click the text you want to edit.
- or

- Click the text you want to edit, then click Edit on the Properties Bar.



### To place text at an angle

- 1 On the Annotation toolbar, click the Rotated Text tool. 
- 2 Click the area where you want to place text on the drawing page. An edit text dialog box is displayed.



- 3 Type the notation in the text box.
- 4 Click the radio button next to the angle you want or enter a custom angle in the dialog box.
- 5 Click OK to end edit mode.
- 6 (optional) Click Font, the Font dialog box is displayed. Choose the Font, Style and Size, then click OK.



**To change formatting of existing text**

- 1 Using the selection tool, click the text you want to change. Selection handles appear around the text.
- 2 On the Options menu, click Text or double-click the selected text. The Font dialog box is displayed.
- 3 To change the text font, click a new font on the Font list.
- 4 To change the text style, click a new style on the Font style list.
- 5 To change the text size, click a new size on the Size list.
- 6 Click OK.

# Controlling Views

Punch! AS3000 provides many options for looking at your home plan onscreen. You can display several windows, each containing a different view of your plan. This gives you the flexibility to view your drawing as a 2D plan, as a 2D plan with a corresponding 3D view or using only Punch! LiveView.

When viewing your 2D home plan, you can magnify the view by zooming in, reduce the view by zooming out, use the Viewpoint tool to display a specific area of your drawing or pan the view in any direction.

3D viewing provides many options, from walking through the home plan to flying around the plan or viewing the framing or completion phase of your project. You can adjust 3D display settings using a variety of viewing features, including adding shadows, for a realistic effect, or adjusting the lighting intensity of the view. Finally, you can create a photo-realistic view of your home plan.

In this chapter, you'll learn about the numerous commands designed to let you view your home in both 2D and 3D.


## Viewing the 2D Plan

When initially designing your home plan, you will probably want to view the 2D plan view only. Once completed, you can view your plan in a combination of 2D and 3D or in 3D only. In addition, Punch! AS3000 organizes your floorplan into layers which are each easily accessible with a single mouse click. For example, you can choose to view the deck plan with landscaping one moment, then quickly switch to view HVAC, electrical and plumbing. Any combination ... any time!


### To view the 2D plan only

- On the Window menu, click Plan Full View. The 2D plan view is displayed.

### To view all 2D floor plan views at once

- Click the Working Floor button at the left bottom of the design window, then click to check View All Floors. 

### To view the working floor only

- Click the Working Floor button at the left bottom of the design window, then click to check View Working Floor Only. 

### To view drawing layer combinations


- 1 Click a plan tab.
- 2 Click the arrow to the right of the tab label. A drop-down menu will appear.
- 3 Click the plan you want to view.
- 4 (optional) Repeat until the combination you want is reached.



## Zooming In and Out in 2D

You can get a closer look at an area or see a larger portion of your plan drawing by zooming in and out. By dragging over the drawing, the view enlarges or decreases dynamically. You can also set the zoom factor to obtain exact zoom precision. Once you've finished viewing your plan close-up, you can return to the previous, full view with one mouse click.


### To zoom in

- 1 On the Standard toolbar, click the Zoom button. 

- 2 Click on the design window and drag in an upward direction to zoom in.
- 3 Click on the design window and drag in a downward direction to zoom out.

**Note:** When the mouse is clicked, the location of the cursor will be centered on the design window.

 
### To zoom in using the wheel mouse

- 1 On the Standard toolbar, click the Zoom button. 
- 2 Click on the design window and use the mouse's wheel to zoom in and out.

**Note:** To access this feature using some older wheel mouse drivers, set the Scrolling Size to "None" in the Control Panel>Mouse>Mouse Properties>Buttons dialog box.

### To set the zoom factor

- 1 On the View menu, click Set Plan View Zoom. The Set Plan View Zoom dialog box is displayed.
- 2 Type a new zoom factor, then click OK.




### To reset the 2D plan view

- On the View menu, click Reset Plan View or press CTRL+E on your keyboard. Your plan is reset to the original, default view.

## Panning Across the 2D Drawing

You can move the design window to see portions of the plan which are outside the current view by panning. Panning also makes it easy to slowly view areas of your drawing piece-by-piece.

### To pan in any direction


- 1 On the Standard toolbar, click the Pan button. The pointer changes to reflect Pan mode. 
- 2 Click on the design window and drag in the direction you want to view. The view changes dynamically as you move the mouse.

## Using Viewpoints

Using the Viewpoint tool, you can select a specific area in your 2D plan drawing and view it in 3D. This is useful, for example, if you want to view a specific wall inside your

home. Simply click the area you want to view in the 2D plan window and Punch! AS3000 launches the LiveView window displaying the area you selected in 3D.


### To select an area in the 2D plan and view it in 3D

- 1 On the Standard toolbar, click the Viewpoint Tool.  A 3D LiveView window opens.
- 2 Click the area in the 2D plan window that you want to view. Punch! AS3000 generates the 3D view and it is displayed in the LiveView window.
- 3 (optional) To change the LiveView dynamically, click the viewpoint arrow in the 2D plan view, hold down the mouse button and drag.
- 4 (optional) To close the LiveView window and return to the 2D plan view, click Plan Full View on the Window menu or click the Plan Full View icon.

## Arranging 2D and 3D Windows


There are several ways to arrange 2D plan and 3D LiveView windows while you're working. You can split the window, displaying both views, view only the plan view, view only the 3D view or display the 3D view in a smaller window with the plan view. You are not limited to the four preset arrangements, you can resize and reposition the LiveView window to fit your work area. LiveView options are also available from the right-click plan options menu. For more information, see "Moving around in 3D", which begins on page 128.

### To display the 2D plan view only

- On the Window menu, click to check Plan Full View or click the Plan Full View icon. 





### To display the 2D plan view and a small 3D view

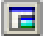- On the Window menu, click 3D Quarter View or click the 3D Quarter View icon. 





### To display a split 2D and 3D view

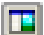- On the Window menu, click Split Plan/3D View or click the Split Plan Icon. 

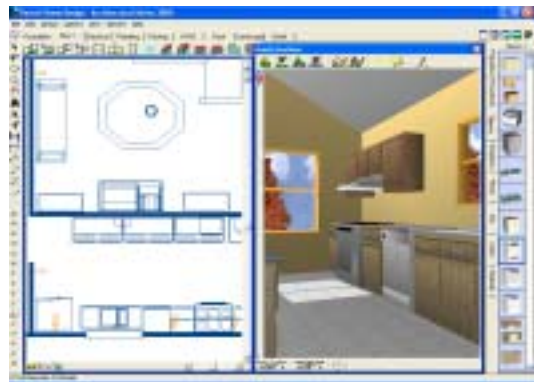

**To display a 3D view only**

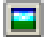- On the Window menu, click 3D Full View or click the 3D Full View icon. 

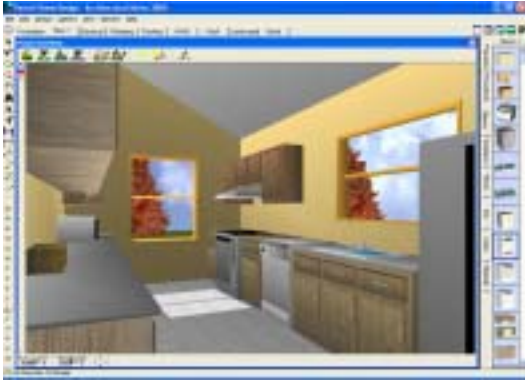



# ***Plan Tabs***

Punch! AS3000 utilizes a collection of layers which are accessible by clicking the tabs along the top and right side of the design window. Clicking a plan tab accesses a set of tools that you can use to design your floorplan, for example clicking the Plumbing Tab accesses sinks, toilets, hose bibs while clicking the Landscaping Tab accesses tools for edging, fencing, slope control, excavation and so on. Clicking a Content Bar accesses features like furniture objects, materials, colors and so on.


Once placed, each feature like a door, window, plant, shower, outlet and so on can be altered at any time. Click the feature and the Properties Toolbar is brought to the top (a default that can be changed) and displays the customizable properties of that feature.


You can further customize which plan layer or combination of plan layers you want to be active. In addition, you can make each plan layer a different color so you can tell at a glance which layer a specific feature is on. You can even move features to a different plan when necessary.

## Selecting a Plan Tab

Using the easily-accessible plan tabs, you can quickly access each tool set at any time.

### To select a plan tab

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the plan tab you want to use. The plan tab is selected and the tools available on that tab appear.

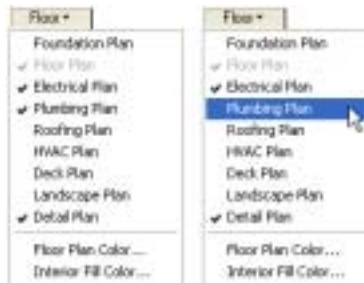


## Customizing Visible Plans

During the design of your floorplan, there may be times when you want certain layers, that by default are hidden, to be visible. For example, while working on your electrical plan, you may need to see where plumbing lines will be. Punch! AS3000 makes it easy to customize how you view your plan layers.

### To hide a plan layer from view

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the plan tab you want to use. The plan tab is selected and the tools available on that tab appear.
- 3 Click the arrow to the right of the plan name, then click the plan layer you want hidden.

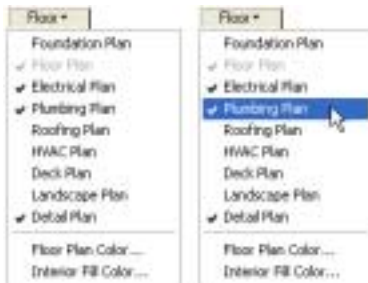

**Note:** Items on a hidden plan layer are not available during a Select All process and will not be altered with the other items and features in your drawing.

### To view a plan layer

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the plan tab you want to use. The plan tab is selected and the tools available on that tab appear.
- 3 Click the arrow to the right of the plan name, then click the plan layer you want to appear.

### To customize the color of plan layer

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the plan tab you want to customize. The plan tab is selected and the tools available on that tab appear.



- 3 Click the arrow to the right of the plan name, then click Floor Plan Color. The Color matrix will appear.



- 4 Click a color from the Basic Color list. Click OK.

**Note:** The Color|Solid preview box will display the chosen color.


- 5 (optional) Click a color from the Custom Colors list. Click OK.
- 6 (optional) Move the arrow to the right of the colorbar at the right of the Color dialog box. Click OK.

- 7 (optional) On the Color Spectrum box, click a color or click-and-drag the color marker. Click OK.
- 8 (optional) Type Hue, Saturation and Luminosity variables. Click OK.
- 9 (optional) Type Red, Green and Blue variables. Click OK.

## Moving Features to Different Plans

With Punch! AS3000 you can move selections to different plan layers; while Move to Plan deletes these objects from their original position. Features moved to other plan tabs will automatically change color to the color assigned to the new location.

### To move features from one plan to another


- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the feature or object you want moved. To select more than one object, press the SHIFT key while clicking objects.
- 3 On the Edit menu, click Move to Plan, then specify the plan, where you want the feature to appear, in the pop-up menu that is displayed.
- 4 (optional) Right-click the selection and click Move to Plan on the pop-up menu that is displayed, then click which plan. The selection is moved to the plan you specified.

**Note:** Items on a hidden layer are not available during a Select All process and will not be moved along with the other items and features in your drawing.

## Selecting the Properties Bar

The Properties Bar is easily accessed by clicking a feature on your floorplan. For example, clicking a door accesses the customizable properties for doors and clicking a plant accesses the properties for plants.

### To select the properties bar

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the feature you want to customize. The Properties Bar is displayed.

**Note:** If the Properties Bar does not automatically display, it may be set to “Manual Activate”. To reset the toggle, click the arrow after “Properties”, then click Auto Activate on the pop-up menu that is displayed.





---

Part 2

# Creating Your Home Design

Chapter 8: Foundation Plan Tab .....	41
Chapter 9: Floor Plan Tab .....	47



# Foundation Plan Tab

Just like building in the real world, the best place to start is with a foundation for your design. The Foundation Plan Tab includes tools to help you add the foundation details to your plan. You will learn to specify wall and footing widths, add stiffener beams, draw piers and define post tension.


Punch! Home Design Architectural Series 3000 makes creating basements or split-level homes easy. With just one or two mouse-clicks your basement will be moved into proper elevation position with the use of the versatile Elevation Slider.



## Defining the Foundation Perimeter

Punch! Home Design Architectural Series 3000 provides the tools to create a good foundation in your home plan. You have options for wall thickness, footing width, stiffener beams and foundation piers.

### To define the foundation perimeter

- 1 On the Foundation Plan tab, click the Foundation Perimeter Tool. 
- 2 Click on the design window to define the start point of the foundation. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the foundation. Notice that dimensions appear as you draw.



**Note:** Drawing is constrained to 15 degree angles; to release this constraint hold down the SHIFT key while drawing.

- 3 Click and move the pointer to the next corner point. Repeat until you have completely drawn the foundation.
- 4 Right click to end drawing mode.



**Note:** The dashed lines represent footing width and the faint blue diagonal lines represent the foundation area.

## Setting the Foundation Perimeter Options

Punch! Home Design Architectural Series 3000 draws your first floor walls, as you define the foundation perimeter. Once you have defined the foundation perimeter of your design, you have the option to customize many features. From wall thickness, floor height and stud spacing to automatic flooring options and footing width, you have alternatives for almost every feature. You can customize these settings at any time. For information on setting the wall style, see “Defining Gable Wall Segments”, which begins on page 51.



### To define the foundation width

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall of the foundation to select it; the Wall Properties bar is displayed.
- 3 Click the radio button next to the width of footings you want to use.
- 4 (optional) Type in a custom measurement, if needed.


### To define stud spacing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall of the foundation to select it; the Wall Properties bar is displayed.
- 3 Type the stud spacing required in the dialog box.

### To turn off automatic dimensioning

- On the Options menu, click to uncheck Automatic Dimensioning.

OR

- At the bottom of the window, click the Dimension  button, then click to uncheck Automatic Dimensioning on the pop-up menu that is displayed.

OR

- On the Walls Properties bar, click to uncheck the radio button next to Auto-Dim.

### To hide window and door dimensions

- On the Options menu, click to uncheck Window/Door Callouts.



OR

- At the bottom of the window, click the Dimension button, then click to uncheck Window/Door callouts on the pop-up menu that is displayed.



OR

- On the Walls Properties bar, click to uncheck the radio button next to Callouts.

### To dimension from wall center


By default, measurements are from wall surface to wall surface, to measure walls “on center” follow these steps.

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall of the foundation to select it; the Wall Properties bar is displayed.
- 3 Click the radio button next to Centers.



### To change dimensions location

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall of the foundation to select it; the Wall Properties bar is displayed.
- 3 Click the Flip Dims button.

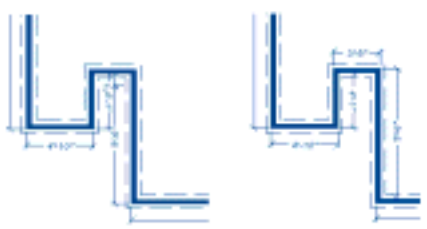

### To control automatic flooring

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall of the foundation to select it; the Wall Properties bar is displayed.

- 3 Check the Automatic Floor check box. Flooring is automatically inserted between joined exterior walls.
- 4 Uncheck the Automatic Flooring check box. The flooring disappears.
- 5 (optional) Type a Depth in the dialog box to customize the flooring depth.

## Editing Foundation Walls

At any point during design of your new home, foundation walls can be moved, reshaped, removed and so on.

### To move the foundation

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click and drag on the design window to select all points of the foundation you want to move.
- 3 Click one of the selected walls, hold down the mouse button and drag the foundation to the new location.

### To reshape the foundation

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall of the foundation you want to reshape.
- 3 Click a corner point of the foundation, hold down the mouse button and drag.
- 4 Click the next corner point, hold down the mouse button and drag.
- 5 (optional) Click a side of the foundation to move two corner points at once.



### To remove the foundation

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall of the foundation you want to delete to select it. Orange tabs appear at either end of the wall.
- 3 Press the DELETE key on the keyboard.

### To convert foundation walls to interior walls

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a foundation wall on your design window. Click Convert Wall to Interior on the pop-up menu. All connected walls becomes interior walls, the footings disappear and the walls are moved from the Foundation Plan Tab to the Floor Plan Tab.



## Adding Stiffener Beams

Stiffener beams are used to support the foundation, typically they run from one end of the foundation to the other. You can control the length, width and dimension of each beam.

### To place stiffener beams

- 1 On the Foundation Plan tab, click the Stiffener Beam Tool.
- 2 On the Beam Properties bar, type the width and depth of stiffener beam you want.
- 3 Press the mouse button on the design window to define the start point of the stiffener beam. A rubber-band line is displayed and follows the pointer.



- 4 Hold the mouse button down as you extend the stiffener beam to the opposite side of the foundation.
- 5 Release the mouse button to end drawing mode.

**Note:** Drawing is constrained to 15 degree angles, to release this constraint hold down the SHIFT key while drawing.

### To move a stiffener beam

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the stiffener beam you want to move. Selection handles appear.
- 3 Click again, hold down the mouse button and drag the stiffener beam to a new location.

**Note:** For more information on making precision movements using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To change the length of a stiffener beam

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the stiffener beam you want to alter. Selection handles appear.
- 3 Click an end point of the stiffener beam, hold down the mouse button and drag. Release the mouse button to stop lengthening the beam.

### To remove a stiffener beam

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the stiffener beam you want to remove. Selection handles appear.
- 3 Press the DELETE key on the keyboard.



### To change the dimensions of a stiffener beam

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Beam Properties bar, type the width and depth of stiffener beam you want.



## Defining Foundation Piers

Foundation piers support the foundation. They are concrete pads that add strength under a support column. Even after you place piers, you can customize them.

### To place foundation piers

- 1 On the Foundation Plan tab, click the Piering Tool.
- 2 On the Pier Properties bar, type the diameter of piers you want to use.
- 3 Click on the design window. A foundation pier will be placed at the location of each click.



### To move a foundation pier

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the foundation pier you want to move.
- 3 Click again, hold down the mouse button and drag the foundation pier to the new location.

**Note:** For more information on making precision movements using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To remove a foundation pier

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the foundation pier you want to remove.
- 3 Press the DELETE key on the keyboard.

### To resize a foundation pier


- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Pier Properties bar, type the new diameter of piers you want to use.



### Adding Post Tension Strands

Post tension strands are used to prevent cracking in a concrete slab foundation. They extend from one edge of the foundation to the other and are bolted into the frame and set in concrete.

#### To place a post tension strand

- 1 On the Foundation Plan tab, click the Post-tension Tool. 
- 2 Press the mouse button on the design window to define the start point of the post tension strand. A rubber-band line is displayed and follows the pointer.



- 3 Hold the mouse button down, as you extend the post tension strand to the opposite side of the foundation.
- 4 Release the mouse button to end drawing mode.

#### To move a post tension strand

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the post tension strand you want to move.
- 3 Click again, hold down the mouse button and drag the post tension strand to the new location.

#### To remove a post tension strand

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the post tension strand you want to remove.
- 3 Press the DELETE key on the keyboard.


#### To resize a post tension strand

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the post tension strand you want to alter.
- 3 Click an end point of the post tension strand, hold down the mouse button and drag. Release the mouse button to end.


### Drawing the Foundation Slope

Foundation Slope is typically specified in garages or basement areas where there is a drain. It specifies which direction the floor area slopes.

#### To draw the foundation slope

- 1 On the Foundation Plan tab, click the Foundation Slope Tool. 
- 2 Click once in your plan drawing, then drag in the direction you want the floor to slope.
- 3 Release the mouse button. The slope is defined.


#### To change the slope direction


- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click an end of the foundation slope indicator.
- 3 Move the mouse in the direction you want the slope changed.
- 4 Release the mouse button.

### Creating a Basement

Basements are easy to create with the Elevation Slider.

#### To create a basement


- 1 On the Foundation Plan tab, click the Foundation Perimeter Tool. 
- 2 Draw a foundation. For specific information on adding foundations, see “Defining the Foundation Perimeter” on page 42.
- 3 Press and hold the SHIFT key down while clicking on each foundation wall to select all the foundation walls.
- 4 On the left side of the screen, drag the Elevation Slider down to the level of the basement.

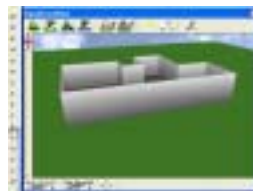


## Creating a Split-Level Foundation

Designing a split-level home is quite simple. The foundation will need to be drawn in two parts and, with the aid of the Elevation Slider, moved into place.

### To create a split level

- 1 On the Foundation Plan tab, click the Foundation Perimeter Tool. 
- 2 Draw the foundation of the part of your home plan that will be different from the rest of the home. If you need help drawing a foundation, please refer to “Defining the Foundation Perimeter” on page 42.
- 3 Press and hold the SHIFT key down while clicking on each foundation wall to select all the foundation walls.
- 4 On the left side of the screen, drag the Elevation Slider down to the level needed for the split.

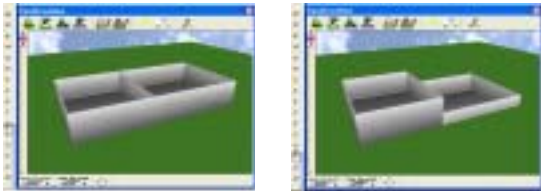


- 5 Draw the Foundation of the rest of the home and proceed with designing your home plan.

## Creating a Slab Foundation

A slab foundation is the preferred foundation in many areas. Punch! Home Design Architectural Series 3000 makes it easy to draw one. Four inches is a standard thickness for slab foundations. Post tension strands are added to prevent cracking.

### To create a slab foundation

- 1 On the Foundation Plan tab, click the Foundation Perimeter Tool. 
- 2 Draw a foundation. For specific information on adding foundations, see “Defining the Foundation Perimeter” on page 42.
- 3 Click the wall of the foundation to select it; the Wall Properties bar is displayed.
- 4 Type 4 (or a different depth) in the flooring depth dialog box, then click OK.
- 5 Draw post tension strands. For specific information on adding post tension strands, see “Adding Post Tension Strands” on page 45.

# Floor Plan Tab

By beginning with the foundation phase of your design, the exterior walls of the first floor are automatically generated. The next step is drawing exterior walls of the upper floors and drawing interior walls on all stories. Drawing walls is simple, just click and drag. Punch! AS3000 automatically displays wall dimensions and connects corners for you. To add interactive dimensions between walls, where they are not automatically added, see “Accessing the Snaps toolbar”, which begins on page 20.

Exterior walls, even those automatically generated with the foundation tools and interior walls can be resized, moved or deleted after they are placed. Punch! AS3000 makes creating the final home plan of your dreams, exactly as you want it, simple.


You can define your wall thickness before placing and create custom-sized walls in a snap. Further customize your design by adding windows, doors, stairs, furniture and so on.



## Drawing Exterior Walls

By default, the foundation design process creates eight-foot exterior walls on the first floor. However, if you want to skip the foundation section, you can begin designing by drawing exterior walls, using the two Exterior Wall tools. With these tools you can either draw “free form” or to specific dimensions, whichever suits your needs best. Walls are automatically joined when you draw and are placed at right angles. It is extremely important to use the Exterior Wall tools to draw a complete exterior wall perimeter so Punch! AS3000 can correctly calculate the floor’s square footage.

### To draw exterior walls


- 1 On the Floor Plan tab, click the Exterior Wall Tool. 
- 2 Click on the design window, hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.
- 3 Release the mouse button when the correct wall length is reached.
- 4 Repeat steps, drawing horizontal and vertical walls. Notice that Punch! AS3000 automatically connects walls to form corners.

**Note:** To draw the last wall perpendicular to the first wall, release the mouse button while the cursor is atop the start point of the first wall.

**Note:** Drawing is constrained to 5 degree angles; to release this constraint hold down the SHIFT key while drawing.

**Note:** If you don’t see automatic dimensioning while you draw, it might be turned off. To enable automatic dimensioning, on the Options menu, click Automatic Dimensioning. To add interactive dimensions between walls where they are not automatically generated, see “Accessing the Snaps toolbar”, which begins on page 20.

### To draw exterior walls to exact lengths

- 1 On the Floor Plan tab, click the Exterior Wall (Custom Length) Tool. 
- 2 Click on the design window, hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.
- 3 Release the mouse button at any point. The Custom Wall Length menu is displayed.



- 4 Type the length needed, then click OK.
- 5 Repeat steps, drawing horizontal and vertical walls. Notice that Punch! AS3000 automatically connects walls to form corners.


**Note:** Dimensions are entered in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.

**Note:** To draw the last wall perpendicular to the first wall, release the mouse button while the cursor is atop the start point of the first wall.

## Changing Exterior Wall Segment Length

Once you have drawn exterior walls for your design, you can easily change the length of individual wall segments. You can not only change the length of a wall, but move an adjoining wall with the segment.


### To change the wall segment length from the center


- 1 On the Standard toolbar, click the Resize Segment (Custom Length) Tool. 
- 2 Click an exterior wall. The Change Segment Length dialog box is displayed.



- 3 Type the new length in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.
- 4 Click Change. The wall segment is resized.

### To resize a wall segment length from the end

- 1 On the Standard toolbar, click the Resize Segment (Custom Length) Tool. 
- 2 Click the exterior wall to be resized. The Change Segment Length dialog box is displayed.

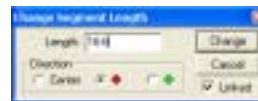

- 3 Type the new length in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.


- 4 Click the radio button for the red dot to change the location of the left end of the wall segment, then click Change.
- 5 (optional) Click the radio button for the green dot to change the location of the right end of the wall segment, then click Change.



## Drawing Interior Walls

Once you've drawn your exterior house shell, you can begin drawing the interior walls of your home. There are two interior wall tools, one draws walls on the fly; while using the other makes it easy to define an absolute length. For more information on drawing with precision using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To draw interior walls on the fly

- 1 On the Floor Plan tab, click the Interior Wall Tool. 
- 2 Click on the design window, hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.
- 3 Release the mouse button when the wall length you want is reached.




- 4 Repeat steps above, drawing horizontal and vertical walls. Notice that Punch! AS3000 automatically connects walls to form corners.


**Tip:** Punch! AS3000's default is to track walls along adjoining walls; to avoid this constraint, begin drawing from the center of the room and drag toward the wall.

**Note:** Drawing is constrained to 15 degree angles; to release this constraint hold down the SHIFT key while drawing.

**Note:** If you don't see automatic dimensioning while you draw, it might be turned off. To enable automatic dimensioning, on the Options menu, click Automatic Dimensioning. To add interactive dimensions between walls where they are not automatically generated, see "Accessing the Snaps toolbar", which begins on page 20.

### To draw interior walls to exact lengths

- 1 On the Floor Plan tab, click the Interior Wall (Custom Length) Tool. 
- 2 Click on the design window, hold down the mouse button and drag. Notice that the wall follows the pointer and automatically displays the wall length.
- 3 Release the mouse button at any point. The Custom Wall Length menu is displayed.

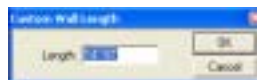

- 4 Type the exact length needed, then click OK.
- 5 Repeat steps above, drawing horizontal and vertical walls. Notice that Punch! AS3000 automatically connects walls to form corners.

**Note:** Dimensions are entered in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.

**Note:** To draw the last wall perpendicular to the first wall, release the mouse button while the cursor is atop the start point of the first wall.

## Setting Wall Options

Once you have drawn interior or exterior walls for your design, you have the option to customize many features. From wall thickness, floor height and stud spacing to automatic flooring options, you have alternatives for almost every feature.


### To define wall width

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it; the Wall Properties bar is displayed.
- 3 Click the radio button next to the width of walls you want to use.
- 4 (optional) Type in a custom measurement, if needed.


### To define stud spacing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it; the Wall Properties bar is displayed.
- 3 Type the stud spacing required in the dialog box.

### To turn off automatic dimensioning

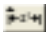- On the Options menu, click to uncheck Automatic Dimensioning.
- OR
- At the bottom of the window, click the Dimension  button, then click to uncheck Automatic Dimensioning on the pop-up menu that is displayed.
- OR
- On the Walls Properties bar, click to uncheck the radio button next to Auto-Dim.

### To hide window and door dimensions

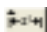- On the Options menu, click to uncheck Window/Door Callouts.
- OR
- At the bottom of the window, click the Dimension  button, then click to uncheck Window/Door callouts on the pop-up menu that is displayed.
- OR



- On the Walls Properties bar, click to uncheck the radio button next to Callouts.

### To dimension from wall center


By default, measurements are from wall surface to wall surface; to measure walls “on center” follow these steps.

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it; the Wall Properties bar is displayed.
- 3 Click the radio button next to Centers.



### To change dimensions location

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it; the Wall Properties bar is displayed.
- 3 Click the Flip Dims button.

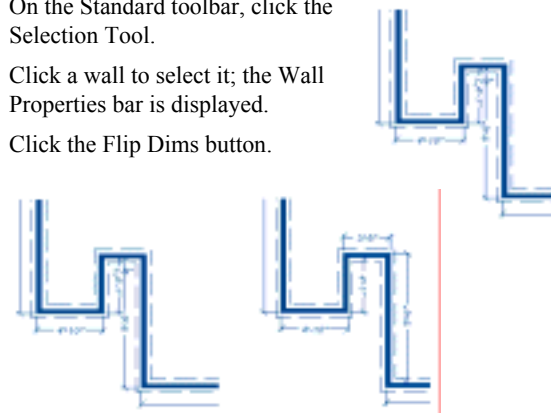

### To control automatic flooring

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it; the Wall Properties bar is displayed.
- 3 Check the Automatic Floor check box. Flooring is automatically inserted between joined exterior walls.
- 4 Uncheck the Automatic Flooring check box. The flooring disappears.
- 5 (optional) Type a Depth in the dialog box to customize the flooring depth.



## Editing Walls

At any point during design of your new home, both exterior and interior walls can be moved, reshaped, removed and so on.

### To move a wall

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it.
- 3 Click one of the selected walls, hold down the mouse button and drag the foundation to the new location.

### To remove a wall


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the wall you want to delete to select it. Orange tabs appear at either end of the wall.
- 3 Press the DELETE key on the keyboard.

### To cut and paste a wall

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it.
- 3 Click Cut on the Edit menu or press CTRL+X on your keyboard. The wall group or wall segment that was selected is removed from view.
- 4 Click Paste on the Edit menu or press CTRL+V on your keyboard. The wall you removed from your drawing in step 3 is displayed.
- 5 Drag the wall to the new location.


### To convert exterior walls to interior walls

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click an exterior wall on your design window. Click Convert Wall to Interior on the pop-up menu. All connected walls becomes interior walls.

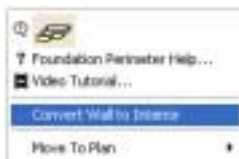

### To convert interior walls to exterior walls

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click an interior wall on your design window. Click Convert Wall to Exterior on the pop-up menu. All connected walls becomes exterior walls.


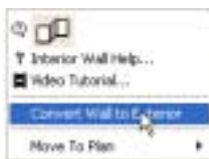


## Defining Gable Wall Segments

When a wall is drawn that will be roofed by a gable roof section, you can easily match the wall to the pitch of the roof. It does not matter whether you draw the roof first or alter the wall segment first.

### To define a gable wall segment

- 1 Click the wall section that will be fitted to the gable roof, the Wall Properties bar is displayed.
- 2 Click the Wall Style button, then click the Gable Style on the popup menu.
- 3 Type the Base Height. The Base Height, denoted by the blue bar, will typically be your ceiling height.
- 4 Type Pitch - A and B to match the pitch of the roof section they will meet.
- 5 Type Height - C and Height - D (if necessary). Click OK.

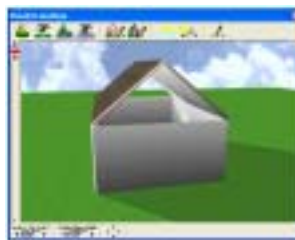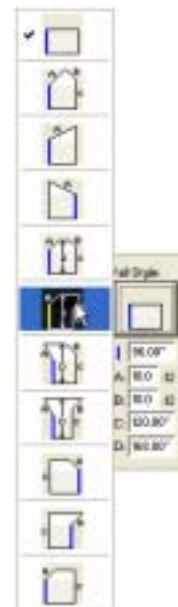

## Drawing Irregular Walls


With Punch! AS3000 you can draw diagonal walls, create gable walls and elevate wall segments. You can create a unique floor plan with just a few clicks.

### To draw diagonal walls

- 1 On the Floor Plan tab, click the Interior Wall Tool.
- 2 On the Preview Bar, click the wall width you want.



- Press and hold the SHIFT key, then click on the design window and drag. Notice that the wall follows the pointer and automatically displays the wall length.
- Release the mouse button when the diagonal wall length you want is reached.

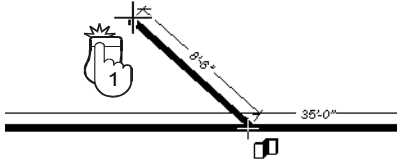


**Tip:** Punch! AS3000's default is to track walls along adjoining walls; to avoid this constraint, begin drawing from the center of the room and drag toward the wall.

### To define slanted walls

- Click the wall section that will be fitted to the gable roof, the Wall Properties bar is displayed.
- Click the Wall Style button, then click the Gable Style on the popup menu.
- Type the Base Height. The Base Height, denoted by the blue bar, will typically be your ceiling height.
- Type Pitch A and B if you are matching a roofline.
- Type Height - C and Height - D (if necessary), then click OK.



### To elevate walls

- On the Standard toolbar, click the Selection Tool. 
- Click a wall to select it.
- Use the Elevation Slider at the left of the window to raise or lower the wall into position.

### To rotate walls


- On the Standard toolbar, click the Selection Tool.
- Click a wall to select it.
- Click Rotate on the Edit menu. The Rotate dialog box is displayed.
- Click either Degrees or Radians, then type the angle you want to rotate the wall in the Angle text box.
- Click OK. The wall segment or wall group you selected is rotated based on the angle measurement you specified.

## Changing Interior Wall Segment Length

Once you have drawn exterior walls for your design, you can easily change the length of individual wall segments. You can not only change the length of a wall, but move an adjoining wall with the segment, assuring perpendicular walls.


### To lengthen or shorten wall segments


- On the Standard toolbar, click the Selection Tool.
- Click an end point on the wall you want to resize to select it.
- Hold down the mouse button and drag the end point. Notice as you move the pointer, the wall dimensions are displayed.

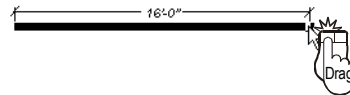

- Continue dragging until the wall length you want is reached, then release the mouse button.

### To define the wall segment length from the center

- On Standard toolbar, click the Resize Segment (Custom Length) Tool. 
- Click an interior wall. The Change Segment Length dialog box is displayed.

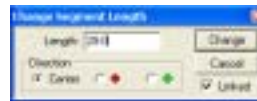

- Type the length needed, then click Change. The wall segment is resized.
- (optional) Uncheck the Linked box if you want the wall to be resized, but do not want the adjoining wall to remain perpendicular to it.



**Note:** Dimensions are entered in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.

### To define a wall segment length from the end

- 1 On the Standard toolbar, click the Resize Segment (Custom Length) Tool.
- 2 Click the interior wall to be resized. The Change Segment Length dialog box is displayed.



- 3 Type the length needed.
- 4 Click the radio button for the red dot to change the location of the left end of the wall segment, then click Change.
- 5 (optional) Click the radio button for the green dot to change the location of the right end of the wall segment, then click Change.
- 6 (optional) Uncheck the Linked box if you want the wall to be resized, but do not want the adjoining wall to remain perpendicular to it.

**Note:** Dimensions are entered in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.

## Defining Wall Height

Punch! AS3000 makes setting an entire floor's wall height easy. In addition, you can define custom wall heights for individual wall segments.

### To change the height of a wall

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall segment in your drawing to select it. The Wall Properties bar is displayed.
- 3 Type a new height in the Wall Style section of the Wall Properties bar.



### To change the height of an entire floor

- 1 On the Design menu, click Default Ceiling Heights, First Floor. The First Floor dialog box is displayed.
- 2 Type a new height measurement in the Height text box, then click OK.

**Note:** Changing the ceiling height this way will cause subsequently-drawn walls to be at the new height. If walls were drawn before setting the new wall height, they will need to be individually changed.

- 3 (optional) On the Edit Menu click Select All or type Ctrl+A to select all walls on the active floor of your drawing, then type a new height in the Wall Style section of the Wall Properties bar.

## Moving Walls

Once you've placed your walls, you can move them by dragging, making very precise movements using Nudge, for more information see "Using Nudge" on page 124, or by specifying exact cartesian or polar coordinates that correspond to the reference grid. For more information on the reference grid, see "Using the Grid" on page 13. For information on adding dimensions between items where automatic dimensioning is not applicable, see "Accessing the Snaps toolbar", which begins on page 20.

### To move a wall by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it.
- 3 Holding down the mouse button, drag the wall segment or wall group to a new location, then release the mouse button.

**Note:** By default, walls are moved either horizontally or vertically; to remove this constraint, press SHIFT while moving the wall.

**Note:** For more information on making precision movements using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To move a wall by specifying coordinates


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall to select it.
- 3 On the Edit Menu, click Move. The Move dialog box is displayed.
- 4 Click either Cartesian or Polar, then type new X-and Y-Axis coordinates in the appropriate text boxes.
- 5 Click OK. The wall segment or wall group you selected is moved, based on the coordinates you specified.

## Drawing a Curved Wall

With Punch! AS3000, drawing bay windows and curved walls is easy. You could even draw a round house! After drawing the walls, you can add windows, doors and so on to suit your need.

**To draw a curved wall**

- 1 On the Floor Plan tab, click the Curved Wall Tool. The Curved Wall Tool Properties dialog box is displayed.

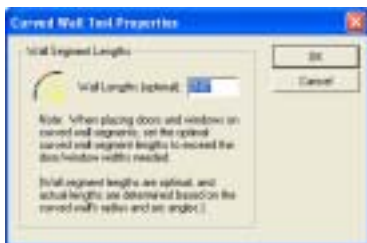

- 2 Type the Wall Segment length in the dialog box, then click OK.
- 3 On the Design window, press the mouse button to define one end of the circular wall segment and drag. A rubber-band line appears and follows the pointer. This line signifies the diameter of your curved wall.
- 4 Release the mouse button when the wall is the correct length.
- 5 Move the mouse clockwise or counter-clockwise until the wall is the shape you want.
- 6 Click to end.

**Note:** Press SHIFT to reverse the direction the arc is drawing.

**To draw a bay window**

- 1 On the Floor Plan tab, click the Curved Wall Tool. The Curved Wall Tool Properties dialog box is displayed.



- 2 Type 4'-0 (four feet, zero inches) as the Wall Segment length in the dialog box, then click OK.
- 3 On the Design window, press the mouse button to define one end of the circular wall segment and drag. A rubber-band line appears and follows the pointer. This line signifies the diameter of your curved wall.
- 4 Release the mouse button when the wall is the correct length.
- 5 Move the mouse clockwise or counter-clockwise until the wall is the shape you want.
- 6 Click to end.
- 7 Drag and drop windows onto the facets of the bay window. For more information, see “Adding Windows”, which begins on page 56.


**Note:** Press SHIFT to reverse the direction the arc is drawing.

**Breaking a Wall**

With Punch! AS3000 it's easy to paint each room in your design a different color. Once you have drawn exterior and interior walls to your specifications, you can simulate different rooms with the Wall Break tool, making it possible to apply different colors or materials in each room. For more information, see “Applying Color”, which begins on page 145.

**To break a wall**

- 1 On the Floor Plan tab, click the Break Wall Tool.
- 2 On the Design window, click a wall where you want to position a break.

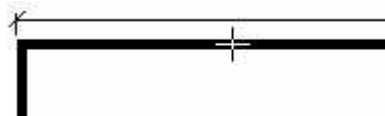


- 3 (optional) Hold the mouse button down and move it back and forth to position the break using associative dimensioning.

**Adding Doors and Openings**


All doors and cased openings are automatically dimensioned to neighboring walls, doors and windows. There are three types of openings and nine door styles available in Punch! AS3000 and they are all placed in the same manner.

**To add a door**

- 1 On the Floor Plan tab, click the Door Tool. The Door Properties Bar is displayed.
- 2 On the Door Properties Bar, click Door Style button, then click the door style you want from the pop-up window that is displayed.
- 3 On the Design window, click a wall where you want to place a door.

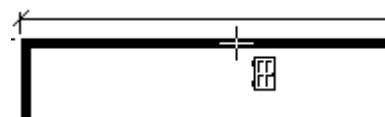

- 4 (optional) Click to set the door swing, if necessary.

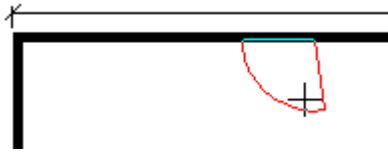


- 5 Type the Width, Height, Elevation and Trim Width to customize them.
- 6 Type the Door Swing Angle, if necessary.


**Note:** Any changes made on the Door Properties bar, become the default and will be used the next time a door is placed.

## Moving an Opening or Door

Sometimes after placing a door you will need to move it to a new position or delete it completely. Both of these procedures are simple.

### To move a door

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click a door to select it.
- 3 Holding down the mouse button, drag the door to a new location, then release the mouse button. Be sure to drag the door from the center. If you drag on an end point, the door will be resized.

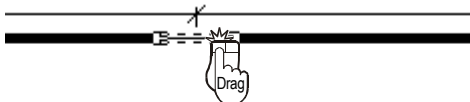


**Note:** Doors can only be moved within the wall where they were placed.

## Changing Door Settings

There is no need to redraw a door just because you need a different size or style. You can control many of its features through the Custom Door dialog box.

### To change door type

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the door you want to modify.
- 3 On the Door Properties Bar, click Door Style button, then click the

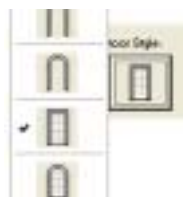

door style you want from the pop-up window that is displayed.


### To resize a door by specifying dimensions

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the door you want to modify.
- 3 On the Door Properties Bar, type the Width, Height, Elevation and Trim Width to customize them.




### To resize a door by dragging


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a door to select it.
- 3 Holding down the mouse button on an end point of the door, drag the end point to resize the door, then release the mouse button.

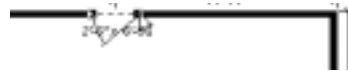

### To flip the direction of a door

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the door you want to modify.
- 3 On the Door Properties Bar, click the Flip Door button. The door flips direction.

### To change door swing

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the door you want to modify.
- 3 On the Door Properties Bar, type the new door swing angle. The door swing updates.

### To change the elevation of a door

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a door to select it.
- 3 Use the Elevation Slider at the left of the screen to raise or lower the selected door into position.

## Removing an Opening or Door

Once openings or doors have been placed, you always have the option of removing them. Punch! AS3000 makes deleting doors simple.

### To remove doors


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a door to select it.
- 3 Press the DELETE key on the keyboard.


### Adding Windows

Like doors and cased openings, there are an extensive variety of windows available in Punch! AS3000. They are automatically dimensioned to neighboring walls, doors and windows. There are 19 window styles available in Punch! AS3000 and they are all placed in the same manner.

For information on precision placement using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To add a window

- 1 On the Floor Plan tab, click the Window Tool. The Windows Properties Bar is displayed. 
- 2 On the Windows Properties Bar, click the Window Style button, then click the window style you want from the pop-up window that is displayed.
- 3 On the Design window, click a wall where you want to place a window.

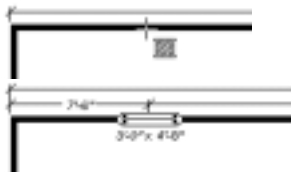

- 4 Type the Width, Height, Elevation and Trim Width to customize them.
- 5 (optional) For double-hung or casement/picture windows, specify the grill spacing.

**Note:** Any changes made on the Windows Properties bar, become the default and will be used the next time a window is placed.

### Moving a Window

If you've placed windows on your home design and then decide you want to move them to accommodate a better view, for instance, Punch! AS3000 makes it easy to move windows after they've been placed.

### To move a window

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a window to select it.
- 3 Holding down the mouse button, drag the window to a new location, then release the mouse button.





**Note:** Be sure to drag the window from the center. If you drag on an end point, the window will be resized.

### Changing Window Settings

Once windows have been placed, it is easy to resize them. You can do this by specifying exact dimensions or by dragging one end until you have the required size. You have control over the look of your windows by changing the grill settings. You can also flip windows vertically or horizontally to create beautiful groupings to suit any room design.

### To resize a window by specifying dimensions


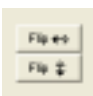
- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click a window to select it.
- 3 On the Windows Properties Bar, type the Width, Height, Elevation and Trim Width to customize them. 

### To resize a window by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a window to select it.
- 3 Holding down the mouse button on an end point of the window, drag the end point until the window is the size you want, then release the mouse button.



### To flip a window

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click a window to select it.
- 3 On the Windows Properties Bar, click one of the flip buttons. 

**Note:** Flip is not available if a Double Hung or Casement/Picture window is selected.

### To change the grill settings of a window

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a window to select it.
- 3 On the Windows Properties Bar, click either Double Hung or Casement/Picture. The Grill settings control is displayed.



**Note:** The Grill settings dialog will appear only when a Double Hung or Casement/Picture window is selected.

- 4 Using the scroll bars in the Grill section of the dialog box, adjust the grill appearance. The new grill settings are applied.

## Elevating a Window

Punch! AS3000 makes it simple to create window groups or transoms. The Elevation Slider makes it almost a one-click process.

### To elevate a window

- 1 Place windows using the technique outlined in “Adding Windows” on page 56.
- 2 On the Standard toolbar, click the Selection Tool.
- 3 Click the window to select it.
- 4 Using the Elevation Slider at the left of the screen, raise or lower the window into position.
- 5 Continue placing and elevating windows until the look you want is achieved.



## Stacking Windows

Punch! AS3000 makes it simple to create window groups or transoms. The Elevation Slider makes it almost a one-click process.

### To stack windows

- 1 Place windows using the technique outlined in “Adding Windows” on page 56.
- 2 On the Standard toolbar, click the Selection Tool.
- 3 Click the window to select it.
- 4 Using the Elevation Slider at the left of the screen, raise or lower the window into position.
- 5 Continue placing and elevating windows until the look you want is achieved.

**Note:** Stacked windows will appear on top of one another in the 2D design window. To select stacked windows, you might need to move the most recently-placed windows along the wall to gain access to those windows placed before.

## Removing a Window

Once windows have been placed, you may decide that you don’t want a window there after all. Punch! AS3000 makes deleting windows simple.

### To remove windows

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a window to select it.
- 3 Press the DELETE key on the keyboard.

## Adding a Second Floor

With Punch! AS3000 you can create a home design with up to three stories. Once you’ve completed your foundation and other first floor features, you can begin adding upper stories to your home design. For more information on foundation design, refer to the chapter titled “Foundation Plan Tab”, which begins on page 41.

### To copy all exterior walls from the first floor to the second

- 1 On the Foundation tab, uncheck any other plan layers you may have selected to view simultaneously.
- 2 Press SHIFT while clicking each exterior wall until they are all selected.
- 3 On the Edit menu, click Copy to Floor, then



Upper Floor. All exterior walls are copied to the second floor.

### To draw walls on the second floor

- 1 On the Design menu, click Work on Floor, Work on Second Floor or click on the Active Floor Icon at the bottom left-hand portion of the screen, then click Work on Second Floor on the pop-up menu that is displayed.
- 2 On the Floor Plan tab, click the Exterior Wall Tool. Using the techniques outlined in “Drawing Exterior Walls” on page 48 and “Drawing Interior Walls” on page 49, draw Exterior and Interior Walls.

**Note:** The non-working floor is shown in a pale color as reference, but if you prefer, you can choose to view only the floor you are working on. Click the Active Floor Icon and click View Working Floor Only.

**Note:** To make it easy to identify which floor is active, you can assign custom colors to each floor. For more information on customizing floor colors see the chapter titled “Editing Your Drawing”, which begins on page 121.

### To remove an entire floor

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design menu, click Work on Floor, Work on Second Floor (or the floor you want to delete) or click on the Active Floor Icon, then click Work on Second Floor on the pop-up menu that is displayed.
- 3 On the Edit menu, click Select All, or press CTRL+A.
- 4 Press the DELETE key on the keyboard.

### To confirm a floor was deleted

- 1 On the View menu, click 3D Quarter View. This opens a LiveView window.
- 2 On the Design menu, click Visible Floors, View Working Floor Only.

**Note:** If the LiveView window shows only sky and grass, the entire floor has been deleted.

### To copy everything from one floor to another

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design menu, click Work on Floor, Work on Second Floor (or the floor you want to copy) or click on the Active Floor Icon, then click Work on Second Floor on the pop-up menu that is displayed.

- 3 On the Edit menu, click Select All, or press CTRL+A.
- 4 On the Edit menu, click Copy to Floor, Upper Floor. Select Lower Floor if you want to copy the original down one level.



### To move everything from one floor to another

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design menu, click Work on Floor, Work on Second Floor (or the floor you want to move) or click on the Active Floor Icon, then click Work on Second Floor on the pop-up menu that is displayed.
- 3 On the Edit menu, click Select All, or press CTRL+A.

- 4 On the Edit menu, click Move to Floor, Upper Floor. Select Lower Floor if you want to move the original down one level.



## Creating a Split Level


With Punch! AS3000's Elevation Slider, you can easily design a split level home. With one or two mouse clicks, your split level can be perfectly positioned.

### To create a split level

- 1 On the Design menu, click Work on Floor, Work on Second Floor or click on the Active Floor Icon, then click Work on Second Floor on the pop-up menu that is displayed.
- 2 On the Floor Plan tab, click the Exterior Wall Tool. Using the techniques outlined in the section “Drawing Exterior Walls” on page 48, draw an entirely separate area.
- 3 Select all points of the newly-drawn section, by clicking on each wall while holding down SHIFT.




- On the left side of your window, move the Elevation Slider to the position needed for the split.

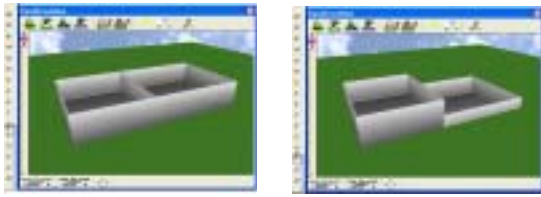


## Placing a Staircase

As you create more than one floor in your design, you'll want to draw a staircase. Stairs will automatically stop at the next floor. As you are placing stairs, Punch! AS3000 displays the stair length so you know the exact measurements as you draw.


### To draw a straight staircase


- On the Floor Plan tab, click the Straight Staircase Tool. The Staircase Properties bar is displayed. 
- Click on the design window to define the start point of the staircase. A rubber-band staircase with dimensions is displayed and follows the pointer.
- Extend the staircase to the location you want, then right click to end drawing mode.

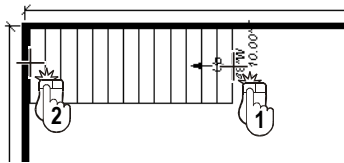

- (optional) Press and hold the SHIFT key while drawing to release the 15 degree constraint.

### To draw a curved staircase

- On the Floor Plan tab, click the Curved Staircase Tool. The Staircase Properties bar is displayed. 
- Click and release on the design window to define the start point of the staircase. A rubber-band staircase with dimensions is displayed and follows the pointer.
- Move in the direction you want the stairs to rise, then click to place the staircase.

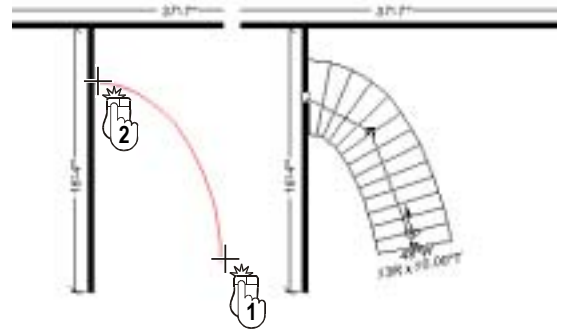

- (optional) Press and hold the SHIFT key while drawing to constrain stairs to a perfect arc.

## Modifying a Staircase

Once you have drawn a staircase, you can modify features and location to suit your needs. With Punch! AS3000 you have control over stairway width, riser and tread dimensions, handrail height and placement and whether the stairs are open or enclosed.


### Customizing staircase features

- On the Standard toolbar, click the Selection Tool.
- Click the staircase you want to customize to select it. The Staircase Properties bar is displayed.
- (optional) Type a new staircase height and width.
- (optional) Check the radio button to add skirt walls.
- (optional) Type a new step height (riser).
- (optional) Type a step depth (tread).
- (optional) Specify handrail height and location, left or right as you are looking from bottom of staircase.



### Moving a staircase

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the staircase you want to reposition.

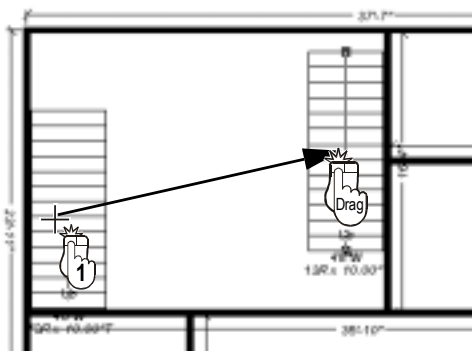

- 3 Click again, hold down the mouse button and drag the staircase to the new location.

### Resizing a staircase


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the center line of the staircase you want to resize.
- 3 Click an end point or midpoint of the staircase, hold down the mouse button and drag.

### To copy and paste a staircase

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the center line of the staircase you want to copy.
- 3 Click Copy on the Edit menu or press CTRL+C on your keyboard.
- 4 Click Paste on the Edit menu, or press CTRL+V on the keyboard. The stairway you copied is displayed.


### Reversing the direction of a staircase

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click the center line of the staircase you want to alter.
- 3 Click Reverse Staircase Direction on the pop-up menu that is displayed. The direction of the staircase is reversed.

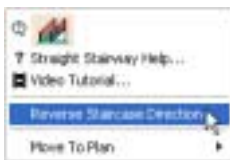

**Note:** This works for both curved and straight staircases.


### Removing a staircase

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the center line of the staircase you want to remove.
- 3 Press the DELETE key on the keyboard.


## Adding Railings

After drawing a staircase, you'll need to draw a railing around the opening to provide a barrier.

### To draw a straight railing

- 1 On the Floor Plan tab, click the Railing Tool. The Railing Properties bar is displayed. 
- 2 Click on the design window to define the start point of the Railing. A rubber-band Railing with dimensions is displayed and follows the pointer.
- 3 Extend the Railing to the location you want, then right-click to end drawing mode.
- 4 (optional) Press and hold the SHIFT key while drawing to release the 15 degree constraint.

### To draw a curved railing

- 1 On the Floor Plan tab, click the Curved Railing Tool. The Railing Properties bar is displayed. 
- 2 Click on the design window to define the start point of the railing. A rubber-band Railing with dimensions is displayed and follows the pointer.

**Note:** The railing will appear angular as it is drawn, but will curve after the next point is set.

- 3 (optional) Press and hold the SHIFT key while drawing to constrain railing to a perfect arc.

## Modifying a Railing

Once you have drawn a railing, you can modify its feature.

### Customizing railing features

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the railing you want to customize. The Railing Properties bar is displayed.
- 3 (optional) Type a new handrail height.
- 4 (optional) Type a new baluster spacing.
- 5 (optional) Check whether railing posts are wanted.



### Moving a railing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the railing you want to reposition.
- 3 Click again, hold down the mouse button and drag the railing to the new location.

**Note:** For more information on making precision movements using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To copy and paste a railing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the railing you want to copy.
- 3 Click Copy on the Edit menu or press CTRL+C on your keyboard.
- 4 Click Paste on the Edit menu or press CTRL+V on the keyboard. The railing you copied is displayed.
- 5 Click again, hold down the mouse button and drag the new railing into position.

### Resizing a railing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the railing you want to resize.
- 3 Click on an end point of the railing, hold down the mouse button and drag.

### Removing a railing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the center line of the railing you want to remove.
- 3 Press the DELETE key on the keyboard.

## Adding Flooring

Whether you want to carpet the whole floor with one color or you want each room to have an individual feel, Punch! AS3000 helps you experiment with different flooring options before spending hundreds of dollars on something you're not happy with. Once drawn you can customize the flooring by applying materials like tile, carpet, wood and so on; for more information see “Applying Building Materials” on page 146. You will also use the Floor Tool to add ceilings to the highest floor of your plan.

### To draw flooring


- 1 On the Floor Plan tab, click the Floor Tool. The Flooring Properties bar is displayed.



**Note:** If necessary, you can turn off the automatic flooring option. Click an exterior wall, uncheck the Auto-Floor option on the Wall Properties bar.

- 2 Click on the design window to define the start point of the flooring. A rubber-band line is displayed and follows

the pointer. This line signifies the first edge of the flooring. Notice that dimensions appear as you draw.

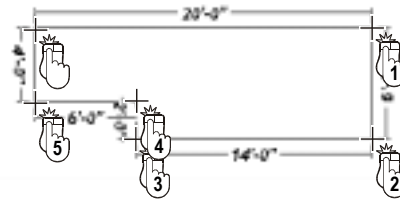

- 3 Click and move the pointer to the next corner point. Repeat until you have completely drawn the flooring area.
- 4 Right click to end drawing mode.
- 5 (optional) To customize the thickness of the flooring, type a new thickness on the Properties Bar.

### To move flooring

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Press the mouse button and drag around all points of the flooring to select it.
- 3 Click on a side of the flooring, hold down the mouse button and drag it to the new location.

### To reshape flooring

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a side of the flooring you want to reshape.
- 3 Click a corner point of the flooring, hold down the mouse button and drag.
- 4 Click the next corner point, hold down the mouse button and drag.
- 5 (optional) Click a side of the flooring to move the two corner points at once.

### To create a ceiling

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Press the mouse button and drag around all points of the floor to select it.
- 3 Right-click, then click Set Elevation on the pop-up menu that is displayed. The Set Elevation dialog box is displayed.
- 4 Type the elevation, typically the ceiling height, you want in the text box, then click OK. The floor area is raised into position.

- (optional) Using the Elevation Slider at the left of the screen, raise the floor area into position.


### To remove flooring

- On the Standard toolbar, click the Selection Tool.
- Click a side of the flooring you want to remove.
- Press the DELETE key on the keyboard.

## Calculating the Flooring Square Footage

With Punch! AS3000 you can quickly estimate the square footage for any floor area. This estimate will be useful when calculating the cost of carpeting, tile and so on.


### To calculate the square footage of a flooring area


- On the Standard toolbar, click the Selection Tool. 
- Click a side of the flooring area you want to calculate, to select it. The Flooring Properties bar is displayed.
- Click the Calc. Area button on the Properties bar.
- The calculation is displayed on the Properties bar.

## Adding a Floor Cutout

Punch! AS3000 makes it easy to design lofts, creative staircase openings and so on. You can also easily convert that space over the garage to a versatile room.

### To draw a floor cutout

- On the Floor Plan tab, click the Floor Cutout Tool.  The Flooring Properties bar is displayed.
- Click on the design window to define the start point of the floor cutout. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the flooring. Notice that dimensions appear as you draw.

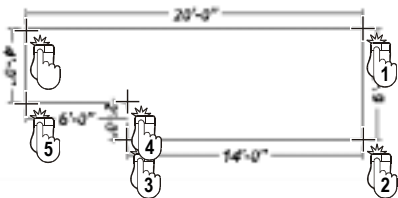

- Click and move the pointer to the next corner point. Repeat until you have completely drawn the floor cutout area.
- Right click to end drawing mode.

- (optional) To customize the thickness of the cutout, type a new thickness on the Properties Bar.

### To move floor cutout

- On the Standard toolbar, click the Selection Tool.
- Press the mouse button and drag around all points of the floor cutout to select it.
- Click on a side of the floor cutout, hold down the mouse button and drag it to the new location.

**Note:** For more information on making precision movements using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To reshape a floor cutout

- On the Standard toolbar, click the Selection Tool.
- Click a side of the floor cutout you want to reshape.
- Click a corner point of the floor cutout, hold down the mouse button and drag.
- Click the next corner point, hold down the mouse button and drag.
- (optional) Click a side of the floor cutout to move the two corner points at once.

### To remove a floor cutout

- On the Standard toolbar, click the Selection Tool.
- Click a side of the floor cutout you want to remove.
- Press the DELETE key on the keyboard.

Part 3

# Utilities in Your Home Design

Chapter 10: Electrical Plan Tab .....	65
Chapter 11: Plumbing Plan Tab .....	71
Chapter 12: HVAC Plan Tab .....	77



# Electrical Plan Tab

Adding electrical components to your home design is a simple matter of selecting the component you want to place and clicking on your drawing plan. You can even turn the lights on and off!

Punch! Home Design Architectural Series 3000 provides handy placement features such as automatic dimensioning and wall tracking. Using automatic dimensioning, you can place components a specific distance from a neighboring wall or other electrical component. Automatic wall tracking makes sure you place components such as outlets and switches without error.




## Placing Outlets and Switches

Punch! AS3000 makes it simple to add electrical components to your home plan. Using the convenient tabbed utility tools, simply select the components you want to place and click. Dimension lines automatically appear, making it easy to place components a specific distance from a neighboring electrical component or wall segment. You'll notice that when placing certain outlets and switches, the object is automatically "tracked" to the wall segment, making accurate placement simple. Floor and ceiling outlets are not tracked to walls. If the outlet is to be placed within 6" of a water source, for example, in a kitchen, bath or outdoors, always use a GFI outlet. Ground Fault Interrupters are designed to shut themselves off if they get wet.

For information on precision placement using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To place outlets and switches

- 1 On the Electrical Plan tab, click one of the outlet or switch tools.
- 2 Click a wall segment, hold down the mouse button and drag. Dimensions will display as you drag the outlet or switch along the wall. The dimension lines indicate the distance from the center of the outlet or switch to the nearest wall or other electrical component.

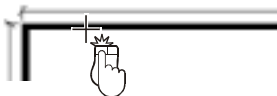

- 3 Release the mouse button to place the outlet or switch.



**Note:** To place a 4-Way or 5-Way switch, click the 3-Way switch button on the Switch Style Preview bar and click the needed switch on the pop-up window that is displayed.


### To place ceiling or floor outlets

- 1 On the Electrical Plan tab, click the 110 or the 220 Ceiling/Floor Outlet Tool.
- 2 On the Preview Bar, click either a Floor Outlet or a Ceiling Outlet.
- 3 Click on the design window to place the outlet.



### To move a ceiling or floor outlet by a specific distance


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the outlet you want to move. Selection handles appear.
- 3 On the Edit menu, click Move. The Move dialog box is displayed.

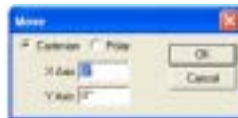


- 4 Click either Cartesian or Polar coordinates.
- 5 Type the X and Y Axis measurements, then click OK.
- 6 The outlet is moved to the location you specified.

### To move an outlet or switch by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the outlet or switch you want to move. Selection handles appear.
- 3 Drag the outlet or switch to a new location. As you move the outlet or switch, automatic dimensioning is displayed.

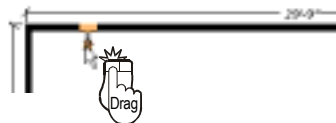

- 4 Release the mouse button to place the outlet or switch in the new location.

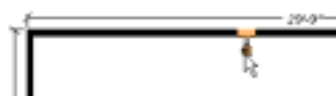

### To remove an outlet or switch


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the outlet or switch you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The outlet or switch is removed from your design.


## Adding Connector Switches

It's easy to add ceiling fan switches to your home design. Using the ceiling fan switch tool, just click and drag to define the wiring.




### To place connector switches


- 1 On the Electrical Plan tab, click the Connector Switch Tool. 
- 2 Click a wall segment, hold down the mouse button and drag. The wiring is displayed as you drag.

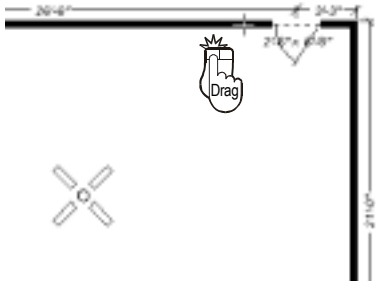

- 3 Click the ceiling fan or light you want to connect. The wiring is displayed in your drawing.

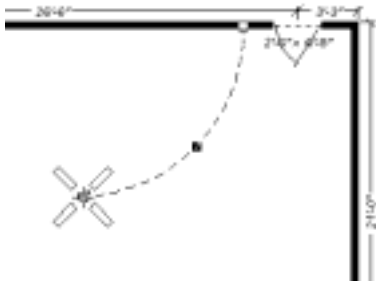

### To move connector switches

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click to select the connector you want to move. Selection handles appear.
- 3 Drag the connector switch to a new location.
- 4 Release the mouse button to place the connector switch in the new location.

### To remove connector switches

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the connector you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The connector is removed from your design.

### To move connector switches by a specific distance

- 1 On the Standard toolbar, click the Selection Tool.

- 2 Click to select the connector switch you want to move. Selection handles appear.
- 3 On the Edit menu, click Move. The Move dialog box is displayed.




- 4 Click either Cartesian or Polar coordinates.
- 5 Type the X and Y Axis measurements, then click OK.
- 6 The connector is moved to the location you specified.


## Adding Fixture Lighting

Adding fixture lighting to your design is very similar to adding other electrical components; however, they do not track directly to walls or display dimensioning as you place them.

Punch! Home Design Architectural Series 3000 provides many lights to choose from, including recessed canned lights, heat/vent lights and so on. In addition, you can control the amount of illumination that each fixture generates.

### To add light fixtures

- 1 On the Electrical Plan tab, click Light Tool. 
- 2 Click once in your plan drawing to place each light.

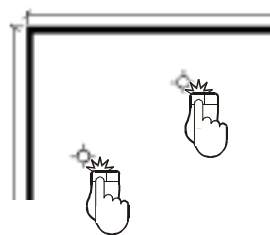

**Note:** A lighting fixture will be placed at each click site. Right-click or select a different tool to end placing light fixtures.

### To move a light fixture

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the light fixture you want to move. Selection handles appear.
- 3 Drag the light fixture to a new location.

- Release the mouse button to place the light fixture in the new location.

#### To move a light fixture by a specific distance

- On the Standard toolbar, click the Selection Tool.
- Click to select the light fixture you want to move. Selection handles appear.
- On the Edit menu, click Move. The Move dialog box is displayed.



- Click either Cartesian or Polar coordinates.
- Type the X and Y Axis measurements, then click OK.
- The light fixture is moved to the location you specified.

#### To turn the lights on and off

- On the Standard toolbar, click the Selection Tool.
- Click the light fixture you want to turn on or off. The Light Style Properties bar is displayed.
- Check or uncheck Switch On/Off. The change is displayed in the LiveView window.



#### To dim the lights

- On the Standard toolbar, click the Selection Tool.
- Click the light fixture you want to dim. The Light Style Properties bar is displayed.
- Click the up and down arrows on the Dimmer scroll bar or move the slider to customize the brightness of the lights. The change is displayed in the LiveView window.



#### To set the radius of the lights

- On the Standard toolbar, click the Selection Tool.
- Click the light fixture you want to customize. The Light Style Properties bar is displayed..
- Click the up and down arrows on the Radius scroll bar or move the slider to customize the



radius of the lights. The change is displayed in the LiveView window.

#### To set the falloff from the lights

- On the Standard toolbar, click the Selection Tool.
- Click the light fixture you want to adjust. The Light Style Properties bar is displayed.
- Click the up and down arrows on the Falloff scroll bar or move the slider to customize the Falloff of the lights. The change is displayed in the LiveView window.




#### To remove a light fixture

- On the Standard toolbar, click the Selection Tool.
- Click to select the light fixture. Selection handles appear.
- Press the DELETE key on the keyboard.

### Adding Flood Lights

Flood lights are added just like outlets and switches; they attach to and track along walls and their lighting, which can be turned off and on, is displayed in LiveView.

#### To add a flood light

- On the Electrical Plan tab, click the Flood Light Tool. 
- Click a wall segment, hold down the mouse button and drag. Dimensions will display as you drag along the wall. The dimension lines indicate the distance from the center of the light to the nearest wall or other electrical component.



- Release the mouse button to place the flood light.

#### To move a flood light

- On the Standard toolbar, click the Selection Tool.
- Click to select the flood light you want to move. Selection handles appear.
- Drag the flood light to a new location.
- Release the mouse button to place the flood light in the new location.

### To turn the lights on and off

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the light fixture you want to turn on or off. The Flood Light Properties bar is displayed.
- 3 Check or uncheck Switch On/Off. The change is displayed in the LiveView window.



### To dim the lights

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the light fixture you want to dim. The Flood Light Properties bar is displayed.
- 3 Click the up and down arrows on the Dimmer scroll bar or move the slider to customize the brightness of the lights. The change is displayed in the LiveView window.



### To set the radius of the lights

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the light fixture you want to customize. The Flood Light Properties bar is displayed.
- 3 Click the up and down arrows on the Radius scroll bar or move the slider to customize the radius of the lights. The change is displayed in the LiveView window.



### To set the falloff from the lights

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the light fixture you want to adjust. The Flood Light Properties bar is displayed.
- 3 Click the up and down arrows on the Falloff scroll bar or move the slider to customize the Falloff of the lights. The change is displayed in the LiveView window.



### To remove a light fixture


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the light fixture. Selection handles appear.
- 3 Press the DELETE key on the keyboard.

## Placing Phone and Cable Jacks

Placing phone and cable jacks is exactly like placing wall outlets and switches. You'll notice that when placing jacks, the object is automatically "tracked" to the wall segment, making accurate placement simple.

### To place phone and cable jacks

- 1 On the Electrical Plan tab, click the Phone or Cable Jack Tool.
- 2 Click a wall segment, hold down the mouse button and drag. The phone or cable jack is displayed with dimensions as you drag. The dimension lines indicate the distance from the center of the jack to the nearest wall or other electrical component.

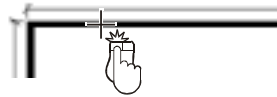

- 3 Release the mouse button to place the phone or cable jack.



### To move a phone or cable jack

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the phone or cable jack you want to move. Selection handles appear.
- 3 Drag the phone or cable jack to a new location. As you move the phone or cable jack, automatic dimensioning is displayed.
- 4 Release the mouse button to place the phone or cable jack in the new location.



### To remove a phone or cable jack



- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the phone or cable jack you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The jack is removed from your design.


## Adding Smoke Detectors and Thermostats

Placing smoke detectors and thermostats is exactly like placing wall outlets and switches. You'll notice that when placing these components, the object is automatically "tracked" to the wall segment, making accurate placement simple.


For information on precision placement using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To place smoke detectors and thermostats

- 1 On the Electrical Plan tab, click the Smoke Detector or Thermostat Tool. 
- 2 Click a wall segment, hold down the mouse button and drag. The smoke detector or thermostat is displayed with dimensions as you drag. The dimension lines indicate the distance from the center of the smoke detector or thermostat to the nearest wall or other electrical component. 

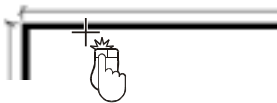

- 3 Release the mouse button to place the smoke detector or thermostat.

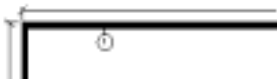

### To move a smoke detector or thermostat

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the smoke detector or thermostat you want to move. Selection handles appear.
- 3 Drag the smoke detector or thermostat to a new location.
- 4 Release the mouse button to place the smoke detector or thermostat in the new location.


### To remove a smoke detector or thermostat

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the smoke detector or thermostat you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The smoke detector or thermostat is removed from your design.

## Adding a Ceiling Fan

Placing ceiling fans is as simple as one mouse click. Once you place a ceiling fan, you can move it by dragging or by specifying exact coordinates.


### To place a ceiling fan

- 1 On the Electrical Plan tab, click the Ceiling Fan Tool. 
- 2 Click on your plan drawing to place the ceiling fan.



### To move a ceiling fan by a specific distance

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the ceiling fan you want to move. Selection handles appear.
- 3 On the Edit Menu, click Move. The Move dialog box is displayed.

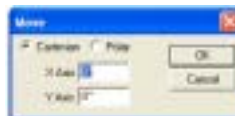

- 4 Click either Cartesian or Polar coordinates.
- 5 Type the X and Y Axis measurements, then click OK.
- 6 The ceiling fan is moved to the location you specified.

### To move a ceiling fan by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the ceiling fan you want to move. Selection handles appear.
- 3 Drag the ceiling fan to a new location.
- 4 Release the mouse button to place the ceiling fan in the new location.

# Plumbing Plan Tab

Once you've completed your home foundation and floor plan, the next step in the design process is to plan your utilities. Punch! AS3000 features a suite of plumbing fixtures from basic toilets to spa tubs. Other important considerations are gas bibs and floor drain placement, also included in Punch! AS3000. Most plumbing objects are designed to “track the walls”, meaning they can only be placed on wall segments to offer flawless design. Tubs and showers are automatically annotated and dimensions appear as you add plumbing to ensure accurate placement. Each plumbing symbol is simple to include in your drawing, with the flexibility to modify it at any time.




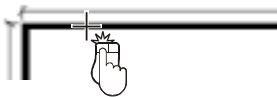
## Placing Toilets

Punch! AS3000 makes it simple to add plumbing to your home plan. Using the convenient tabbed utility tools, simply select the fixtures you want to place and click. Dimension lines automatically appear, making it easy to place objects a specific distance from a neighboring plumbing fixture or wall segment. You'll notice that when placing toilets, the object is automatically "tracked" to the wall segment making accurate placement simple.

For information on precision placement using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To place toilets

- 1 On the Plumbing Plan tab, click the Toilet Tool. 
- 2 Click a wall segment, hold down the mouse button and drag. The toilet is displayed with dimensions as you drag. The dimension lines indicate the distance from the center of the toilet to the nearest wall or plumbing fixture.



- 3 Release the mouse button to place the toilet.



### To move a toilet

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the toilet you want to move. Selection handles appear.
- 3 Drag the toilet to a new location. As you move the toilet, automatic dimensioning is displayed.
- 4 Release the mouse button to place the toilet in the new location.



### To remove a toilet


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the toilet you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The toilet is removed from your design.

## Placing Sinks

There are several styles of sinks available in Punch! AS3000. As with toilets, sinks are automatically tracked to wall segments as you place them, as well as automatically dimensioned to neighboring walls and plumbing fixtures. Automatic dimensioning makes it easy to figure pipe placement as well. While there are four sink styles available in Punch! AS3000, they are all placed in the same manner.

### To place sinks


- 1 On the Plumbing Plan tab, click one of the Sink tools. 
- 2 Click a wall segment, hold down the mouse button and drag. The sink is displayed with dimensions as you drag. The dimension lines indicate the distance from the center of the sink to the nearest wall or plumbing fixture. 

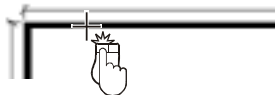

- 3 Release the mouse button to place the sink.



### To move a sink

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click to select the sink you want to move. Selection handles appear.
- 3 Drag the sink to a new location. As you move the sink, automatic dimensioning is displayed.
- 4 Release the mouse button to place the sink in the new location.

**Note:** For information on precision movements using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.



### To remove a sink


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the sink you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The sink is removed from your design.

## Placing Bathtubs or Spa Tubs

Tubs and spas are placed in the same manner as sinks. In addition to automatic dimensioning and wall tracking as you place a tub or spa, Punch! AS3000 automatically adds annotation to your design once the tub or spa is placed. This makes reading home plans at a later date simple. If you don't find the exact sized tub or spa you are looking for, simply place a tub that is similar in size, then adjust the tub or spa properties to the exact size you want for your home design.

### To place a bathtub or spa

- 1 On the Plumbing Plan tab, click the Bathtub or Spa Tub Tool. The Tub or Spa Properties bar is displayed.  
- 2 On the Design window, click on the wall where you want to place a tub. The dimension lines indicate the distance from the center of the tub to the nearest wall or plumbing fixture.
- 3 Drag the tub along the wall until it is in position.

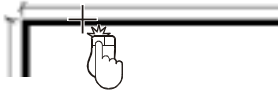

- 4 Release the mouse button to place the tub. Notice annotation automatically is displayed on the tub symbol.



### To move a bathtub or spa

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the bathtub or spa you want to move. Selection handles appear.
- 3 Drag the tub or shower to a new location. As you move the bathtub or spa, automatic dimensioning is displayed.
- 4 Release the mouse button to place the bathtub or spa in the new location.

### To resize a bathtub or spa

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the bathtub or spa to select it. The Tub or Shower Properties bar is displayed.



- 3 Type a new bathtub or spa length in the Length text box.
- 4 Type a new width in the Width text box. The bathtub or spa is resized.


### To remove a bathtub or spa


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the bathtub or spa you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The bathtub or spa is removed from your design.

## Placing a Shower


Showers are placed in the same manner as bathtubs and spas. In addition to automatic dimensioning and wall tracking as you place a shower, Punch! AS3000 automatically adds annotation to your design once the shower is placed. If you don't find the exact sized shower you are looking for, simply place a shower that is similar in size, then adjust the shower properties to the exact size you want for your home design.

### To place a shower

- 1 On the Plumbing Plan tab, click the Shower Tool. The Shower Properties bar is displayed. 
- 2 On the Design window, click where you want to place a shower. The shower with dimensions is displayed. The dimension lines indicate the distance from the center of the shower to the nearest wall or plumbing fixture.
- 3 Drag the shower along the wall until it is in position.

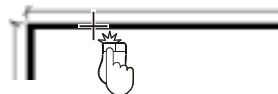

- 4 Release the mouse button to place the shower. Notice annotation automatically is displayed on the shower symbol.

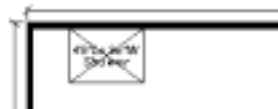

### To move a shower

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the shower you want to move. Selection handles appear.

- 3 Drag the shower to a new location. As you move the shower, automatic dimensioning is displayed.
- 4 Release the mouse button to place the shower in the new location.

#### To resize a shower

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the shower to select it. The Shower Properties bar is displayed.
- 3 Type a new shower length in the Length text box.
- 4 Type a new width in the Width text box. The shower is resized.



#### To remove a shower

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the shower you want to delete. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The shower is removed from your design.

### Placing the Hot Water Heater

Adding a hot water heater to your home plan is as simple as a mouse click.

#### To add a hot water heater

- 1 On the Plumbing Plan tab, click the Hot Water Heater Tool.
- 2 Click once in your plan drawing. The hot water heater is placed.



#### To move a hot water heater

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the hot water heater you want to move. Selection handles appear.
- 3 Drag the hot water heater to a new location.
- 4 Release the mouse button to place the hot water heater in the new location.

#### To remove a hot water heater

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the hot water heater. Selection handles appear.
- 3 Press the DELETE key on the keyboard.

### Placing an Outdoor Hose Bib

When you place an outdoor hose bib, dimension lines automatically appear, making it easy to place objects a specific distance from a neighboring plumbing fixture or the end of a wall segment. You'll notice that when placing hose bibs, the object is automatically "tracked" to the wall segment, making accurate placement simple.

#### To place an outdoor hose bib

- 1 On the Plumbing Plan tab, click the Hose Bib Tool.
- 2 Click a wall segment, hold down the mouse button and drag. The hose bib is displayed with dimensions as you drag. The dimension lines indicate the distance from the center of the hose bib to the nearest wall end or plumbing fixture.



- 3 Release the mouse button to place the hose bib.



#### To move an outdoor hose bib

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the hose bib you want to move. Selection handles appear.
- 3 Drag the hose bib to a new location. As you move the hose bib, automatic dimensioning is displayed.
- 4 Release the mouse button to place the hose bib in the new location.

#### To remove an outdoor hose bib

- 1 On the Standard toolbar, click the Selection Tool.




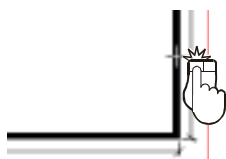
- Click to select the hose bib you want to delete. Selection handles appear.
- Press the DELETE key on the keyboard. The hose bib is removed from your design.

## Placing a Gas Bib

When you place a gas bib, dimension lines automatically appear, making it easy to place objects a specific distance from a neighboring fixture or the end of a wall segment. You'll notice that when placing gas bibs, the object is automatically "tracked" to the wall segment, making accurate placement simple.

### To place a gas bib

- On the Plumbing Plan tab, click the Gas Bib Tool. 
- Click a wall segment, hold down the mouse button and drag. The gas bib is displayed with dimensions as you drag. The dimension lines indicate the distance from the center of the gas bib to the nearest wall end or plumbing fixture.



- Release the mouse button to place the gas bib.



**Note:** For information on precision placement using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To move a gas bib

- On the Standard toolbar, click the Selection Tool.
- Click to select the gas bib you want to move. Selection handles appear.
- Drag the gas bib to a new location. As you move the gas bib, automatic dimensioning is displayed.
- Release the mouse button to place the gas bib in the new location.


### To remove an outdoor gas bib


- On the Standard toolbar, click the Selection Tool.
- Click to select the gas bib you want to delete. Selection handles appear.
- Press the DELETE key on the keyboard. The gas bib is removed from your design.

## Adding Floor Drains

Once you've completed your plumbing plan, the final step is to add floor drains to your design. Adding floor drains is as simple as a mouse click.

### To add a floor drain

- On the Plumbing Plan tab, click the Floor Drain Tool. 
- Click once in your plan drawing. The floor drain is placed.

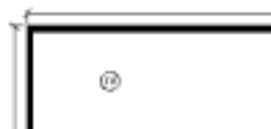

### To move a floor drain

- On the Standard toolbar, click the Selection Tool.
- Click to select the floor drain you want to move. Selection handles appear.
- Drag the floor drain to a new location.
- Release the mouse button to place the floor drain in the new location.

### To remove a floor drain

- On the Standard toolbar, click the Selection Tool.
- Click to select the floor drain. Selection handles appear.
- Press the DELETE key on the keyboard. The floor drain is removed from your design.



# ***HVAC Plan Tab***

Correctly adding HVAC ducts and units is an important part of the home design process. Punch! Home Design Architectural Series 3000 makes it easy to flawlessly design your HVAC system, making sure all rooms receive adequate ventilation.

Once you place HVAC with a few mouse clicks, it's easy to adjust or move components if you change your mind. You can even move components by a specific distance based on Cartesian or Polar coordinates, or rotate items as needed.




## Placing Air Ducts

Punch! Home Design Architectural Series 3000 features several sized air ducts to ensure the perfect HVAC plan. To place air ducts, simply click and drag. Air ducts are drawn horizontally and vertically, just as standard HVAC ducts are actually placed in a new home. You can move air ducts by dragging or by a specific distance, or rotate them to fit your home design.

If you don't find the perfectly-sized air duct for your home plan, you can define the size of the duct yourself using the HVAC properties dialog box.

For information on precision placement using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To place air ducts

- 1 On the HVAC Plan tab, click the Air Duct Tool. 
- 2 Click on the plan drawing, hold down the mouse button and drag. The duct work is displayed as you drag, displaying the measurements of the duct.




**Note:** Drawing is constrained to 15 degree angles, to release this constraint hold down the SHIFT key while drawing.

- 3 Release the mouse button to place the air duct segment.



### To move air ducts by dragging

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click to select the air duct you want to move. Selection handles appear.
- 3 Drag the air duct to a new location.
- 4 Release the mouse button to place the air duct in the new location.

### To move air ducts a specific distance


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the air duct you want to move. Selection handles appear.
- 3 On the Edit Menu, click Move. The Move dialog box is displayed.



- 4 Click either Cartesian or Polar coordinates.
- 5 Type the X and Y Axis measurements, then click OK.
- 6 The air duct is moved to the location you specified.

### To rotate air ducts

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the air duct you want to rotate. Selection handles appear.
- 3 On the Edit Menu, click Rotate. The Rotate dialog box is displayed.

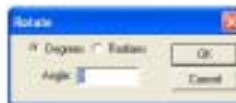

- 4 Click either Degrees or Radians, then type the angle measurement in the Angle text box.
- 5 Click OK. The selected air duct is rotated by the angle you specified.

### To resize an air duct

- 1 On the Standard toolbar, click the Selection Tool.

- Click the air duct to select it. The Duct Properties bar is displayed.
- Type new width and depth measurements in the appropriate text boxes. The air duct you selected is resized.



### To remove air ducts


- On the Standard toolbar, click the Selection Tool.
- Click to select the air duct you want to delete. Selection handles appear.
- Press the DELETE key on the keyboard. The air duct is removed from your design.

## Placing Vents and Registers

Placing vents and registers involves one mouse click. Once you've placed vents, you can move them by dragging or defining specific coordinates. You can even rotate vents at custom angles to fit your design. Punch! Home Design Architectural Series 3000 provides several vents to choose from, including floor and ceiling vents.

### To place vents and registers

- On the HVAC Plan tab, click one of the vent tools.
- Click once in your plan drawing. The vent you selected is placed.

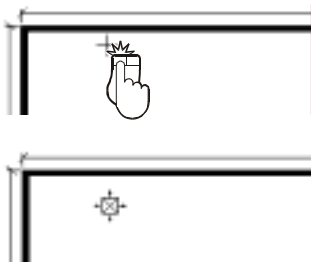

### To move vents and registers by dragging

- On the Standard toolbar, click the Selection Tool.
- Click to select the vent you want to move. Selection handles appear.
- Drag the vent to a new location.
- Release the mouse button to place the vent in the new location.

### To move a vent or register by a specific distance

- On the Standard toolbar, click the Selection Tool.

- Click to select the vent you want to move. Selection handles appear.
- On the Edit Menu, click Move. The Move dialog box is displayed.



- Click either Cartesian or Polar coordinates.
- Type the X and Y Axis coordinates, then click OK.
- The vent is moved to the location you specified.

### To rotate registers or vents

- On the Standard toolbar, click the Selection Tool.
- Click to select the register or vent you want to rotate. Selection handles appear.
- On the Edit Menu, click Rotate. The Rotate dialog box is displayed.



- Click either Degrees or Radians, then type the angle measurement in the Angle text box.
- Click OK. The selected vent is rotated by the angle you specified.

### To remove a register or vent


- On the Standard toolbar, click the Selection Tool.
- Click to select the vent you want to delete. Selection handles appear.
- Press the DELETE key on the keyboard. The vent is removed.

## Adding Heating, Air Conditioning Units and Pumps

Adding heating and air conditioning units only involves one mouse click. Once placed, you can move units by specific distances, drag to move them and even rotate them to fit your home design.

### To place heating and air conditioning units

- 1 On the HVAC Plan tab, click a heating or cooling unit Tool.
- 2 Click once in your plan drawing. The unit you selected is placed.

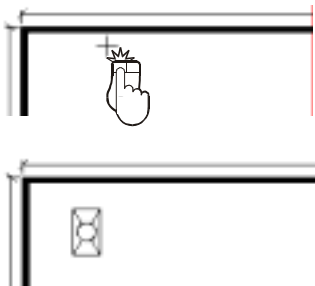

### To move heating and air conditioning units by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the unit you want to move. Selection handles appear.
- 3 Drag the unit to a new location.
- 4 Release the mouse button to place the unit in the new location.

### To move a heating or air conditioning unit by a specific distance

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the unit you want to move. Selection handles appear.
- 3 On the Edit Menu, click Move. The Move dialog box is displayed.



- 4 Click either Cartesian or Polar coordinates.
- 5 Type the X and Y Axis coordinates, then click OK.
- 6 The unit is moved to the location you specified.

### To rotate heating or air conditioning units

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the unit you want to rotate. Selection handles appear.

- 3 On the Edit Menu, click Rotate. The Rotate dialog box is displayed.



- 4 Click either Degrees or Radians, then type the angle measurement in the Angle text box.
- 5 Click OK. The selected unit is rotated by the angle you specified.

### To remove a heating or air conditioning unit


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the unit. Selection handles appear.
- 3 Press the DELETE key on the keyboard. The unit is removed.

## Placing Baseboard Registers

As you place baseboard registers in your home plan, dimension lines automatically appear, making it easy to place registers a specific distance from a neighboring HVAC component or wall segment. You'll notice that when placing registers, the object is automatically "tracked" to the wall segment making accurate placement simple.

### To place baseboard registers


- 1 On the HVAC Plan tab, click the Baseboard Register Tool.
- 2 Click a wall segment, hold down the mouse button and drag. The register is displayed as you drag, with dimension displayed. The dimension lines indicate the distance from the center of the register to the nearest wall or other HVAC component.

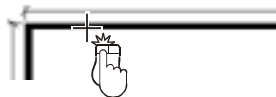

- 3 Release the mouse button to place the register.



**To move a baseboard register**

- 1** On the Standard toolbar, click the Selection Tool. 
- 2** Click to select the register you want to move. Selection handles appear.
- 3** Drag the register to a new location. As you move the register, automatic dimensioning is displayed.
- 4** Release the mouse button to place the register in the new location.





Part 4

# Working on Your Home's Exterior

Chapter 13: Roofing Plan Tab .....	85
Chapter 14: Deck Plan Tab .....	93
Chapter 15: Landscape Plan Tab .....	99
Chapter 16: Detail Plan Tab .....	111



# Roofing Plan Tab

One of the features that will set your design apart from all others will be its roofline. Using the roofing tools available in Punch! AS3000, you can design intricate roofs with ease. From basic rooflines like hipped or gable to less common ones like saltbox, gambrel, or a roof over a bay window, you will be able to create any roof to match the style of your homeplan.

In this chapter you will learn how to create individual pieces which, when combined, create multifaceted roofs to fit your needs.



## Adding a Roof

There are several styles of roof available in Punch! AS3000, including three powerful freehand roofing tools. To match the gable ends of these roof styles refer to “Defining Gable Wall Segments” on page 51. To draw a flat ceiling, instead of a cathedral one, see “To create a ceiling” on page 61.

Automatic dimensioning makes it easy to achieve exact placement. While there are nine roof tools available, six of them are placed in the same manner. These styles are:


- hip
- gable connector
- gable
- hip connector
- hip/gable
- cross connector

### To draw a roof


- 1 On the Roofing Plan tab, click one of the Roof Tools. The Roofs Properties bar displays the pitches that are available.
- 2 Click the roof pitch to select it.
- 3 (optional) On the Design menu, click Work on Floor, Work on Second Floor (or the floor you want to roof) or click on the Active Floor Icon, then click Work on Second Floor on the pop-up menu that is displayed.



- 4 Click on the design window, hold down the mouse button and drag.

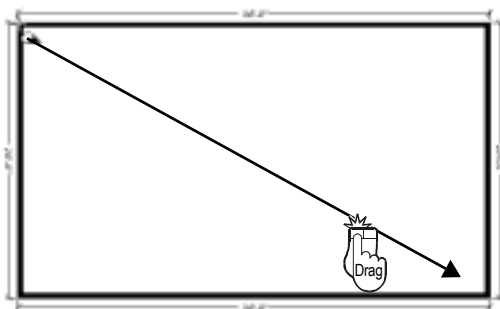


- 5 Release the mouse button.

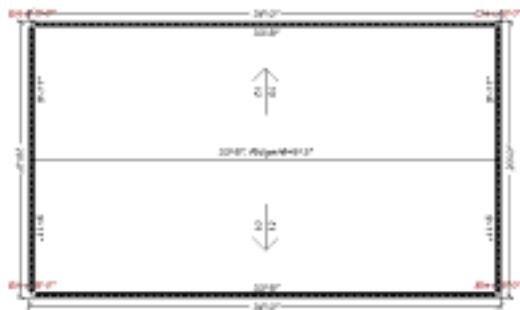


**Note:** The arrows show which way the roof section descends. The elevation of each corner is noted.

### To snap a roof


- 1 On the Roofing Plan tab, click one of the Roof Tools. The Roofs Properties bar displays the pitches that are available.
- 2 Click the roof pitch to select it.
- 3 Click the Snaps On Tool. The Snaps toolbar is displayed.
- 4 On the Snaps toolbar, click the Snap to Endpoint Tool or press TAB.
- 5 Click a wall on the design window. The roof will “snap to” the endpoint nearest where you clicked.

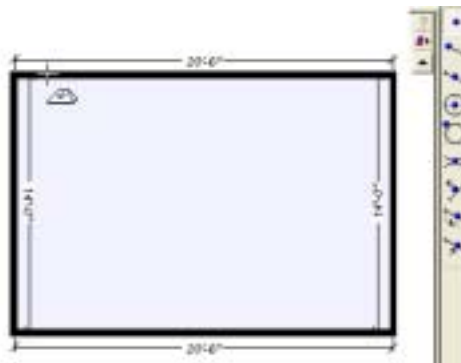

- 6 Hold down the mouse button and drag until the cursor touches a wall.

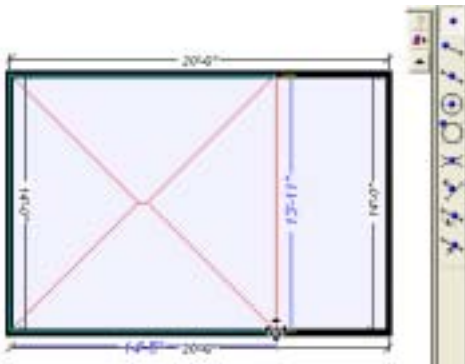

- Press Tab to re-activate the Snap to Endpoint Tool. The roof will automatically extend to cover the entire perimeter.

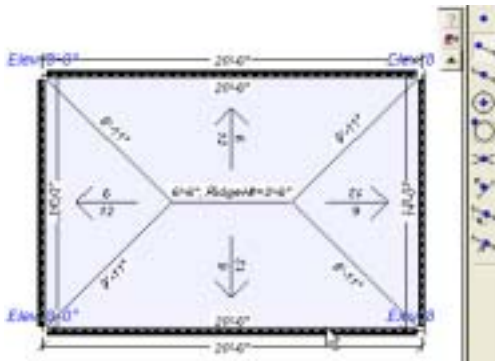

- Release the mouse button.

## Using the Freehand Roof Tools


Punch! Home Design Architectural Series 3000 has three Freehand Roof tools that provide versatility and power when drawing complex roofing plans. Using the three-point and four-point freehand tools, roof sections are attached to walls to making it easy to draw them the necessary size the first time. After drawing roof sections, all parts of it can be customized, for example, pitch, placement, shape and so on. With the three- and four-point freehand tools you can specify a width for soffit. For more information, see “Adding a Soffit”, which begins on page 91.

### To draw with the freehand roof tool

- On the Roofing Plan tab, click the Freehand Roof Tool. The Roofs Properties Bar displays the pitches that are available.



- On the Properties bar, click a pitch or type a custom pitch in the dialog box.
- Click on the design window to define the start point of the roof section. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the roof section. Notice that dimensions appear as you draw.

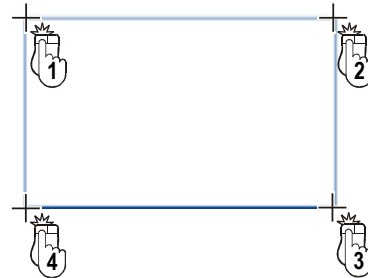

- Click and move the pointer to the next corner point. Repeat until you have completely drawn the roof section.
- (optional) Click to select the arrow in the center of the roof section, then rotate the bold arrow to change the direction of the roof slope.



**Note:** The elevation of each selected point of the roof section are notated; use these specs to match roof sections.

- Click the roof section to select it. The Roofs Properties Bar displays the pitches that are available.
- Click the Elevation Base radio button to measure from the ground to the base of the roof section.
- Click the Elevation Peak radio button to measure from the ground to the peak of the roof section.
- (optional) Adjust the elevation of the roof section using the Elevation Slider on the left of your screen.



**To draw with the four-point freehand roof tool**



- 1 On the Roofing Plan tab, click the Four-Point Freehand Roof Tool. The Four-Point Freehand Roof Tool Properties dialog box is displayed.



- 2 Type the Soffit Depth in the dialog box.

**Note:** Dimensions are entered in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.

- 3 Click to check the edge(s) where soffit is needed, then click OK.
- 4 (optional) Click to check No Soffit.
- 5 On the Properties bar, click a pitch or type a custom pitch in the dialog box.
- 6 Click a wall on the design window to define the start point of the roof section.
- 7 Hold down the mouse button and drag away from the wall section. A rubber-band line is displayed and follows the pointer. This line signifies the direction the roof section will rise. Notice that dimensions appear as you draw.

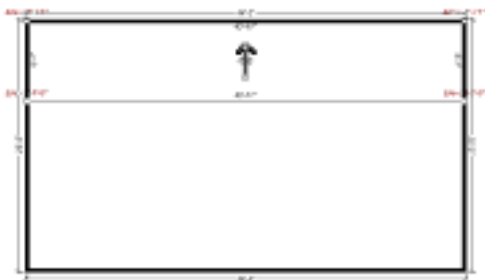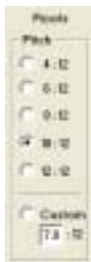

- 8 Release the mouse button. The roof section is drawn.

**To draw with the three-point freehand roof tool**


- 1 On the Roofing Plan tab, click the Three-Point Freehand Roof Tool. The Three-Point Freehand Roof Tool Properties dialog box is displayed.



- 2 Type the Soffit Depth in the dialog box, then click OK.

**Note:** Dimensions are entered in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.

- 3 (optional) Click to check No Soffit.
- 4 On the Properties bar, click a pitch or type a custom pitch in the dialog box.
- 5 Click a wall on the design window to define the start point of the roof section.
- 6 Hold down the mouse button and drag away from the wall section. A rubber-band line is displayed and follows the pointer. This line signifies the direction the roof section will rise. Notice that dimensions appear as you draw.

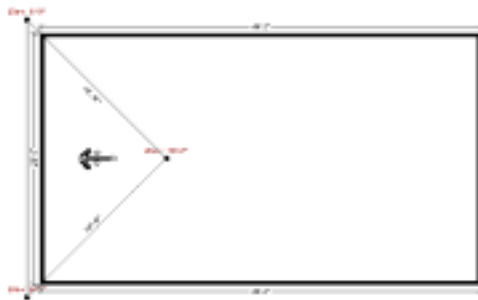

- 7 Release the mouse button. The roof section is drawn.

**Editing Roofs**

Once drawn, roof sections can be altered to suit your design. From resizing to rotating the slope to changing its pitch, Punch! AS3000 makes it simple to create even the most complex roofline.

**To resize the roof**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a side of the roof you want to resize.
- 3 Click a corner point of the roof, hold down the mouse button and drag it until the roof is the size you want.
- 4 Release the mouse button.

### To change the roof's pitch

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the roof to select it.
- 3 On the Properties bar, click a pitch or type a custom pitch in the dialog box.
- 4 (optional) Click the radio button next to Custom and type a pitch of 0.0 in the dialog box to create a flat roof.
- 5 Click OK.



### To elevate a roof by using the Elevation Slider

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the roof to select it.
- 3 On the left side of the screen, drag the Elevation Slider up or down.
- 4 Release the mouse. The roof is repositioned.

### To change the roof's slope direction

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the roof to select it.
- 3 Rotate the bold arrow in the center of the roof section, until it points to the direction you want the section to fall.
- 4 Release the mouse. The slope is repositioned.


**Note:** Rotation is constrained to fifteen (15) degrees.

### To delete a roof

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the roof to select it.
- 3 Press the DELETE key on the keyboard. The roof is removed from your design.

## Drawing a Gambrel Roof

The Gambrel roof, or barn roof, is a popular style because it increases the usable space in the loft/attic area. A gambrel roof is composed of two pitches. The lower sections are created using the Four-Point Freehand Roof tool,

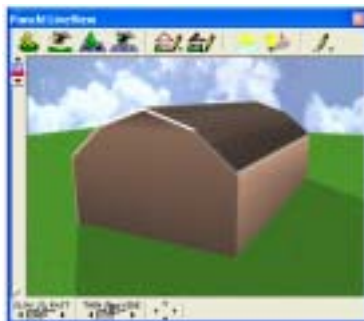


while the upper pitch will be drawn using the Gable Roof Tool.

### To draw a gambrel roof

- 1 On the Roofing Plan tab, click the Four-Point Freehand Roof Tool. The Four-Point Freehand Roof Tool Properties dialog box is displayed.



- 2 Type 1" (one inch) in the Soffit Depth dialog box.
- 3 (optional) Click to check No Soffit, then click OK.
- 4 Click 12:12 on the Properties bar.
- 5 Click a wall on the design window to define the start point of the roof section.
- 6 Hold down the mouse button and drag away from the wall section. A rubber-band line is displayed and follows the pointer. This line signifies the direction the roof section will rise. Notice that dimensions appear as you draw.

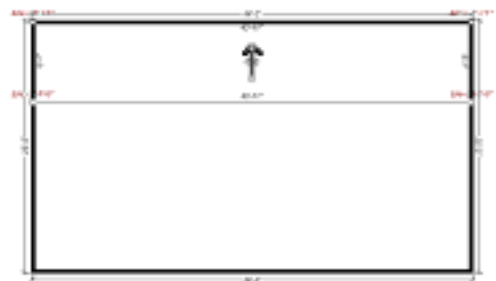


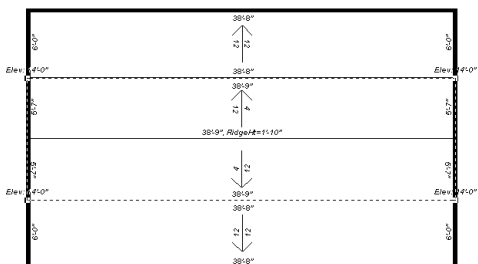
- 7 Release the mouse button. The roof section is drawn.
- 8 On the Edit menu, click Copy or press CTRL+C or right-click the selection and click Copy on the pop-up menu that is displayed.
- 9 On the Edit menu, click Paste or press CTRL+V or right-click the selection and click Paste on the pop-up menu that is displayed. A duplicate roof section is created.
- 10 Rotate the bold arrow in the center of the roof section 180 degrees so it faces the opposite direction from the other arrow.

- Align this roof section on the other side of the floor plan. Note the elevation that is specified in red as the upper elevation of the roof section.



**Note:** At this point there will be a gap between the two roof sections; this gap will be filled with the Gable Roof section.

- On the Roofing Plan tab, click the Gable Roof Tool. 
- For the upper section, click 4:12 on the Properties bar.
- Click on the design window, hold down the mouse button and drag.
- Right-click the upper roof section and click Elevate Roof from the pop-up menu that is displayed.



- Type the number noted from Step 11.

**Note:** The previous example specified 12:12 and 4:12 pitches, but any combination of pitches will work for this roof.




### Drawing a Saltbox Roof

Saltbox roofs are similar to gable roofs with an offset ridge. Although they are not symmetrical, they are extremely attractive and easy to create.



### To draw a saltbox roof


- On the Roofing Plan tab, click the Four-Point Freehand Roof Tool. The Four-Point Freehand Roof Tool Properties dialog box is displayed. 



- Type 1" (one inch) in the Soffit Depth dialog box.
- (optional) Click to check No Soffit, then click OK.
- Click 8:12 on the Properties bar.
- Click a wall on the design window to define the start point of the roof section.
- Hold down the mouse button and drag away from the wall section. A rubber-band line is displayed and follows the pointer. This line signifies the direction the roof



section will rise. Notice that dimensions appear as you draw.

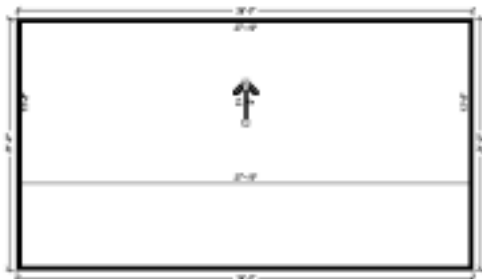

- 7 Press the mouse button and drag a box around all points of the roof section to select it. Make a note of the elevation that is specified as the upper elevation of the roof section.
- 8 On the Edit menu, click Copy or press CTRL+C.
- 9 On the Edit menu, click Paste or press CTRL+V. A duplicate roof section is created.
- 10 Rotate the bold arrow in the center of the roof section 180 degrees so it faces the opposite direction from the other arrow.



- 11 Click the lower edge of the second roof section and resize the roof.



- 12 Click the roof section to select it. The Roofs Properties Bar displays the pitches that are available.



- 13 Click the Elevation Base radio button to measure from the ground to the peak of the roof section.
- 14 Right-click the Elevation Slider, then click Set Elevation on the pop-up menu that is displayed.
- 15 Type the number noted from Step 7, then click OK.



**Note:** To close the gable ends of this roof style refer to “Defining Gable Wall Segments” on page 51.



## Adding a Soffit

A soffit provides the barrier between the exterior wall and the roof overhang. You will add soffit after you have drawn exterior walls and all roof sections.

### To draw a soffit

- 1 On the Floor Plan tab, click the Floor Tool. The Preview Bar displays the flooring thicknesses that are available.



2 On the Design menu, click Work on Floor, Work on Second Floor (or the floor you want to roof) or click on the Active Floor Icon, then click Work on Second Floor on the pop-up menu that is displayed.





3 Enter flooring thickness on the Properties bar.

4 Click on the design window to define the start point of the soffit. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the soffit. Notice that dimensions appear as you draw.

5 Following the outside perimeter of the roofline, click and move the pointer to the next corner point. Repeat until you have completely drawn the soffit.

6 Right click to end drawing mode.

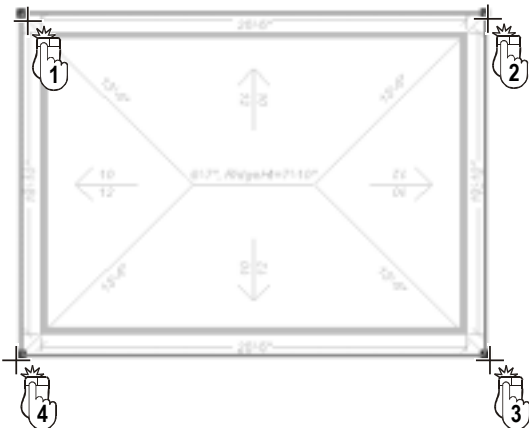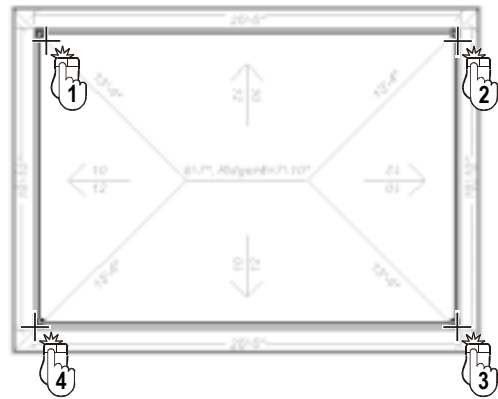

Before



After

7 On the Floor Plan tab, click the Floor Cutout Tool. The Preview Bar displays the flooring thicknesses that are available.



8 Set thickness on Properties bar.

9 Following the inside perimeter of the exterior walls, click and move the pointer to the next corner point. Repeat until you have completely drawn the soffit cutout.

10 Right click to end drawing mode.

# ***Deck Plan Tab***

If you are looking for a way to add more living space to your existing home, but don't want to build an addition, you might consider adding a deck. Punch! AS3000 contains an extensive toolset for designing outdoor living areas.


In this chapter, you will learn how to design multi-story and multi-level decks, including options for handrails, skirt trim and steps.



## Adding a Deck

Adding a deck is a great way to add living space to your home. With Punch! AS3000 you can build deck sections on the fly, with or without railings. All sections can be altered if you change your mind in the middle of the design process. For information on precision placement using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To draw a deck

- 1 On the Deck Plan tab, click a Deck Tool. 
- 2 Click on the design window to define the start point of the deck. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the deck. Notice that dimensions appear as you draw.



- 3 Click and move the pointer to the next corner point. Repeat until you have completely drawn the deck.

### To move a deck

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck you want to move.
- 3 Click again, hold down the mouse button and drag the deck to the new location.

### To reshape a deck

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck you want to reshape.
- 3 Click a corner point, hold down the mouse button and drag.

### To remove a deck



- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck you want to remove.

- 3 Press the DELETE key on the keyboard. The deck is removed from your plan.

## Calculating Square Footage of a Deck

With just three mouse clicks, you can quickly estimate the square footage for an area of deck. This feature is useful when calculating the cost of deck material.


### To calculate the square footage of a deck

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the side of the deck area you want to calculate, then click Calc. Area on the Deck Properties Bar. 
- 3 The calculation is displayed in the space under the Calc. Area button.

## Changing the Deck Height

Creating multi-story and multi-level decks is easy. With just a few mouse clicks, you can design a very elaborate and elegant deck.

### To change deck height

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck you want to raise or lower to select it.
- 3 On the Properties Bar, in the Deck Height dialog box, type the height, in inches. A positive number raises the deck, while a negative number lowers it. 

**Note:** Fractions of inches are entered in decimal form.

## Editing Skirt Trim Options

By default, Skirt Trim is included on all sides of the deck. In addition to including skirt trim on only the sides you want, you can customize it by applying colors or materials. For more information on color and material, see the chapter titled “Working with LiveView”, which begins on page 127.

**To remove skirt trim**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck where you want to remove skirt trim, then on the Deck Properties bar, click to uncheck Skirting.



**Note:** To select more than one side of your deck, hold the SHIFT key down, while clicking sides.

**Editing Handrail Options**

With Punch! AS3000 you can easily customize deck options. By default, handrail height is 36" and baluster spacing is set to 6".

**To remove handrails**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck to select it. The Deck Properties bar is displayed.



**Note:** To select more than one side of your deck, hold the SHIFT key down while clicking sides.

- 3 Uncheck the Include Handrail checkbox.

**To change handrail height**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck you want to customize.
- 3 On the Properties Bar, in the Handrails Height dialog box, type the height, in inches.

**To change baluster spacing**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the side of the deck you want to customize.
- 3 On the Properties Bar, in the Handrails Baluster Spacing dialog box, type the spacing, in inches.

**Editing Step Options**

Using Punch! AS3000 you can add steps to any side of your deck and customize them to meet your needs. By default, steps are added to the center of the deck side, but can be moved easily into any position.

**To add steps**

- 1 On the Standard toolbar, click the Selection Tool.

- 2 Click the side of the deck where you want to add steps.
- 3 On the Deck Steps Properties bar, click Insert New. The steps will be inserted in the middle of the selected side.

**To move steps**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the steps you want to move.
- 3 Click again, hold down the mouse button and drag the steps to the new location.

**To resize steps by clicking-and-dragging**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click to select the steps you want to resize.
- 3 Click an end point of the steps, hold down the mouse button and drag to resize.

**To resize steps by a specific measurement**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the steps you want to resize. The Step Properties bar is displayed.
- 3 Type the new width, in inches.

**To change the step height**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the steps you want to alter. The Step Properties bar is displayed.
- 3 Type the new height, in inches.

**Note:** This is especially useful when designing multi-level decks, when you do not want the steps to reach the ground, just the next deck level.

**To edit handrail placement**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the steps you want to alter. The Step Properties bar is displayed.
- 3 Click to uncheck the checkbox next to Handrails on Left (or Right). The handrails on the selected side will be removed.

**To remove steps**


- 1 On the Standard toolbar, click the Selection Tool.

- Click the steps to select them.
- Press the DELETE key on the keyboard. The steps are removed from your plan.


## Adding Custom Railings

Customizing railings is easy with Punch! AS3000; you can simply add railings to any side of your deck.

### To draw a straight railing

- On the Deck Plan tab, click the Railing Tool. The Railing Properties bar is displayed. 
- Click on the design window to define the start point of the Railing. A rubber-band Railing with dimensions is displayed and follows the pointer.
- Extend the Railing to the location you want, then right-click to end drawing mode.
- (optional) Press and hold the SHIFT key while drawing to release the 15 degree constraint.

### To draw a curved railing

- On the Deck Plan tab, click the Curved Railing Tool. The Railing Properties bar is displayed. 
- Click on the design window to define the start point of the railing. A rubber-band Railing with dimensions is displayed and follows the pointer.

**Note:** The railing will appear angular as it is drawn, but will curve after the next point is set.

- (optional) Press and hold the SHIFT key while drawing to constrain railing to a perfect arc.

## Modifying a Custom Railing

Once you have drawn a railing, you can modify features and location to suit your needs. Using Punch! AS3000 you gain total control over railing handrail height, baluster spacing and railing posts.

### Customizing railing features

- On the Standard toolbar, click the Selection Tool.
- Click the railing you want to customize. The Railing Properties bar is displayed.
- (optional) Type a new handrail height.
- (optional) Type a new baluster spacing.
- (optional) Check whether railing posts are wanted.



### Moving a railing

- On the Standard toolbar, click the Selection Tool.
- Click the railing you want to reposition.
- Click again, hold down the mouse button and drag the railing to the new location.

**Note:** For more information on making precision movements using Snaps, see the chapter titled “Snaps and Annotations”, which begins on page 19.

### To copy and paste a railing

- On the Standard toolbar, click the Selection Tool.
- Click the railing you want to copy.
- Click Copy on the Edit menu or press CTRL+C on your keyboard.
- Click Paste on the Edit menu, or press CTRL+V on the keyboard. The railing you copied is displayed.
- Click again, hold down the mouse button and drag the new railing into position.

### Resizing a railing

- On the Standard toolbar, click the Selection Tool.
- Click the railing you want to resize.
- Click on an end point of the railing, hold down the mouse button and drag. The railing is resized.


### Removing a railing

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the railing you want to remove.
- Press the DELETE key on the keyboard. The railing is removed from your plan.

## Placing a Custom Staircase


In addition to the Add Steps feature, Punch! AS3000 gives you the option of easily drawing custom staircases.

### To draw a straight staircase

- On the Deck Plan tab, click the Straight Staircase Tool. The Staircase Properties bar is displayed. 
- Click on the design window to define the start point of the staircase. A rubber-band staircase with dimensions is displayed and follows the pointer.
- Extend the staircase to the location you want, then right click to end drawing mode.

- (optional) Press and hold the SHIFT key while drawing to release the 15 degree constraint.

### To draw a curved staircase

- On the Deck Plan tab, click the Curved Staircase Tool. The Staircase Properties bar is displayed. 
- Click and release on the design window to define the start point of the staircase. A rubber-band staircase with dimensions is displayed and follows the pointer.
- Move in the direction you want the stairs to rise, then click to place the staircase.
- (optional) Press and hold the SHIFT key while drawing to constrain stairs to a perfect arc.

## Modifying a Custom Staircase

Once you have drawn a staircase, you can modify features and location to suit your needs. With Punch! AS3000 you have total control over stairway width, riser and tread dimensions and handrail height and placement.

### Customizing staircase features

- On the Standard toolbar, click the Selection Tool.
- Click the staircase you want to customize to select it. The Staircase Properties bar is displayed.
- (optional) Type a new staircase height and width.
- (optional) Check the radio button to add skirt walls.
- (optional) Type a new step height (riser).
- (optional) Type a step depth (tread).
- (optional) Specify handrail height and location, left or right as you are looking from bottom of staircase.



### Moving a staircase

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the staircase you want to reposition.
- Click again, hold down the mouse button and drag the staircase to the new location.

### Resizing a staircase


- On the Standard toolbar, click the Selection Tool.
- Click the center line of the staircase you want to resize.
- Click an end point or midpoint of the staircase, hold down the mouse button and drag.

### To copy and paste a staircase

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the staircase you want to copy.
- Click Copy on the Edit menu or press CTRL+C on your keyboard.
- Click Paste on the Edit menu, or press CTRL+V on the keyboard. The stairway you copied is displayed.


### Reversing the direction of a staircase

- On the Standard toolbar, click the Selection Tool.
- Right-click the center line of the staircase you want to alter.
- Click Reverse Staircase Direction on the pop-up menu that is displayed. The direction of the staircase is reversed.

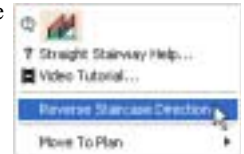

**Note:** This works for both curved and straight staircases.

### Removing a staircase

- On the Standard toolbar, click the Selection Tool. 
- Click the center line of the staircase you want to remove.
- Press the DELETE key on the keyboard. The stairs are removed from your design.





# ***Landscape Plan Tab***

From simply drawing your property line to adding a flower bed near your front door to designing an elaborate pool area, Punch! AS3000 contains an extensive toolset to help you design your outdoor living areas.


In this chapter, you will learn to recreate your lot's topography, create flower beds and other landscapes using flowers, shrubs and trees, add a berm or a pond and add pathways and fencing to your home plan.




## Defining the Property Line

If you are working in a confined or unusually-shaped area, you may want to define the property lines. The property line will only appear in the 2D design window.


### To define the property line

- 1 On the Landscape Plan tab, click the Property Line Tool. 
- 2 Click on the design window to define the start point of the property line. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the property line. Notice that dimensions appear as you draw.

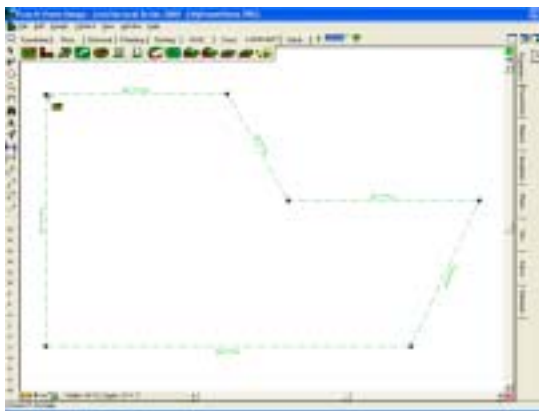

- 3 Click and move the pointer to the next corner point. Repeat until you have completely drawn the property line.
- 4 Right click to end drawing mode.

### To edit the property line

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the property line to select it.
- 3 Click a corner point of the property line, hold down the mouse button and drag.
- 4 Click the next selection point, hold down the mouse button and drag.


### To remove the property line

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the property line to select it.
- 3 Press the DELETE key on the keyboard. The property line is removed from your design.

## Calculating Square Footage of the Property

You can easily calculate the square footage contained within the property lines you draw.

### To calculate the square footage


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the property line to select it; then click Calc. Area on the Properties Bar. 


**Note:** The calculation is displayed in the space under the Calc. Area button.

## Adding a Ground Fill Region


From simple, rectangular entry ways and flower beds to elaborate planting areas, Punch! AS3000 makes designing them easy. You can design flower beds to flawlessly integrate with your home design.

### To draw ground fill region


- 1 On the Landscape Plan tab, click the Ground Fill Tool. 
- 2 Click on the design window to define the start point of the ground fill region. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the ground fill region. Notice that dimensions appear as you draw.

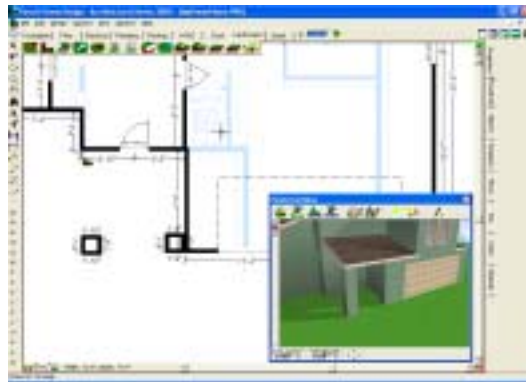

- 3 Click and move the pointer to the next corner point. Repeat until you have completely drawn the ground fill region.

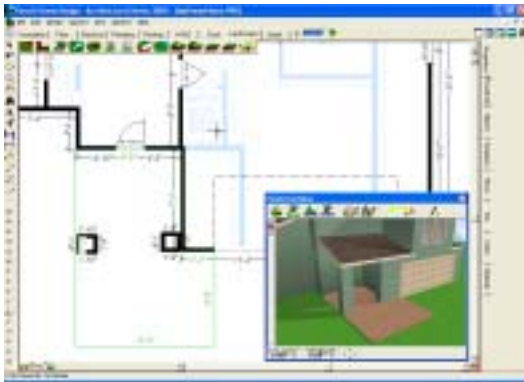

- 4 Right click to end drawing mode.
- 5 (optional) Drag and drop materials onto the region.

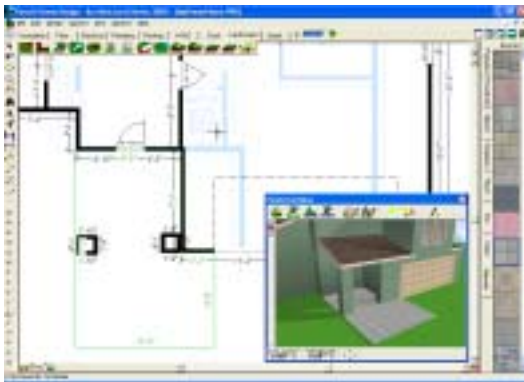

### To reshape a ground fill region

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a side of the ground fill region you want to reshape.
- 3 Click a selection point of the ground fill region, hold down the mouse button and drag.
- 4 Click the next selection point, hold down the mouse button and drag.

### To remove a ground fill region

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the ground fill region you want to remove.
- 3 Press the DELETE key on the keyboard. The ground fill region is removed from your design.

## Calculating Square Footage of a Fill Region

With Punch! AS3000, you can quickly estimate the square footage for a fill area. This estimate will be useful when calculating the amount of mulch material.

### To calculate the square footage of a fill region

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the fill region to select it; then click Calc. Area on the Properties Bar.




**Note:** The calculation is displayed in the space under the Calc. Area button.

## Adding Berms

Some of the most interesting landscaping will be created when you change the topography by adding berms (hills), swales (valleys) or ponds to your yard.

### To add a berm


- 1 On the Landscape tab, click the Curved Topography Tool. The Topo Properties bar is displayed.
- 2 (optional) Type the new elevation in the Elevation dialog box.
- 3 Click on the design window to define the start point of the berm. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.

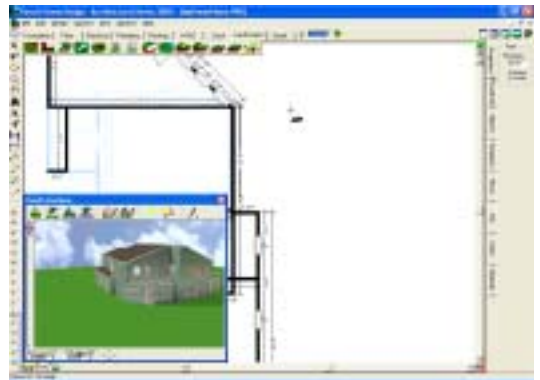

- 4 Click and move the pointer to the next point. Repeat until you have completely drawn the berm.
- 5 Right click to end drawing mode. Notice that the lines will appear angular as they are drawn, but will curve after the second mouse click.



**Note:** By drawing gradually smaller areas or overlapping areas of differing heights, you can create any height and shape of berm.

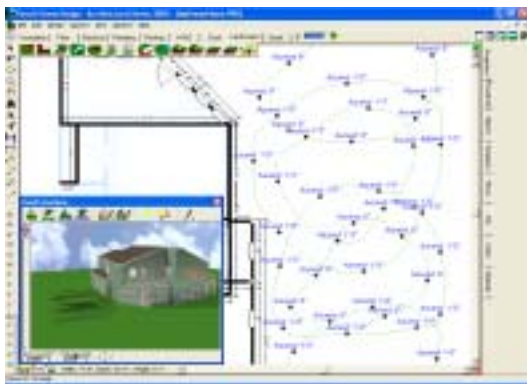

### To reshape a berm

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the area you want to reshape.
- 3 Click a corner point of the area, hold down the mouse button and drag.
- 4 Click the next corner point, hold down the mouse button and drag.

### To remove a berm


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Hold the mouse button down as you drag a region selection around the berm you want to remove.
- 3 Press the DELETE key on the keyboard. The berm is removed from your design.

## Adding Fill

You can use the Fill tool to show mulch around trees or shrubs or to add a pond or stream to your landscaping.

### To mulch around a tree

- 1 On the Landscape tab, click the Fill Tool.
- 2 Click on the design window, hold down the mouse button and drag.
- 3 Release the mouse button.

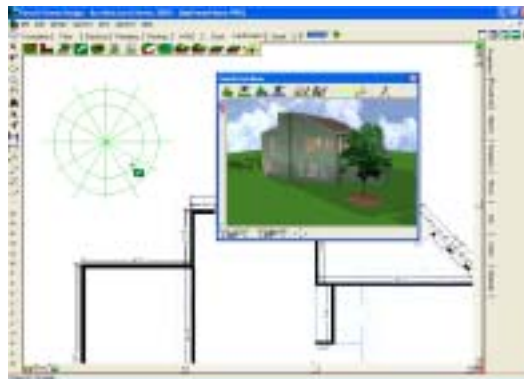

- 4 (optional) Move the fill area into position, if necessary.

**Note:** By default, mulch material will be applied to the shape you drew. To apply different mulch material, see “To apply material” on page 146.

### To add a pond

- 1 On the Landscape tab, click the Fill Tool.
- 2 Click on the design window, hold down the mouse button and drag.



- 3 Release the mouse button.


- Click the Materials Toolbar.




- Click the arrow to the right of the word Materials above the Preview Bar and select Mulch.
- Scroll to view the available materials until you locate the water textures.
- Drag and drop the water texture onto the pond in the 3D LiveView window.



### To reshape a pond

- On the Standard toolbar, click the Selection Tool. 
- Click the pond you want to reshape.
- Click a corner point of the pond, hold down the mouse button and drag.
- Click the next corner point, hold down the mouse button and drag.
- Repeat until needed shape is achieved.

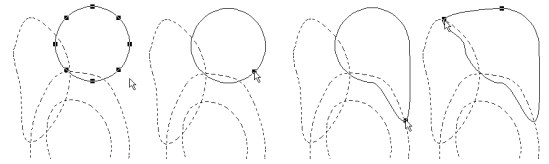



### To remove a pond


- On the Standard toolbar, click the Selection Tool.
- Hold the mouse button down as you drag a region selection around the pond you want to remove.
- Press the DELETE key on the keyboard. The pond is removed from your design.

## Drawing Sidewalks, Pathways or Driveways

In Punch! AS3000 you can design sidewalks, pathways and driveways using the same Tool. Once a pathway is drawn, you can customize it by applying any material to suit your needs. For more information on color and material, see the chapter titled “Working with LiveView”, which begins on page 127.

### To add a pathway

- On the Landscape Plan tab, click the Pathway Tool. 
- (optional) Type a new width in the dialog box on the Properties bar. 
- Click on the design window to define the start point of the pathway. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.
- Click and move the pointer to the next point. Repeat until you have completely drawn the pathway.

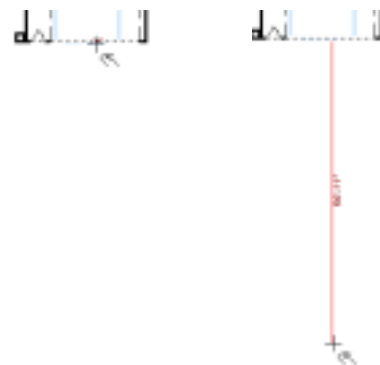

- Right-click to end drawing mode.

**Note:** While drawing, curved pathways will appear angular, but will curve after the second mouse click.

### To straighten a curved pathway

- On the Standard toolbar, click the Selection Tool.
- Click the pathway you want to straighten.
- Click the Straight radio button on the Properties bar.



### To curve a straight pathway

- On the Standard toolbar, click the Selection Tool.
- Right-click the pathway you want to curve.
- Click the Curved radio button on the Properties bar.

### To move a pathway

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the pathway you want to move.
- Click again, hold down the mouse button and drag the pathway to the new location.



### To reshape a pathway

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the pathway you want to reshape.
- Click a selection point of the pathway, hold down the mouse button and drag.
- Click the next selection point, hold down the mouse button and drag.

### To change the width of a pathway

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the pathway to select it. The Pathway Properties bar is displayed.
- Type a new width in inches, or feet and inches separated by a hyphen.



### To remove a pathway

- On the Standard toolbar, click the Selection Tool.
- Click the center line of the pathway you want to remove.
- Press the DELETE key. The pathway is removed from your design.

## Calculating Square Footage of a Pathway

With Punch! AS3000, you can automatically calculate the square footage for a pathway, sidewalk or driveway. This estimate will be useful when calculating the amount of material needed to build them.

### To calculate the square footage

- On the Standard toolbar, click the Selection Tool.
- Click the fill region to select it; then click Calc. Area on the Properties Bar.




**Note:** The calculation is displayed in the space under the Calc. Area button.

## Edging an Area

Punch! AS3000 makes it easy to place edging around flower beds or along walkways. Once drawn, you can apply colors or materials to the edging so it blends with your home plan's color scheme. For more information on color and material, see the chapter titled "Working with LiveView", which begins on page 127.


### To draw straight edging

- On the Landscape Plan tab, click the Edging Tool.
- Click on the design window to define the start point of the edging. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.

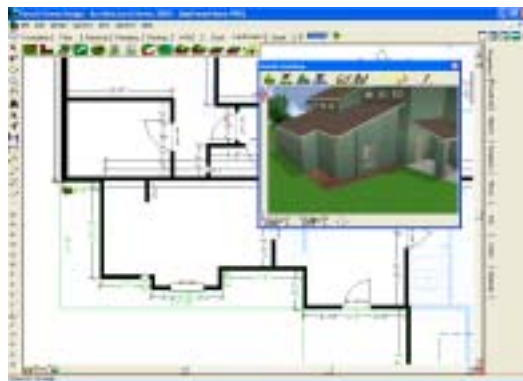




- 3 Move the pointer to the next point. Right click to end drawing mode.

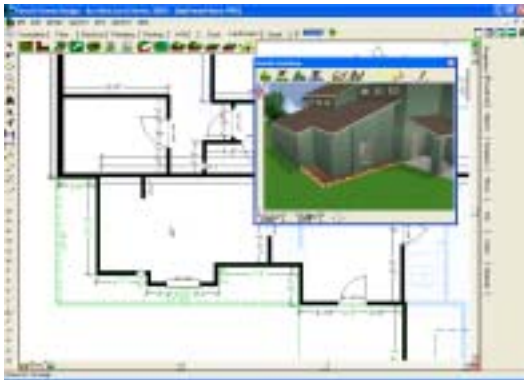

**Note:** It is easiest to draw straight edgings as multiple single pieces.

### To draw curved edging

- 1 On the Landscape Plan tab, click the Edging Tool. 
- 2 Click on the design window to define the start point of the edging. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.
- 3 Click and move the pointer to the next point. Repeat until you have completely drawn the edging.
- 4 Right click to end drawing mode.

**Note:** While drawing, the lines will appear angular, but will curve after the second mouse click.

### To move edging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the edging segment you want to move.

- 3 Click again, hold down the mouse button and drag the edging to the new location.

### To reshape edging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the edging you want to reshape.
- 3 Click a selection point of the edging, hold down the mouse button and drag.
- 4 Click the next selection point, hold down the mouse button and drag.


### To remove edging


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the edging you want to remove.
- 3 Press the DELETE key on the keyboard. The edging is removed from your design.

## Drawing Fences and Gates


With Punch! AS3000 you can draw fences and gates with ease. Once a fence or gate is drawn, you can customize it by applying any material. For more information on color and material, see the chapter titled “Working with LiveView”, which begins on page 127.

### To add a fence

- 1 On the Landscape Plan tab, click the Fence Tool.  The Properties bar displays available fence styles.
- 2 Click the fence style to use.
- 3 Click on the design window to define the start point of the fence. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.

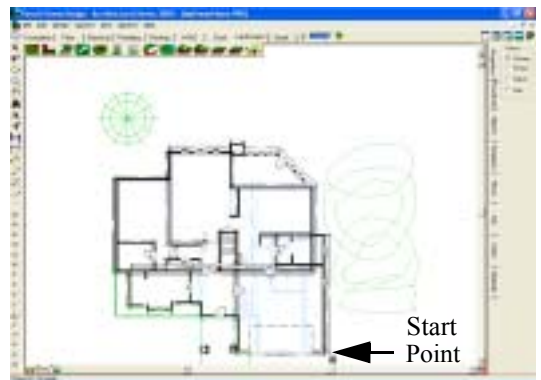

- Click and move the pointer to the next point. Repeat until you have completely drawn the fence.

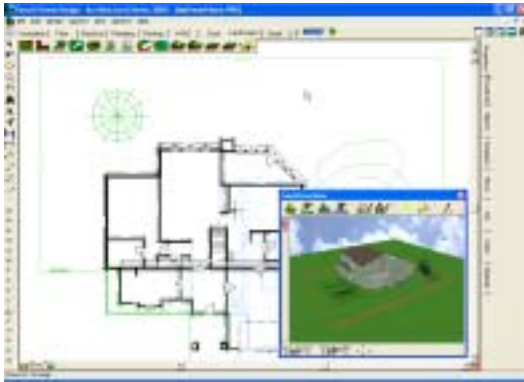

- Right-click to end drawing mode.


**To move a fence**

- On the Standard toolbar, click the Selection Tool.
- Click the fence you want to move.
- Click again, hold down the mouse button and drag the fence to the new location.


**To reshape a fence**

- On the Standard toolbar, click the Selection Tool.
- Click the fence you want to reshape.
- Click a selection point of the fence, hold down the mouse button and drag.
- Click the next selection point, hold down the mouse button and drag.

**To remove a fence**

- On the Standard toolbar, click the Selection Tool. 
- Click the fence you want to remove.
- Press the DELETE key on the keyboard. The fence is removed from your design.

**To add a gate**

- On the Landscape Plan tab, click the Gate Tool.  The Properties bar displays available gate widths.
- (optional) Type a new gate width in the dialog box on the Properties bar.
- On the Design window, click the fence where you want a gate placed.




**Note:** The style of the gate will always conform to the fencing material; i.e., if a gate is placed on a privacy fence, the gate will be a privacy fence gate.

**To move a gate**

- On the Standard toolbar, click the Selection Tool.
- Click the gate you want to move.
- Click again, hold down the mouse button and drag the gate to the new location.


**To resize a gate**

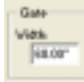- On the Standard toolbar, click the Selection Tool.
- Click the gate you want to resize.
- Type a new width in the Gate Properties dialog box. 
- (optional) Click an end point of the gate, hold down the mouse button and drag.
- Release the mouse button. The gate is resized.

**Drawing Retaining Walls**


Punch! AS3000 makes it easy to add interest and functionality to your outdoor living areas by adding retaining walls. Retaining walls can be used to create raised planting beds, to line an above-ground swimming pool and so on.

**To draw a retaining wall**

- On the Landscape tab, click the Retaining Wall Tool. 
- Click on the design window, hold down the mouse button and drag. Notice that the retaining wall follows the pointer and automatically displays the length.



- 3 Release the mouse button when you reach the wall length you want.
- 4 Repeat steps 2 and 3, drawing individual walls until the retaining wall is complete.

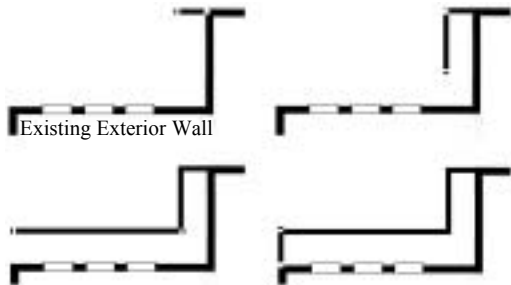

**Note:** Drawing is constrained to 15 degree angles; to release this constraint, hold down the SHIFT key while drawing.

**Note:** If you don't see automatic dimensioning while you draw, it may be turned off. To enable automatic dimensioning, click to check Automatic Dimensioning on the Options menu.

### To change wall height

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a wall segment in your drawing to select it. The Wall Properties bar is displayed.
- 3 Type a new height in the Wall Style section of the Wall Properties bar.




**Note:** Measurements are measured in inches, or in feet and inches, separated by a hyphen.

## Placing Sprinkler Heads


Punch! AS3000 will be useful to define where the sprinkler heads of an outdoor water system should be placed.

### To place a sprinkler head

- 1 On the Landscape tab, click the Sprinkler Tool. 
- 2 On the Design window, click to define center of the sprinkler area and drag. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw, measuring the radius of the sprinkler area.



- 3 Hold the mouse button down and drag until the degree of coverage is reached.
- 4 Release the mouse button.

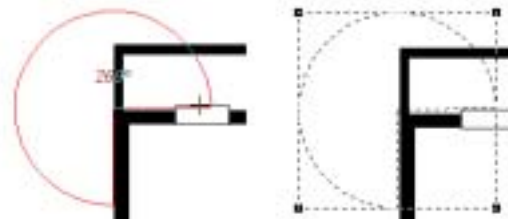


- 5 Click to set the swing of the sprinkler head.



**Note:** By placing a series of sprinkler heads, with various coverages, you will achieve a complete watering pattern.

**To move a sprinkler head**

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the sprinkler head you want to move.
- 3 Click again, hold down the mouse button and drag the sprinkler head to the new location.




**To remove a sprinkler head**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the sprinkler head you want to remove.
- 3 Press the DELETE key on the keyboard. The sprinkler head is removed from your design.

**Altering Topography**


With the five topography tools you will be able to approximate your actual lot. From earth-contact homes to split front-to-back lots, you can define overall slope, recreate the rise and fall, then excavate the footprint of your floor plan with ease.

**To define slope**

- 1 On the Landscape tab, click the Slope Lot Tool. 
- 2 (optional) On the Topography Slope Properties bar, type a different Descent Angle in the dialog box. 
- 3 Click on the design window, hold down the mouse button and drag. 




- 4 Release the mouse button.

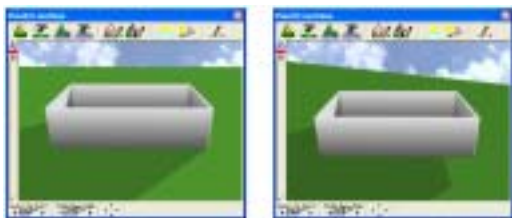




**Note:** The arrow signifies slope. Changing where it is placed on the design window will impact how the slope is displayed in the 3D LiveView window.

**To change slope**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the design window, click the arrow signifying slope to select it. The Topography Slope Properties bar is displayed. 
- 3 Type the new descent angle in the dialog box. The slope is altered.


**To define multiple slope sections**

- 1 On the Landscape tab, click the Slope Lot Section Tool. 
- 2 (optional) On the Topography Slope Properties bar, type a different Descent Angle in the dialog box. 
- 3 Click on the design window, hold down the mouse button and drag.
- 4 Release the mouse button.

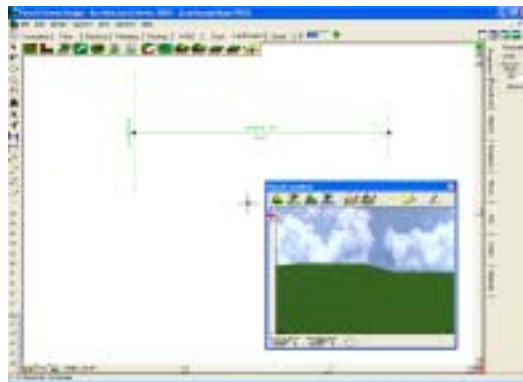

- 5 Repeat steps 3 and 4 until the topography is drawn to your lot's specifications.

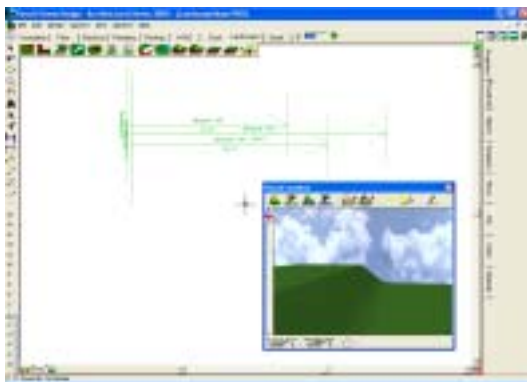

**Note:** Effect of multiple arrows is cumulative. You can render a steep slope by drawing several slopes.



**Note:** The arrow signifies slope. Changing where it is placed on the design window will impact how the slope is displayed in the 3D LiveView window.



### To increase or decrease elevation

- 1 On the Landscape tab, click a Topography Tool. 
- 2 (optional) On the Topography Elevation Properties bar, type a different elevation in the dialog box. 
- 3 Click on the design window to define the start point of the elevated or excavated area. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.
- 4 Click and move the pointer to the next point. Repeat until you have completely drawn the elevated or excavated area.



- 5 Right click to end drawing mode.

**Note:** While drawing with the Curved Topography Tool, the lines will appear angular, but will curve after the second mouse click.


### To reshape an elevated area

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the area you want to reshape.
- 3 Click a corner point of the area, hold down the mouse button and drag.
- 4 Click the next corner point, hold down the mouse button and drag.

### To remove an elevated area

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Hold the mouse button down as you drag a region selection around the area you want to remove.
- 3 Press the DELETE key on the keyboard. The area is removed from your design.

### To excavate an area

- 1 On the Landscape tab, click the Excavate Topography Tool. 
- 2 Click on the design window to define the start point of the area to be excavated. A rubber-band line is displayed and follows the pointer. Notice that dimensions appear as you draw.



**Note:** Drawing is constrained to 15 degree angles, to release this constraint hold down the SHIFT key while drawing.

- 3 Click and move the pointer to the next corner point. Repeat until you have completely drawn the area.
- 4 Right click to end drawing mode.
- 5 (optional) On the left side of the screen, drag the Elevation Slider down to the level needed for your excavation.

**Note:** Default elevation is -3' (negative three feet).

# ***Detail Plan Tab***

Punch! AS3000 provides tools specifically for 2D drawing. Items drawn with these tools will not show up in the 3D LiveView window, unless converted to 3D entities. These tools make it easy to label your plan, from description blocks that are used to label what is being printed on each page to notations about square footage on each floor.

In addition, using the tools on the Detail Plan Tab, you will be able to easily convert imported DXF shapes to various “smart entities” like walls, stairways, flooring, property lines and so on.



## Drawing Rectangles and Squares

With Punch! AS3000, you can draw items that will appear only in the 2D design window. If you choose, these shapes can be converted to a variety of features, for instance walls, stairways, pathways, edging and so on.

Rectangles can be used as label boxes for your printed plans or can be converted to walls or flooring. Using the Snap tools, you can easily create and place these shapes before converting them into other features. For more information, see “Snaps and Annotations”, which begins on page 19.

### To draw rectangles and squares

- 1 On the Detail Plan tab, click the Rectangle Tool. The pointer changes to reflect drawing mode.




- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 (optional) Click the Method button to access a different drawing style, then select an option from the popup menu that is displayed.



**Note:** The four predefined drawing methods are draw rectangle from corner, draw rectangle from center, draw square from corner and draw square from center.

- 4 Click on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer. Dimensions are displayed as you draw.
- 5 Hold the mouse button down as you extend the rectangle to the size you want.

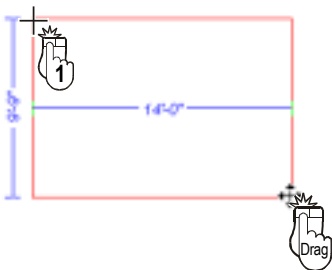

- 6 Release the mouse button.

## Drawing Circles and Ovals

You can draw circles and ovals, which can be converted to curved walls, curved stairways, groundfill regions and so on.



### To draw circles and ovals

- 1 On the Detail Plan tab, click the Circle Tool. The pointer changes to reflect drawing mode.
- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 (optional) Click the Method button to access a different drawing style, then select an option from the popup menu that is displayed.



**Note:** The four predefined drawing methods are draw oval from corner, draw oval from center, draw circle from corner and draw circle from center.

- 4 Click on the design window to define the start point of the shape. A rubber-band shape is displayed and follows the pointer. Dimensions are displayed as you draw.
- 5 Hold the mouse button down as you extend the shape to the size you want.

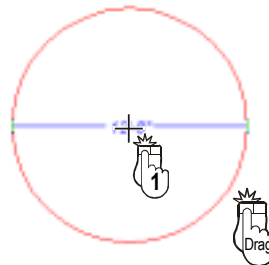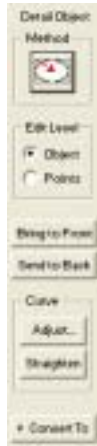

- 6 Release the mouse button.

## Drawing Lines

You can draw lines that can in turn be converted to walls, stairs, ducts, stiffener beams, edging, pathways and so on.

### To draw lines


- 1 On the Detail Plan tab, click the Line Tool. The pointer changes to reflect drawing mode.



- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 (optional) Click the Method button to access a different drawing style, then select an option from the popup menu that is displayed.

**Note:** The two predefined drawing methods are draw from endpoint and draw from centerpoint.

- 4 Click on the design window to define the start point of the line. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- 5 Hold the mouse button down as you extend the line to the length you want.

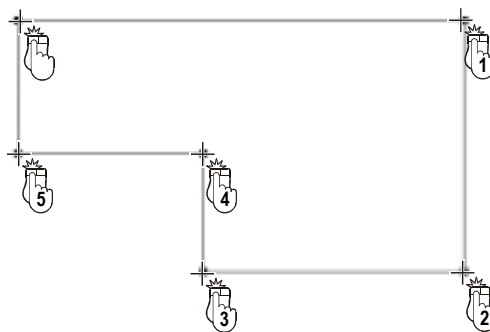

- 6 Right click to end drawing mode.

## Drawing Arcs

With Punch! AS3000 you can draw arcs that can be easily converted into curved walls, edging, stairs and so on.


### To draw an arc

- 1 On the Detail Plan tab, click the Arc Tool. The pointer changes to reflect drawing mode.
- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 (optional) Click the Method button to access a different drawing style, then select an option from the popup menu that is displayed.



**Note:** The two predefined drawing methods are free-form arc and 90 degree arc.

- 4 Click on the design window to define the start point of the arc. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- 5 Hold the mouse button down as you extend the arc to the size you want.

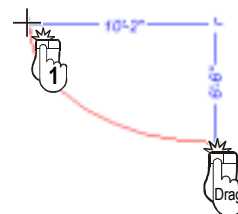

- 6 Release the mouse button.

## Drawing Polygons

You can draw open or closed polygons that can be easily converted into walls, roof sections, floors or floor cutouts, topography and so on.


### To draw a polygon

- 1 On the Detail Plan tab, click the Polygon Tool. The pointer changes to reflect drawing mode.
- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 (optional) Click the Method button to access a different drawing style, then select an option from the popup menu that is displayed.



**Note:** The two predefined drawing methods are closed polygon and open polygon.

- 4 Click on the design window to define the start point of the polygon. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- 5 Click and move the mouse to the next corner point. Repeat until you have drawn the necessary shape.

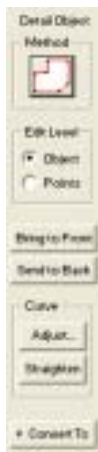


## Drawing Circular Arcs


With Punch! AS3000, you can draw arcs that can be easily converted into curved walls, edging, stairs and so on.

### To draw a circular arc

- 1 On the Detail Plan tab, click the Circular Arc Tool. The pointer changes to reflect drawing mode.
- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 Press the mouse button on the design window to define the center point of the circular arc. A rubber-band line is displayed and follows the pointer. This line signifies the radius of your arc.

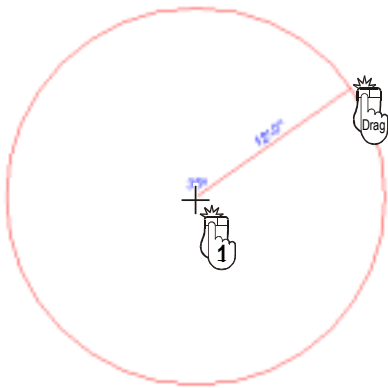

- 4 Hold the mouse button down and extend the radius to the size you want. Dimensions appear in the position readout bar as you draw.
- 5 Release the mouse button.
- 6 Move the mouse clockwise or counter-clockwise to create the shape you want.

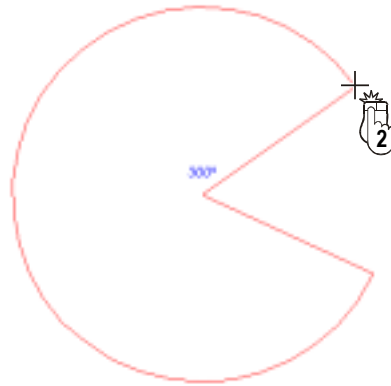



- 7 Click to end drawing mode.

## Drawing Multigons

You can draw equal-sided decks, floors, even treehouses with the easy-to-use Multigon Tool and the Convert To feature. For more information, see “Converting Details to Intelligent Features”, which begins on page 116.

### To draw a multigon

- 1 On the Detail Plan tab, click the Multigon Tool. The pointer changes to reflect drawing mode.
- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 On the Properties bar, type the number of equal sides you want to draw.
- 4 Click on the design window to define the start point of the multigon. A rubber-band multigon is displayed and follows the pointer.
- 5 Hold the mouse button down as you extend the multigon to the size you want.

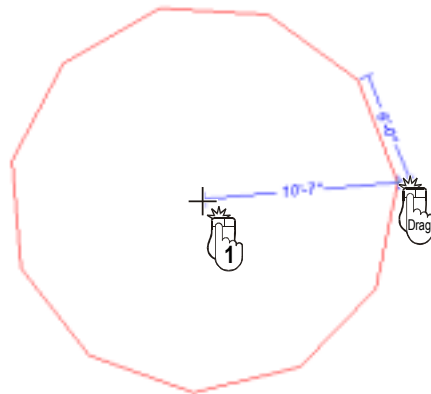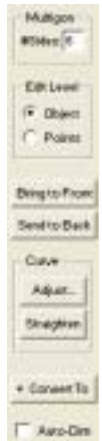



- 6 Release the mouse button.

**Note:** To change the multigon's size, but constrain its orientation, press CTRL while drawing.

## Drawing Curves

You can draw intricate curved flowerbeds and walls, among many other things, using the Curve Tool and the Convert To feature of Punch! AS3000.

### To draw a curve

- 1 On the Detail Plan tab, click the Curve Tool. The pointer changes to reflect drawing mode.
- 2 The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- 3 (optional) Click the Method button to access a different drawing style, then select an option from the popup menu that is displayed.

**Note:** The two predefined drawing methods are closed curve and open curve.

- 4 Click on the design window to define the start point of the curve. A rubber-band curve is displayed and follows the pointer.
- 5 Click and move the mouse to the next point. Repeat until you have drawn the needed shape.

**Note:** Although the lines will initially appear to be angular, they will become curved when you end drawing mode.

- 6 Double-click to end drawing mode.



## Using Rules and Fills

You can change the thickness (weight) of the lines or fills of the shapes drawn with tools on the Details Plan tab.


### To change the line weight

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the Rule Weight icon. The Rule Weight drop-down box is displayed.
- 4 Click a weight on the drop-down box. The weight of the rule outlining the detail shape is changed.
- 5 (optional) Click Other to define a custom weight.




### To change the line style

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the Rule Style icon. The Rule Style drop-down box is displayed.
- 4 Click a style on the drop-down box. The style of the rule outlining the detail shape is changed.

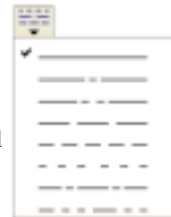


### To set the fill to transparent

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the Transparent Fill icon. The shape is transparent.

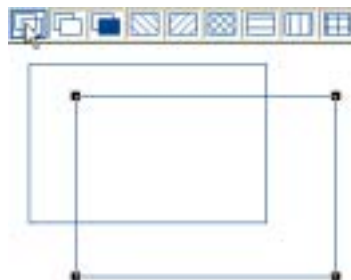

### To set the fill to white


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the White Fill icon. The shape is filled with white.

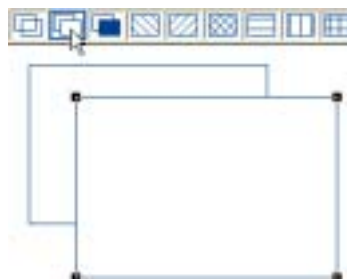

### To set the fill to solid


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.

- On the Detail Plan tab, click the Solid Fill icon. The shape is filled with a solid color.

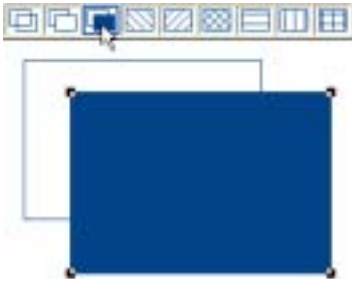

### To set the fill to a pattern

- On the Standard toolbar, click the Selection Tool.
- Click a shape to select it.
- On the Detail Plan tab, click one of the Pattern Fill icons. The shape is filled with that pattern.

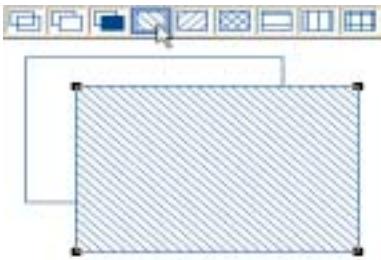

### To control layering of detail shapes

- On the Standard toolbar, click the Selection Tool.
- Click a shape to select it.
- The Detail Object Properties bar is displayed, showing the customizable options for this shape.
- Click the Bring to Front button on the Properties bar, to place the selected shape on the top of the other shapes.
- (optional) Click the Send to Back button on the Properties bar, to place the selected shape behind the other shapes.




## Converting Details to Intelligent Features

With Punch! AS3000, you can draw items that will appear only in the 2D design window or you can convert them to intelligent features. For example, you can convert a line to a fence, a rectangle to four exterior walls, a circle to a deck or even a circular stairway, and so on. There is virtually no limit

to what you can draw using this combination. Following are a few examples of what this powerful process can do!

### To convert a rectangle to your property line


- On the Standard toolbar, click the Selection Tool.
- Click a rectangle to select it.
- The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- Click the Convert To button on the Properties bar, then click Property Line on the pop-up menu.

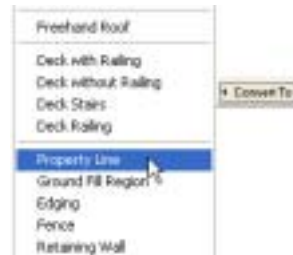


- The rectangle is converted to a property line.

### To convert an oval to a deck

- On the Standard toolbar, click the Selection Tool.
- Click an oval to select it.
- The Detail Object Properties bar is displayed, showing the customizable options for this tool.
- Click the Convert To button on the Properties bar, then click Deck without Railing on the pop-up menu.

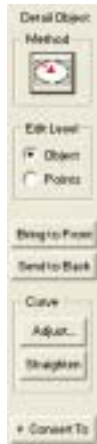


- The oval is converted to a deck.

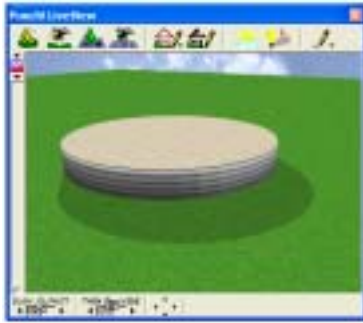

### Filling a shape with plants

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the Plants Tab. The Preview Bar will display plants available for placement.
- 3 At the top of the Preview Bar, click the down arrow next to “Plants” to display the plant category menu, then click to check the type of plants you want to place.
- 4 Use the scroll bar to view the remainder of the plant selections in the Preview Bar.
- 5 On the Preview Bar, click the plant you want to place.
- 6 Right-click a shape, then click Plant Fill on the pop-up menu that is displayed.

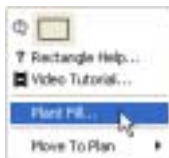

- 7 The Plant Fill dialog box is displayed.



- 8 Click the checkbox next to the option you want to use.
- 9 Type the plant spacing in the text box, then click OK.



### Editing Detail Shapes

Object-Level Editing is active by default. Object-Level Editing, along with Point-Level Editing, controls how your edits impact your object. If you are in object selection mode, changes affect the object as a whole. If you are working in

point selection mode, each edge of the object is treated separately as you edit.

#### To use object selection mode

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a Detail shape to select it. The Properties bar for this shape is displayed.
- 3 On the Properties bar, click Object in the Edit Level section.
- 4 Click the object and drag it into the new position or shape.

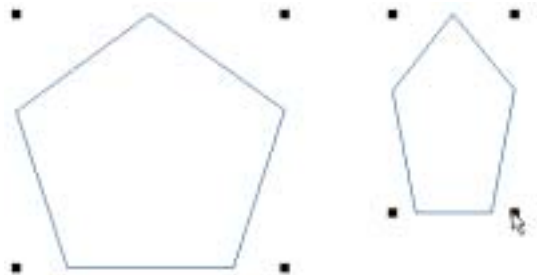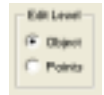

- 5 Release the mouse to end.

#### To use point selection mode

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a Detail shape to select it. The Properties bar for this shape is displayed.
- 3 On the Properties bar, click Point in the Edit Level section.
- 4 Click a point on the object and drag it into the new position to reshape it.




- 5 Release the mouse to end.

## Adding Smoothing Tension

To further control the look of the shapes drawn with any tool on the Detail Plan tab, you have control over the degree of smoothing tension applied to them. Clicking Straighten on the Properties bar will easily create angular shapes; while clicking Adjust allows you to specify precise smoothing tension. Specifying 0 in the dialog box results in no tension being applied, while specifying 10 will cause an exaggerated curve.

### To change smoothing tension

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a Detail shape to select it. The Properties bar for this shape is displayed.
- 3 On the Properties bar, click Adjust in the Curve section. The Smooth dialog box is displayed.

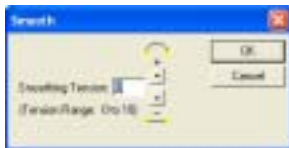

- 4 Type the amount of Curve Tension that you want. The Curve Tension you specified is applied.

Examples:


Unsmooth (0):



Curve Tension set at 3:



Curve Tension set at 6:

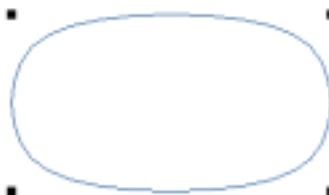

Curve Tension set at 10:



Part 5

# Customizing Your Drawing

Chapter 17: Editing Your Drawing .....	121
Chapter 18: Working with LiveView .....	127
Chapter 19: Personalizing Your Design .....	135



# ***Editing Your Drawing***

In addition to standard Windows commands like cut, copy, paste and delete, Punch! AS3000 includes more sophisticated modes of manipulating your design. You can copy or move objects, walls and so on, to different floors as well as between plan layers.


You can flip your entire design either vertically or horizontally to make it easy to view it from any angle or from any direction. In addition, you can move or rotate your entire floor plan at one time.

More advanced concepts are also covered in this chapter, such as rotating individual objects to custom fit them into your design and elevating objects using the Elevation Slider to achieve perfect placement. Learn to customize settings like nudge factor, so Punch! AS3000 works best for you.

## Editing Using Cut, Copy, Paste and Clear

Cut moves the selection to the Clipboard and deletes the original. Copy places a duplicate of the selection on the Clipboard. Paste places the contents of the Clipboard into your drawing. You can place the Clipboard contents as many times as necessary. Clear removes the selection.

### To edit using the cut command

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the selection you want to cut.
- 3 On the Edit menu, click Cut or press CTRL+X on the keyboard. The selection is removed to the Clipboard.

### To edit using the copy command

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the selection you want to copy.
- 3 On the Edit menu, click Copy or press CTRL+C on the keyboard. The selection is copied to the Clipboard.

### To edit using the paste command

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Edit menu, click Paste or press CTRL+V on the keyboard. The selection is copied from the Clipboard to the design window.

### To edit using the clear command

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the selection you want to cut.
- 3 On the Edit menu, click Clear or press DELETE on the keyboard. The selection is removed from your design.

## Using Undo

With Punch! AS3000, you can specify up to 50 levels of Undo, making it easy to recover your work. Bear in mind, the more levels of undo you specify, the more system resources will be used. To conserve system resources, set the undo level at the lowest level possible.

### To use undo

- On the Edit menu, click Undo or press CTRL+Z. The previous action is reversed.

### To turn off undo

- 1 On the Edit menu, click Undo Preferences, the Undo Preferences dialog box is displayed.



- 2 Click the Deactivate Undo (Faster) box, then click OK.

### To set undo parameters

- 1 On the Edit menu, click Undo Preferences, the Undo Preferences dialog box is displayed.
- 2 Type the number of undo levels you want to use; click OK.

### To use redo

- On the Edit menu, click Redo or press CTRL+Y. The previous action is reversed.

## Copying Objects to Different Floors

There may be times when you want multiple floors to contain duplicates. Copy to Floor leaves the object in its original position and places a duplicate where you define.

### To copy from one floor to another

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object or objects you want duplicated.
- 3 On the Edit menu, click Copy to Floor, click Copy to Floor, Upper Floor. Select Lower Floor if you want to copy the original down one level.



## Moving Objects to Different Floors


With Punch! AS3000 you can move selections between plan layers; Move to Floor deletes these objects from their original position.

### To move objects or features from one floor to another

- 1 On the Standard toolbar, click the Selection Tool.



- Click the object or objects you want moved. To select more than one object, press the SHIFT key while clicking objects.
- On the Edit menu, click Move to Floor, Upper Floor. Select Lower Floor if you want to move the original down one level.

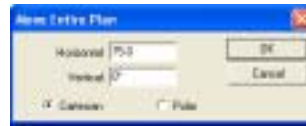

- Click either Cartesian or Polar, then type amount you want the plan moved in the appropriate text boxes.
- Click OK. The plan is moved based on the coordinates you specified.

**Note:** Coordinates are measured in inches or they can be measured in feet and inches, separated by a hyphen.

## Moving Features to Different Plans

With Punch! AS3000 you can move selections to different plan layers; Move to Floor deletes these objects from their original position. This will be useful if you want to place a story between two stories that you have drawn.

### To move features from one plan to another

- On the Standard toolbar, click the Selection Tool.
- Click the feature or object you want moved. To select more than one object, press the SHIFT key while clicking objects.
- On the Edit menu, click Move to Plan, then specify the plan where you want the feature to appear.
- (optional) Right-click the selection and click Move to Plan on the pop-up menu that is displayed, then click which plan. The selection is moved to a different plan.



## Rotating the Entire Floor Plan

At any point during the design process, you can rotate the entire plan. With just a couple of mouse clicks, you can see how your dream home will look facing a different direction on your lot.

### To rotate the entire floor plan

- On the Design menu, click Rotate Entire Plan. The Rotate Plan dialog box is displayed.



- Click either Degrees or Radians, then type the angle you want to rotate the plan in the Angle text box.
- Click OK. The plan is rotated based on the angle measurement you specified.

## Flipping the Entire Floor Plan

With Punch! AS3000 you can create a mirror image of your floor plan. It is easy to see how your plan will look from various angles and directions.

### To flip the floor plan vertically

- On the Design menu, click Flip Entire Plan, then select Vertical. The floor plan is flipped.



### To flip the floor plan horizontally

- On the Design menu, click Flip Entire Plan, then select Horizontal. The floor plan is flipped.

## Moving the Entire Floor Plan

At any point during the design process, you can move the entire plan. With just a couple of mouse clicks, you can see how your dream home will look on different parts of your lot.

### To move the entire floor plan

- On the Design menu, click Move Entire Plan. The Move Plan dialog box is displayed.

## Using Nudge

Once you've placed an object or feature, you can precisely move it into position using Nudge. Nudge utilizes the arrow keys to move selected objects or features a specified distance. Nudge works in tandem with the Snap Grid. To learn more about the Snap Grid, refer to "Using the Grid" on page 13.

### To adjust Nudge settings

- 1 On the Options menu, confirm there is a check next to Snap to Grid. This confirms that the Snap Grid is activated.
- 2 On the Options menu, click Grid Properties or press CTRL+G. The Grid Properties dialog box is displayed.



- 3 Enter, in inches, the Snap Grid distance you want to set. Click OK.
- 4 On the Edit menu, click Nudge, then click the direction (up, down, left, right) or use the arrow keys on your keyboard.

**Note:** When the "Snap to Grid" is turned off, Nudge moves the object or feature one pixel at a time instead of snapping to grid distance.



### To move a selection using the Nudge feature

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object or feature to select it.
- 3 On the Edit menu, click Nudge, then click the direction (up, down, left, right).
- 4 (optional) Use the arrow keys on your keyboard to nudge the object or feature.

## Rotating a Selection

Using the rotate feature, you can easily spin an object around any point. This is useful when you want to face an object in a different direction from which it was drawn. Using the Rotate tool you can freely rotate the selection, or you can specify the exact amount of rotation using the Rotate dialog box.

 
### To freely rotate an object

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the object, wall or feature you want to rotate.
- 3 On the Standard toolbar, click the Rotate Tool. 
- 4 Click the object, hold down the mouse button and move the pointer in the direction that you want the object to rotate. Degree of rotation will appear in the status bar as you draw. Press SHIFT to release the 45 degree constraint.
- 5 Release the mouse button.

**Note:** The item rotates around its center point.

### To rotate by specifying an amount

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object, wall or feature you want to rotate.
- 3 Right-click the selection and click Rotate on the pop-up menu that is displayed.




- 4 Type, in degrees or radians, the amount you want to rotate the object and click OK. The object is rotated.

## Customizing Floorplan Colors

Punch! AS3000 gives you the option of assigning custom colors to areas of your design. All floorplan colors can be changed by accessing the Options Menu.

### To assign a working floor color

- 1 On the Options menu, click Screen Colors, then click Working Floor Color. The Color matrix will appear.

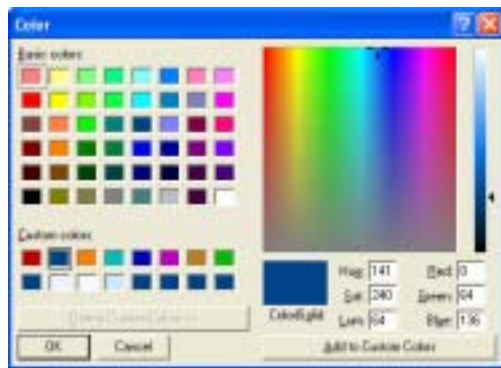

2 Click a color from the Basic Color list. Click OK.

**Note:** The Color|Solid preview box will display the chosen color.

3 (optional) Click a color from the Custom Colors list. Click OK.

4 (optional) Move the arrow to the right of the colorbar at the right of the Color dialog box. Click OK.

5 (optional) On the Color Spectrum box, click a color or click-and-drag the color marker. Click OK.

6 (optional) Type Hue, Saturation and Luminosity variables. Click OK.

7 (optional) Type Red, Green and Blue variables. Click OK.

### To assign an inactive floor color

1 On the Options menu, click Screen Colors, then click Inactive Floor Color. The Color matrix will appear.

2 Click a color from the Basic Color list. Click OK.

**Note:** The Color|Solid preview box will display the chosen color.

3 (optional) Click a color from the Custom Colors list. Click OK.

4 (optional) Move the arrow to the right of the colorbar at the right of the Color dialog box. Click OK.

5 (optional) On the Color Spectrum box, click a color or click-and-drag the color marker. Click OK.

6 (optional) Type Hue, Saturation and Luminosity variables. Click OK.

7 (optional) Type Red, Green and Blue variables. Click OK.

### To assign a background color

1 On the Options menu, click Screen Colors, then click Background Color. The Color matrix will appear.

2 Click a color from the Basic Color list. Click OK.

**Note:** The Color|Solid preview box will display the chosen color.

3 (optional) Click a color from the Custom Colors list. Click OK.

4 (optional) Move the arrow to the right of the colorbar at the right of the Color dialog box. Click OK.

5 (optional) On the Color Spectrum box, click a color or click-and-drag the color marker. Click OK.

6 (optional) Type Hue, Saturation and Luminosity variables. Click OK.

7 (optional) Type Red, Green and Blue variables. Click OK.

### To reset all colors

■ On the Options menu, click Screen Colors, then click Reset Colors. All colors will be reset to the default values.

## Elevating Objects

The elevate object command will be extremely useful. From “lifting” lamps onto tables to elevating planters and benches onto your deck, exact placement is easy.

### To elevate an object

1 On the Standard toolbar, click the Selection Tool.

2 Click the object, wall or feature you want to elevate.

3 On the Edit menu, click Elevate Object. The Elevate Object dialog box is displayed.



4 Type the amount you want to elevate the object and click OK. The object is elevated.

**Note:** To specifying an amount in inches you may use either 18 or 18". To specify an amount in feet and inches they must be separated by a hyphen, for instance 18-0, 8'-6" and so on. A single number like 20, 20" or even 20', will be understood as 20 inches.

5 (optional) The Float Above Topography switch causes objects to follow the lay of the land.

## Using Elevation Slider

With the Elevation Slider you can easily move selected items vertically. This feature makes it a snap to make sure windows, doors, plants and so on, are in exactly the position you want.


### To use the elevation slider

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object, wall or feature you want to elevate.
- 3 Click the Elevation Slider at the left side of your window and move the elevation control up or down until the object is in the correct position.
- 4 Release the mouse. The elevation of the object is changed.



### To set the working elevation


- 1 Right-click the Elevation Slider at the left side of your window and click Set Working Elevation from the pop-up menu that is displayed.

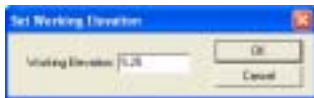

- 2 Type the necessary elevation in inches, or feet and inches, separated with a hyphen. Click OK.
- 3 (optional) Right-click while nothing is selected and click Set Working Elevation from the pop-up menu that is displayed.

### To set the elevation of a group of objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Press SHIFT and click each object you want to elevate.
- 3 Right-click the Elevation Slider at the left side of your window and click Set Working Elevation from the pop-up menu that is displayed.

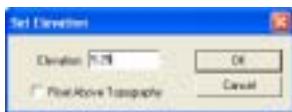

- 4 Type the elevation in inches, or feet and inches separated with a hyphen. Click OK.

**Note:** All selected objects will be reset to the elevation specified, even if the objects were originally located at various elevations.

### To make features follow custom topography

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the feature(s) you want to follow the custom topography.
- 3 Right-click the Elevation Slider at the left side of your window and click Float Above Topography from the pop-up menu that is displayed.
- 4 (optional) Right-click the Elevation Slider at the left side of your window and click Set Working Elevation from the pop-up menu that is displayed.



- 5 Check the box which specifies Float Above Topography. Click OK.



# Working with LiveView


Punch! Home Design Architectural Series 3000 lets you view your home in photo-realistic 3D. You can select exterior and interior wall color, add realistic roof materials and select from a variety of wood textures to make your home design completely unique. In the LiveView Window, you can view your design from a variety of angles.

Using color and material features, you can make decorative changes to your home design as quickly as you think of them. This makes it easy to experiment with a variety of colors, both inside and outside your home, before picking up a paintbrush!

With the powerful ClearView feature, you can literally see into the walls and view electrical, HVAC, plumbing and so on.

Walk-Through  
and Fly-Around

Rendering  
Style Selector    Lighting

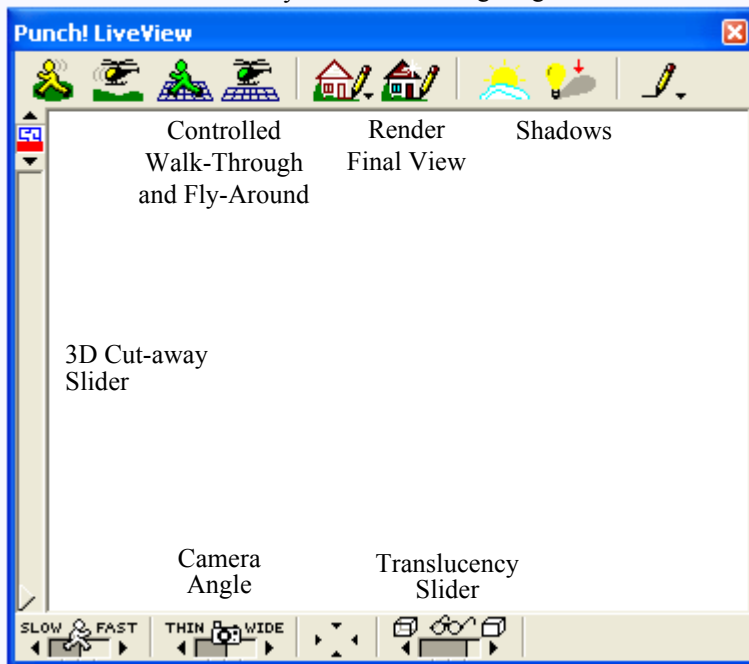

Show/Hide  
Feature  
Control

Viewing  
Speed

Viewpoint  
Directions

## Opening a LiveView Window

There are three pre-set LiveView window sizes, but you are not limited to those three views. The LiveView window can be repositioned and resized to fit your requirements. All LiveView window pre-set sizes are accessible from the right-click plan options menu.

### To display the 2D plan view and a small 3D view

- On the Window menu, click 3D Quarter View or click the 3D Quarter View icon or right-click while nothing is selected and click 3D Quarter View from the pop-up menu that is displayed.



### To display a split 2D and 3D view

- On the Window menu, click Split Plan/3D View or click the Split Plan/3D View icon or right-click while nothing is selected and click Split Plan/3D View from the pop-up menu that is displayed.



### To display a 3D view only


- On the Window menu, click 3D Full View or click the 3D Full View icon or right-click while nothing is selected and click 3D Full View from the pop-up menu that is displayed.




## Moving around in 3D

Punch! AS3000 provides two interactive 3D viewing options, the 3D Walk-Through and Fly-Around views. Using interactive viewing, you can vary the viewing level by adjusting the altitude and height. Viewing speed and camera angle can also be adjusted to provide the best viewing capabilities available.

### To view your home using Walk-Through

- 1 Open a LiveView window, as explained previously.
- 2 On the View menu, click 3D Viewing Method, Walk-Through or click the Walk-Through button  on the LiveView window.
- 3 Position the mouse pointer in the LiveView window, then click and drag up to move inward.
- 4 Position the mouse pointer in the LiveView window, then click and drag down to move outward.

### To view your home using Controlled Walk-Through

- 1 Open a LiveView window, as explained previously.
- 2 Click the Controlled Walk-Through button on the LiveView window. 
- 3 To look left, position the mouse pointer in the LiveView window, then click and drag left.
- 4 To look right, position the mouse pointer in the LiveView window, then click and drag right.

- 5 To look up, position the mouse pointer in the LiveView window, then click and drag away from you.
- 6 To look down, position the mouse pointer in the LiveView window, then click and drag toward you.

### To change Walk-Through elevation with the mouse


- Press and hold the right mouse button down to raise and lower the viewpoint, alternately.

### To specify an absolute Walk-Through elevation


- 1 Open a LiveView window, as explained previously.
- 2 On the View menu, click 3D Viewing Method, Walk-Through Elevation. The Walk-Through Elevation dialog box is displayed.
- 3 Type a new elevation measurement in inches, then click OK.



### To view your home using Fly-Around

- 1 Open a LiveView window, as explained previously.
- 2 On the View menu, click 3D Viewing Method, Fly-Around or click the Fly-Around button on the LiveView window. 
- 3 Move the Fly-Around pointer around inside the LiveView window and watch the view move dynamically.

### To view your home using Controlled Fly-Around


- 1 Open a LiveView window, as explained previously.
- 2 Click the Controlled Fly-Around button on the LiveView window. 
- 3 Click and hold the mouse button down, then move the Fly-Around pointer around inside the LiveView window and watch the view move dynamically.

### To change Fly-Around altitude with the mouse

- Press and hold the right mouse button down to change the viewpoint.

### To specify a center of reference in Fly-Around mode

- 1 Open a LiveView window, as explained previously.

- 2 On the design window, click the center of reference icon and drag it to a new position. 


**Note:** The placement of the icon will be the point that the helicopter revolves around.

### To specify an absolute Fly-Around altitude


- 1 Open a LiveView window, as explained previously.
- 2 On the View menu, click 3D Viewing Method, Fly-Around Altitude. The Fly-Around Altitude dialog box is displayed.
- 3 Type a new elevation measurement, then click OK.



### To adjust the 3D camera angle

- 1 Open a LiveView window, as explained previously.
- 2 At the bottom of the LiveView window, click the right camera angle arrow to widen the view. 
- 3 At the bottom of the LiveView window, click the left camera angle arrow to narrow the view.

### To increase or decrease the Fly-Around and Walk-Through speed


- 1 Open a LiveView window, as explained previously.
- 2 At the bottom of the LiveView window, click the right speed arrow to speed up the viewing method. 
- 3 At the bottom of the LiveView window, click the left arrow to slow down the viewing method.

**Note:** The faster the viewing speed, the lower the quality of the rendered 3D image.

## Accessing the Rendering Styles

With Punch! AS3000's four rendering options you can view your three dimensional floorplan in variety of ways. For example, with ClearView you may see potential conflicts hidden within walls between utilities, HVAC and so on.

### To render using wireframe mode

- 1 On the Window menu, click 3D Full View or click the 3D Full View icon. 

- On LiveView, click the Render Style button, then click Render Wire Frame from the pop-up menu.

**Note:** While in Wire Frame mode, your design will be displayed on a black background. Each feature of your floor plan will be rendered in the color of the plan tab where it is drawn. For example, walls will be displayed in the color you have defined for the Floorplan Tab.



### To render using shaded wireframe mode

- On the Window menu, click 3D Full View or click the 3D Full View icon.
- On LiveView, click the Render Style button, then click Render Shaded Wire Frame from the pop-up menu.



**Note:** While in Shaded Wire Frame mode, your design will be displayed on a black background. Each feature of your floor plan will be rendered in the color of the material you have applied to it.

### To view a room using ClearView

- On the Window menu, click 3D Full View or click the 3D Full View icon.
- On LiveView, click the Render Style button, then click Render ClearView from the pop-up menu.



### To control the opacity of a ClearView rendering

- On the View menu, click Render ClearView or click the ClearView Tool.
- Click the left arrow on the Translucency Slider. Your floorplan will appear more translucent.
- Click the right arrow on the Translucency Slider. Your floorplan is displayed more solidly.



**Note:** The Translucency Slider will only appear while working in ClearView.

### To render to view materials

- On the Window menu, click 3D Full View or click the 3D Full View icon.
- On LiveView, click the Render Style button, then click Render Materials from the pop-up menu.



### Adjusting Rendering Quality

Punch! AS3000 technology includes anti-aliased, photo-realism. With this technology you can view your plan with incredible detail, whether you are in textured mode, ClearView, framing and so on.

### To render a plan in 3D final quality

- Open a LiveView window, as explained previously.
- On the View menu, click Render 3D Final Quality or click the 3D Final Quality button on the LiveView window.



### To set 3D render quality

- On the View menu, click 3D Final Quality, Low. This results in a fast rendering speed, but lower quality output.
- On the View menu, click 3D Final Quality, High. This results in a moderate rendering speed and average quality output.
- On the View menu, click 3D Final Quality, Ultra High. This results in a slower rendering speed and a high quality output.
- On the View menu, click 3D Final Quality, Excellent. This results in a very slow rendering speed, but a very high quality, sharp output.



## Using the 3D Cut-away Slider

With Punch! AS3000's 3D Cut-away Slider you peel away layers of your floor plan with ease. You can slice away layer after layer of your design from any of the four sides or from the top; making it easy to see room arrangements, furniture placement and so on.

### To view a room using the 3D Cut-away Slider

- 1 On the Window menu, click 3D Full View or click the 3D Full View icon.
- 2 (optional) Click one of the direction buttons to select from which direction to cut away.
- 3 On the LiveView window, click and drag the 3D Cut-away Slider up and down to see a cut-away view of your design.



## Adding Lighting and Shadows

With Punch! AS3000 you can customize the lighting and shadows. You can virtually see how that big oak tree casts shadows into your living room window.


### To adjust the lighting intensity in a 3D View

- 1 Open a LiveView window, as explained earlier.
- 2 On the View menu, click 3D Lighting or click the 3D Lighting button on the LiveView window. The 3D Lighting dialog box is displayed.



- 3 Click the direction from which you want the light to originate in the Direction section of the 3D Lighting dialog box.
- 4 Increase or decrease the light intensity by clicking and dragging the intensity slider.
- 5 Increase or decrease the overall brightness by clicking and dragging the brightness slider.
- 6 Click OK.

### To render shadows to a 3D view

- 1 Open a LiveView window, as explained previously.
- 2 On the View menu, click 3D Shadows or click the  3D Shadows button on the LiveView window.

**Note:** Shadows will also render when the Render Final Quality selection is clicked.



### To control shadow quality



- On the View menu, click Shadow Quality and click either High (slow) or Low (fast).

## Setting the Viewpoint Angle

Punch! AS3000 has four pre-set viewpoint angles and from those angles, moving to the needed viewpoint is easy.

### To set a viewpoint angle

- 1 On the Window menu, click 3D Full View or click the  3D Full View icon.
- 2 In the LiveView window, click one of the  Viewpoint Direction buttons.

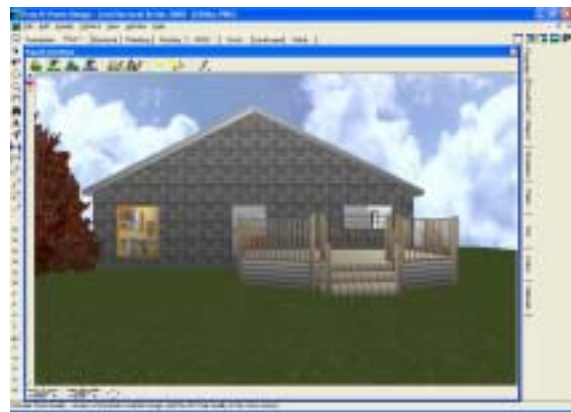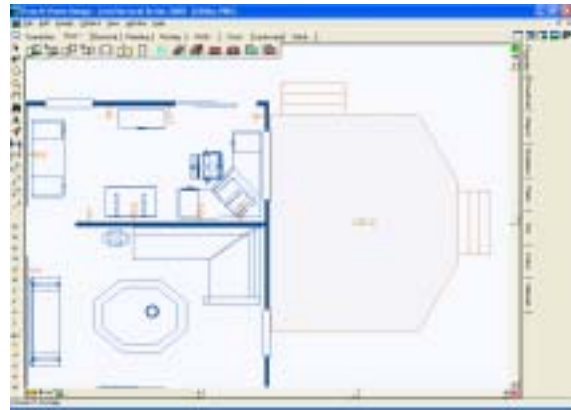



**Note:** By clicking the other three Viewpoint Direction buttons, you will view your floorplan from the other edges of your lot.

## Customizing LiveView

There may be times when you will need to see your design without plants, topography, objects and so on. With Punch! AS3000 you have complete control over what parts of your design are visible. The buttons along the right side of the LiveView window toggle many viewing options on and off. These controls operate simply, if there is a red “X” through the icon, that feature is hidden; if there is not an “X”, that feature is visible.

### To hide/view doors in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide  3D Doors icon. 



### To hide/view objects in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Objects icon.



### To hide/view plants in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Plants icon.



### To hide/view roofs in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Roofs icon.



### To hide/view materials in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Materials icon.



### To hide/view topography in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Topography icon.



### To suppress background animation in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Animate 3D Background icon.



**Note:** When background animation (cloud movement) is suppressed, no resources will be used to move the clouds in the sky.

### To hide/view electrical in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Electrical icon.



### To hide/view plumbing in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D Plumbing icon.



### To hide/view HVAC in 3D

- 1 Open a LiveView window, as explained previously.
- 2 On the LiveView menu, click the Show/Hide 3D HVAC icon.





# ***Personalizing Your Design***

Punch! Home Design Architectural Series 3000 lets you view your home in photo-realistic 3D. You can select exterior and interior wall color, add realistic roof materials and select from a variety of woods to make your home design completely unique. View all your customizations in the LiveView Window.

By adding color, trim and materials, you can make decorative changes to your home design as quickly as you think of them. This makes it easy to experiment with a variety of colors, both inside and outside your home, before picking up a paintbrush!

You can even furnish your dream home from Punch! Home Design Architectural Series 3000's library of objects!

## Objects Preview Bar

Punch! AS3000 lets you add details to any room using a variety of furnishing objects. The Objects Preview Bar is accessible at any time and objects can be placed on any plan tab. In addition, you can create your own filing system for the objects you create with 3D Custom Workshop or rearrange the objects to suit your needs. You can even add swing sets and picnic benches to the outside of your home by selecting objects from the Exterior library. It is important to keep in mind that the objects only appear in 3D when you are viewing in 3D mode. In the plan drawing, objects appear as 2D symbols.

### To add objects using drag-and-drop

- 1 Click the Object Tab. The Preview Bar displays furnishing objects.
- 2 (optional) Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click another object library.
- 3 Scroll to view the available objects.
- 4 Click the object you want to place, hold down the mouse button and drag the object onto your design window.
- 5 (optional) Click the Selection tool, then click the object you just placed to drag it to another location on your design window.




### To add objects using import

- 1 On the File menu, click Import, then Punch! 3D Object.
- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK. The object will be imported and placed in the center of the design.
- 5 (optional) Click the Selection tool, then click the object you just placed to drag it to another location on your design window.

### To add log home components using drag-and-drop

- 1 Click the Object Tab. The Preview Bar displays furnishing objects.

- 2 (optional) Click the arrow next to “Objects” at the top of the Preview Bar, then click Log Home Components.
- 3 Scroll to view the available components.
- 4 Click the component you want to place, hold down the mouse button and drag the object onto your design window.
- 5 (optional) Click the Selection tool, then click the component you just placed to drag it to another location on your design window.

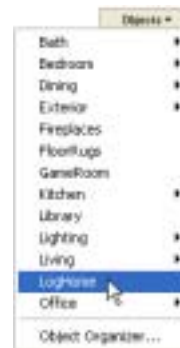


## Editing Objects

Once you’ve placed objects in your drawing, it’s easy to move, delete, copy and rotate objects, usually involving just one or two mouse clicks. You can also edit objects using 3D Custom Workshop. For more information, see “3D Custom Workshop”, which begins on page 259.

### To rotate objects a specified amount

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click an object to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 Click Rotate on the Edit menu. The Rotate dialog box is displayed.

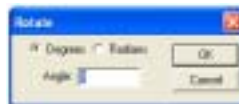

- 4 Click either Degrees or Radians, then type the angle you want to rotate the object in the Angle text box.
- 5 Click OK. The object or object group you selected is rotated based on the angle measurement you specified.

### To freely rotate objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click object to be rotated to select it.
- 3 On the Standard toolbar, click the Rotate Tool.
- 4 Click the object, hold down the mouse button and move the mouse.
- 5 Release the mouse button when the object is in the position you want.



**Note:** Rotation is constrained to 45 degrees, to release this constraint, press the SHIFT key while rotating.

### To remove objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click an object to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 Press the DELETE key on the keyboard. The selected objects are removed from your design.

## Moving Objects

Once you've placed objects, you can move them by dragging, by making very precise movements using Nudge, for more information see "Using Nudge" on page 124, or by specifying exact cartesian or polar coordinates that correspond to the reference grid. For more information on the reference grid, see "Using the Grid" on page 13.

### To move objects by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click an object to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 Holding down the mouse button, drag the object or object group to a new location, then release the mouse button.

**Note:** For more information on making precision movements using Snaps, see the chapter titled "Snaps and Annotations", which begins on page 19.

### To move objects by specifying coordinates

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click an object to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 Click Move on the Edit menu. The Move dialog box is displayed.



- 4 Click either Cartesian or Polar, then type new X- and Y-Axis coordinates in the appropriate text boxes.
- 5 Click OK. The object or object group you selected is moved based on the coordinates you specified.

## Object Organizer

To make furnishing your dream home easier and more personal, you can use the Object Organizer to create new categories and move objects into them.

### To open Object Organizer

- 1 Click the Object Tab.
- 2 Click the arrow next to "Objects" at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.



### To move objects from one category to another

- 1 Click the Object Tab.
- 2 Click the arrow next to "Objects" at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.
- 3 Click the arrow above the right column to access a listing of available object categories. Click the category where you want the object to be moved.



- 4 Click the object in the left column that you want to move to the new category, then click the right arrow button. The object is moved from the category on the left to the category on the right.




- (optional) Repeat step 6 until all the objects you want to reorganize have been moved to the new category.

**To access information about an object**

- Click the Object Tab.
- Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.
- Click Info in the Object section of the Object Organizer Preview Bar. The Object Info dialog is displayed.
- (optional) Type a new name or a different description in the text box, then click OK.



- Click the folder where you want to add a new category and click OK. The Category Name dialog is displayed.

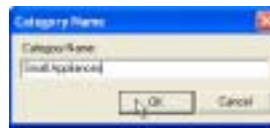

- Type the name of the new category and click OK. The Object Organizer is displayed with your new category.



**To delete an object from a category**

- Click the Object Tab.
- Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.
- Click Delete in the Object section of the Object Organizer Preview Bar. The Object is removed from the listing.



**Note:** To access all the objects you have deleted. Click the Recycle Button. A listing of all deleted objects is displayed.

**To create a new category**

- Click the Object Tab.
- Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.
- Click New in the Category section of the Object Organizer Preview Bar. The Browse for Folder dialog is displayed.



**To delete an entire category**

- Click the Object Tab.
- Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.
- Click Delete in the Category section of the Object Organizer Preview Bar. The Browse for Folder dialog is displayed.








- 4 Click the category you want to delete, then click OK. The category is removed.

### To rename a category

- 1 Click the Object Tab.
- 2 Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click Object Organizer. The Object Organizer dialog is displayed.
- 3 Click Rename in the Category section of the Object Organizer Preview Bar. The Browse for Folder dialog is displayed.
- 4 Click the folder you want to rename, then click OK. The Category Name dialog is displayed.

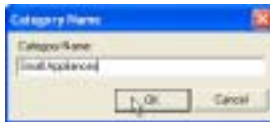


- 5 Type the new name, then click OK. The Object Organizer is displayed with your renamed category.

## Elevating Objects

With Punch! AS3000 you can elevate objects based on a measurement you define. This is handy if you want to place something on top of a table, for example.

### To elevate objects by specifying a measurement

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click an object to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 On the Edit Menu, click Set Object Elevation. The Set Elevation dialog box is displayed.
- 4 Type the measurement, in inches, that you want to elevate the object, then click OK.

**Note:** Use this feature to lower objects by typing a negative number in the Elevate Object dialog box.


### To elevate objects by using the Elevation Slider

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click an object to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 On the left side of the screen, drag the Elevation Slider up or down.
- 4 Release the mouse. The object will be repositioned.

## Building Rooms Using Templates

Punch! AS3000 includes dozens of room templates, which will make designing your home easy and fun. Divided into several categories, choose the template that suits you needs best.

### To place a template

- 1 Click the Templates Tab. The Preview Bar displays room templates. 
- 2 (optional) Click the arrow next to “Templates” at the top of the Preview Bar to display the room library, then click another library.
- 3 Scroll to view the available templates.
- 4 Click the template you want to place, hold down the mouse button and drag it onto your design window.
- 5 (optional) Click the Selection tool, then click the template you just placed to drag it to another location on your design window.



### To choose a new category

- 1 Click the Templates Tab. The Preview Bar displays room templates.
- 2 (optional) Click the arrow next to “Templates” at the top of the Preview Bar to display the room library, then click another library.
- 3 Scroll to view the available templates.
- 4 Click the template you want to place, hold down the mouse button and drag it onto your design window.




## Creating New Templates

With Punch! AS3000 you can easily create room templates to suit your specific needs.

### To create a template

- 1 Once your room is designed exactly to your liking, select all walls, doors and other features that you want to include in your template.
- 2 Click the Templates Tab. The Preview Bar displays room templates.
- 3 Click the arrow next to “Templates” at the top of the Preview Bar to display the listing, then click Create Template. The Save Template dialog is displayed.

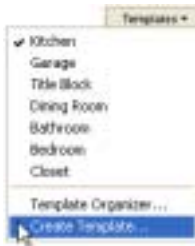

- 4 Click the Template Category, then select the appropriate category from the drop down menu that appears.
- 5 Type a Template Name.
- 6 Type a Template Description, then click OK. The template is added to that category and displayed in the Preview Bar.

## Template Organizer

To make creating your dream home easier and more personal, you can use the Template Organizer to create new categories and move objects into them.

### To open Template Organizer

- 1 Click the Template Tab.
- 2 Click the arrow next to “Templates” at the top of the Preview Bar to display the listing, then click Template Organizer. The Template Organizer dialog is displayed.



### To move templates from one category to another

- 1 Click the Template Tab.
- 2 Click the arrow next to “Templates” at the top of the Preview Bar to display the library list, then click Template Organizer. The Template Organizer dialog is displayed.
- 3 Click the arrow above the right column to access a listing of available Template categories. Click the category where you want the Template to be moved.
- 4 Click the template in the left column that you want to move to the new category, then click the right arrow button. The template is moved from the category on the left to the category on the right.
- 5 (optional) Repeat step 4 until all the templates you want to reorganize have been moved to the new category.



### To access information about a template

- 1 Click the Template Tab.
- 2 Click the arrow next to “Template” at the top of the Preview Bar to display the library list, then click Template Organizer. The Template Organizer dialog is displayed.
- 3 Click Info in the Template section of the Template Organizer Preview Bar. The Template Info dialog is displayed.
- 4 (optional) Type a new name or a different description in the text box, then click OK.



### To delete a template from a category

- 1 Click the Template Tab.
- 2 Click the arrow next to “Template” at the top of the Preview Bar to display the library list, then click Template Organizer. The Template Organizer dialog is displayed.

- Click Delete in the Template section of the Template Organizer Preview Bar. The Template is removed from the listing.



### To create a new category

- Click the Template Tab.
- Click the arrow next to “Templates” at the top of the Preview Bar to display the object library list, then click Template Organizer. The Template Organizer dialog is displayed.
- Click New in the Category section of the Template Organizer Preview Bar. The Browse for Folder dialog is displayed.
- Click the folder where you want to add a new category and click OK. The Category Name dialog is displayed.
- Type the name of the new category and click OK. The Template Organizer is displayed with your new category.



### To delete an entire category

- Click the Template Tab.
- Click the arrow next to “Templates” at the top of the Preview Bar to display the object library list, then click Template Organizer. The Template Organizer dialog is displayed.
- Click Delete in the Category section of the Template Organizer Preview Bar. The Browse for Folder dialog is displayed.
- Click the category you want to delete, then click OK. The category is removed.



### To rename a category

- Click the Template Tab.
- Click the arrow next to “Templates” at the top of the Preview Bar to display the object library list, then click Template Organizer. The Template Organizer dialog is displayed.
- Click Rename in the Category section of the Template Organizer Preview Bar. The Browse for Folder dialog is displayed.
- Click the folder you want to rename, then click OK. The Category Name dialog is displayed.
- Type the new name, then click OK. The Template Organizer is displayed with your renamed category.



## Plants Preview Bar

Punch! AS3000 includes thousands of plants to make designing your landscape easy and fun. Divided into several categories, choose the ones that grow best in your area of the country.


### To add plants

- Click the Landscape Tab.
- Click the Plants Tab. The Preview Bar will display plants available for placement.
- At the top of the Preview Bar, click the down arrow next to “Plants” to display the plant category menu, then click to check the type of plants you want to place.
- Use the scroll bar to view the remainder of the plant selections in the Preview Bar.

**Note:** Hold your cursor over the preview of the plant and that plant’s description will be displayed in the Status Bar.

- On the Preview Bar, click the plant you want to place, hold down the mouse button and drag it onto your design window.



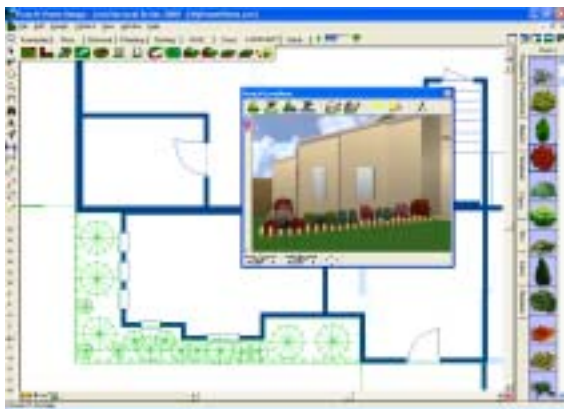

### To move a plant

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the plant you want to move.
- 3 Click again, hold down the mouse button and drag the plant to the new location.

### To remove a plant

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the plant you want to remove.
- 3 Press the DELETE key on the keyboard. The plant is removed from your landscape.

### To customize the planting age

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the plant you want to customize.
- 3 On the Plant Preview Bar, type the age of the plant at the time of planting.



**Note:** Planting age can be adjusted only after a plant is placed.

### To identify which plant has been placed

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the design window, right-click the plant you want to identify, then click Plant Details on the pop-up menu.

## Viewing Hardiness Zones

Punch! AS3000 includes USDA Hardiness Zone maps for the contiguous 48 states, Alaska and Hawaii, Canada, Europe and Australia. All plants included in Punch! AS3000 can be sorted using this information; see next page.

### To view a hardiness zone map

- 1 Click the Plants Tab. The Preview Bar will display plants available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Plants” to display the plant category menu, then click the Hardiness Zone map you want to view.



### To hide the hardiness zone map

- Click anywhere on the zone map.


## PlantFinder

Punch! AS3000 includes thousands of plants to make designing your landscape easy and fun. PlantFinder is a powerful sorting engine that lets you see only the plants that fit your particular criteria.

### To sort plants

- 1 Click the Plants Tab. The Preview Bar will display plants available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Plants” to display the plant category menu, then click PlantFinder. The PlantFinder dialog box is displayed.



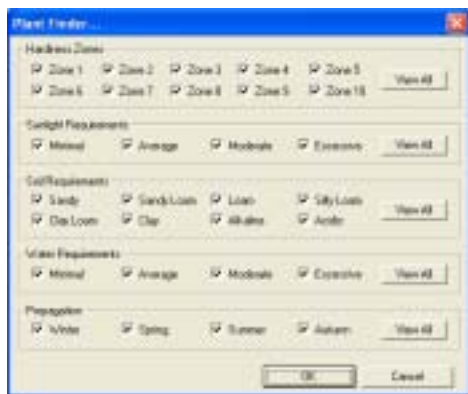


- 3 Uncheck the criteria that does not meet your needs, then click OK.

**Note:** Only the plants matching **all** the variables selected will be displayed in the Preview Bar. To broaden your search, check fewer boxes.

- 4 (optional) Click the View All buttons to select all options in a category.

### To find a plant by name

- 1 Click the Plants Tab. The Preview Bar will display plants available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Plants” to display the plant category menu, then click Find Plant by Name. The Find Plant by Name dialog box is displayed.

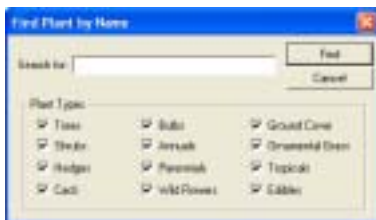

- 3 Type the botanical or common name of plant in the dialog box.
- 4 Uncheck the criteria that does not meet your needs, then click OK. A plant matching the criteria you specified will be displayed in the Preview Bar.

**Note:** If you do not specify a category to be searched, Punch! AS3000 will search the “Trees” category by default.

### To locate a plant on the preview bar

- Right-click the plant, then click Locate Plant on the pop-up menu. The plant is selected and displayed on the Preview Bar.

### To view all plants

- At the top of the Preview Bar, click the down arrow next to “Plants” to display the plant category menu, then click View All Plants.

## Making Plants Grow

With Punch! AS3000 you can watch your landscape grow from year to year. With just a couple of mouse clicks you can watch your landscape change over 20 years.

### To grow your landscape



- 1 On the Window menu, open a LiveView window and position it to easily see the area of your landscape you want to watch mature.
- 2 Clicking the smaller tree to the left of the Plant Growth Meter makes the plants appear younger, while pressing the larger tree on the right makes them appear older.



**Note:** The age is displayed in the status bar.



**Note:** To change the planting age for individual plants, see “To customize the planting age” on page 142.

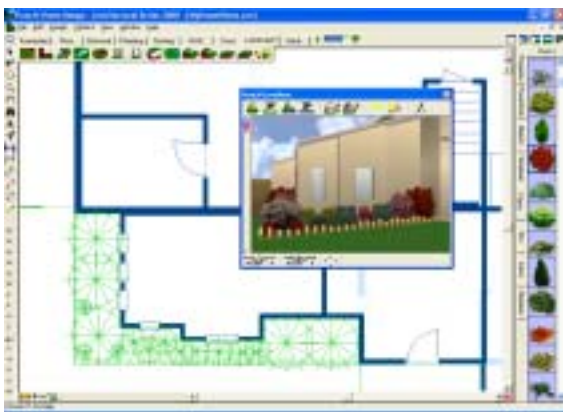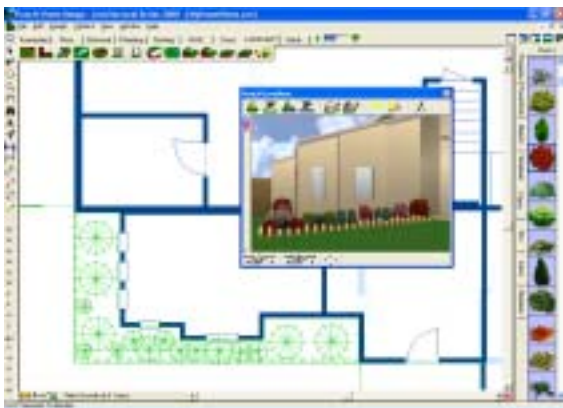


## Applying Wall Trims

All interior walls are drawn with base trim. It is easy to add library paneling for an elegant appearance or use wainscotting if you want to apply two different materials on one wall.

### To apply library paneling

- 1 Click the Trim Tab. The Preview Bar will display trims available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Library Paneling from the menu. Library paneling options appear in the Preview Bar.
- 3 Click the library paneling you want to apply, hold down the mouse button and drag it onto the wall of your home in the LiveView window. The library paneling you selected is applied.

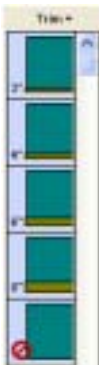

### To apply a series of library paneling

- 1 Click the Trim Tab. The Preview Bar will display trims available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Library Paneling from the menu. Library paneling options appear in the Preview Bar.
- 3 Right-click the library paneling you want to apply.
- 4 Right-click on each wall section where you want the library paneling to appear.
- 5 Click the left mouse button to end. The library paneling you selected is applied.



### To remove library paneling

- 1 Click the Trim Tab. The Preview Bar will display trims available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Base Trim from the menu. Base trim options appear in the Preview Bar.
- 3 Click the base trim you want to apply, hold down the mouse button and drag it onto the wall of your home in the LiveView window. The base trim you selected is applied.
- 4 (optional) Apply the bottom base trim on the Preview Bar to remove wall trim entirely.

### To apply wainscotting

- 1 Click the Trim Tab. The Preview Bar will display trims available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Wainscot from the menu. Wainscotting options appear in the Preview Bar.
- 3 Click the wainscotting you want to apply, hold down the mouse button and drag it onto the wall of your home in the LiveView window. The wainscotting you selected is applied.

### To apply a series of wainscotting

- 1 Click the Trim Tab. The Preview Bar will display trims available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Wainscotting from the menu. Wainscotting options appear in the Preview Bar.
- 3 Right-click the wainscotting you want to apply.

- 4 Right-click on each wall section where you want the wainscoting to appear.
- 5 Click the left mouse button to end. The wainscoting you selected is applied.

### To remove wainscoting

- 1 Click the Trim Tab. The Preview Bar will display trims available for placement.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Base Trim from the menu. Base trim options appear in the Preview Bar.
- 3 Click the base trim you want to apply, hold down the mouse button and drag it onto the wall of your home in the LiveView window. The base trim you selected is applied.
- 4 (optional) Apply the bottom base trim on the Preview Bar to remove wall trim entirely.

## Applying Color

With Punch! AS3000, you can try out various color schemes with ease. Now you can choose between color families with just a few mouse clicks. Walls are just one example of what can be colorized; you can also apply color to furniture, window trim, doors, fences and so on. To apply different paint colors to different rooms, refer to “Breaking a Wall” on page 54.

### To apply color from a customizable palette

- 1 Click the Colors Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Colors” to display the Colors style menu, then click to check Spring or whichever category you prefer. The color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto the exterior walls of your home in the LiveView window. The color you selected is applied.



**Note:** To customize a color, see “To define a custom color” on page 146.

### To apply color from the color ramp


- 1 Click the Colors Tab. The Preview Bar will display materials available for placement.
- 2 On the Colors Tab, click the arrow beneath the word Colors, then click Color Ramp. Twenty-five shades of the same color appear in the Preview Bar.
- 3 (optional) At the top of the Preview Bar, click the plus (+) or minus (-) signs next to the color spectrum to change the color family.
- 4 Scroll to view the variations of that color.
- 5 Click the color you want to apply, hold down the mouse button and drag the color onto the exterior walls of your home in the LiveView window. The color you selected is applied.



**Note:** To apply color to a door, apply the color to the trim of the door, not the door itself.

### To apply a series of the same color

- 1 Click the Colors Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Colors” to display the Colors style menu, then click to check Spring. The Spring color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Right-click the color you want to apply.
- 5 On the LiveView window, right-click on each wall where you want the chosen color to appear.
- 6 Click the left mouse button to end. The color you selected is applied.

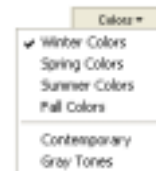


## Using Custom Colors

With Punch! AS3000, you can define your own custom color with the Color dialog box. You can start with one of the basic colors available, then change its red, blue or green values, or click on a color in the color spectrum window to “mix” your own color. By customizing colors, you are sure to find the exact color you want.

### To define a custom color

- 1 Click the Colors Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Colors” to display the Colors style menu, then click to check Summer. The Summer color palette is displayed on the Preview Bar.
- 3 Double-click one of the colors on the Preview Bar. The Color dialog box is displayed.

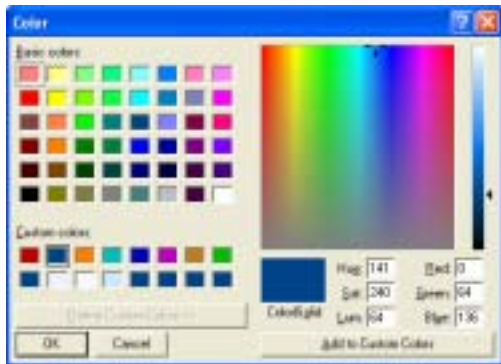

- 4 Click one of the Basic or Custom colors or click on the color spectrum block to select a color.
- 5 (optional) Adjust the current Red, Green and Blue values to create a custom color.
- 6 (optional) Click an area on the color spectrum window to select a color, then adjust the RGB values, if necessary.
- 7 Click OK. The color you defined is displayed on the Preview Bar.

### Applying Building Materials

With Punch! AS3000, customizing the exterior of your home is a simple drag and drop procedure. Available materials include brick, stucco, gravel, roofing and so on. All materials may be customized using the Custom Materials feature. You can even apply two different materials to a wall using the Wainscotting feature. For more information, see “To apply wainscotting”, which begins on page 144.

### To apply material

- 1 Click the Materials Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click to check the material you want, for instance brick, stucco, stone, siding and so on. Options of the selected material will be displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Click the siding you want to apply, hold down the mouse button and drag the material onto the exterior walls of your home in the LiveView window. The material you selected is applied.



**Note:** To increase the accuracy of applying materials, it may help to zoom in closer to what you are texturing.

**Note:** To apply material to a door, apply the material to the trim of the door, not the door itself.

### To apply a series of the same material

- 1 Click the Materials Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click to check the material you want, for instance brick, stucco, stone, siding and so on. Options of the selected material will be displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Right-click the material you want to apply.
- 5 Right-click on each wall where you want the chosen material to appear.
- 6 Click the left mouse button to end. The material you selected is applied.

### Customize Materials

Every material available in Punch! AS3000 may be changed to suit your individual needs. The color of all materials can be changed, as can their size. Custom materials can be saved and stored in the Custom category to be used at any time.



### To customize the color of a material

- 1 Click the Materials Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu. Options of the selected material will be displayed on the Preview Bar.
- 3 Click the material you want to customize, then at the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click to check Custom Material. The Customize Material application loads and the selected material is displayed.



- 4 Click an arrow or move the slider on the top scroll bar that represents Red. The color will appear in the color box. The customized material will be displayed.
- 5 Click an arrow or move the slider on the middle scroll bar that represents Green. The color will appear in the color box. The customized material will be displayed.
- 6 Click an arrow or move the slider on the bottom scroll bar that represents Blue. The color will appear in the color box. The customized material will be displayed.

**Note:** The color that appears in the color box will be used to “tint” the material.

### To customize the size of a material

- 1 Click the Materials Tab. The Preview Bar will display materials available for placement.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style

menu. Options of the selected material will be displayed on the Preview Bar.

- 3 Click the material you want to customize, then at the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click to check Custom Material. The Customize Material application loads and the selected material is displayed.
- 4 Click an arrow or move the slider on the Width scroll bar. The customized material will be displayed.
- 5 Click an arrow or move the slider on the Height scroll bar. The customized material will be displayed.
- 6 (optional) Click to check the Link box to resize the material proportionally.

### To name a custom material

- Type the name or a short description of the material in the Texture Name dialog box.

**Note:** This information will appear in the status bar when the mouse is held over the material on the Preview Bar.

### To save a custom material

- 1 On the File menu, click Exit and Return to Punch! Home Design. The Save dialog box is displayed.
- 2 Click Yes. The customized material is displayed on the Preview Bar.
- 3 (optional) Click No to abandon changes to the material.
- 4 (optional) Click Cancel to return to Customize Materials.

**Note:** Saving your custom materials does not replace the original; all customized materials are available in addition to the original ones.

### To delete a custom material

- 1 Click the customized material that is no longer needed to select it.
- 2 At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click Delete Custom Materials. A warning is displayed.
- 3 Click Yes. The customized material is deleted from the Preview Bar.
- 4 Click No, if you want the material to remain available for future use.



## Part 6

# Companion Programs and PowerTools

Chapter 20: FloorPlan Trace .....	151
Chapter 21: Estimator .....	155
Chapter 22: PhotoView & PhotoView Editor .....	161
Chapter 23: RealModel® .....	171
Chapter 24: Cabinet Wizard .....	175
Chapter 25: Framing Editor .....	187
Chapter 26: Elevation Editor .....	197
Chapter 27: Layout Manager .....	209
Chapter 28: DXF/DWG Export & Import .....	223
Chapter 29: Fireplace Wizard .....	229



# ***FloorPlan Trace***

Punch! Home Design Architectural Series 3000 lets you import a scanned bitmap (BMP) file into the background of your design. Once scanned and loaded into your design file, you can trace the bitmap image, creating a Punch! AS3000 file. You can even set the scale of the new drawing to the scale of the bitmap image. When you are done tracing, you can save the new file without the background bitmap image.

Find or sketch your favorite floor plan design. Using a scanner, digital camera or with the help of a scanning service, scan the plan and save it as a bitmap format.

The designer or owner of most homeplans hold the copyright to them. Make sure you have permission before you copy a plan.

## Importing a Floorplan Image

After you have scanned the plan you want to trace and saved it as bitmap format, you are ready to import it into Punch! AS3000. You can import a floorplan image onto the second or third floor also. To be sure all floors line up correctly, scan all plans at the same size and match the scale identically (see following section).

### To load a floorplan trace image


- 1 On the Design menu, click Load Floorplan Trace Image.
- 2 Locate the directory where you saved the bitmap file.
- 3 Click the filename, then click Open. The floorplan loads into the window.

## Matching the Drawing Scale

If the floorplan is not the correct size, you can scale it in Punch! AS3000. Be sure to use the same scale when preparing to trace an upper floor.


### To match the drawing scale

- 1 On the Design menu, click Load Floorplan Trace Image.
- 2 Find a wall section with a known length on the scanned image.

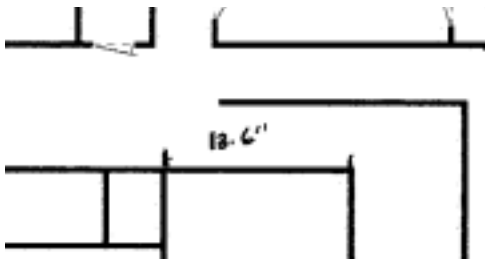

- 3 Click the Virtual Ruler. For information on how to use the Virtual Ruler, see “Virtual Ruler” on page 9. If you do not see the Virtual Ruler, zoom out until you locate it.
- 4 Move the Virtual Ruler into position along the wall of the scanned image.
- 5 Extend the Virtual Ruler to match the known length on the image.
- 6 Set the Virtual Ruler parallel to the wall segment.

**Note:** It is best to measure along a longer wall to minimize the margin of error when scaling.

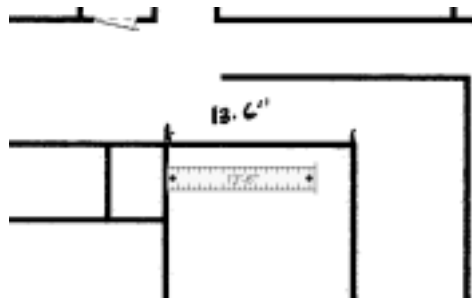

- 7 On the Design menu, click Resize Floorplan Trace Image. The Resize Floorplan Trace Image dialog box is displayed.



- 8 Type values in the Horizontal and Vertical text boxes to equal amounts to change the scale of the entire drawing in proportion. Repeat until you have matched the scale.
- 9 Click OK.

**Note:** If you need the imported image to be larger, the percent you enter will be greater than 100%. Conversely, if you need the image to be smaller, the percent will be less than 100%.

## Tracing the Imported Floorplan

Tracing the image is an easy, straight-forward process. Using the tools explained earlier in this User’s Guide, you will soon have an editable floorplan of your scan.

### To trace the floorplan image

- To trace the foundation, see “To define the foundation perimeter”, which begins on page 42.
- To trace exterior walls, see “To draw exterior walls”, which begins on page 48.
- To trace interior walls, see “To draw interior walls on the fly”, which begins on page 49.
- To add HVAC, see “HVAC Plan Tab”, which begins on page 77.
- To place landscape plants, see “To add plants”, which begins on page 141.

## **Hiding an Imported Floorplan**

There may be times when it is easier to work on your floorplan if the tracing image is not visible. It is easy to toggle the Floorplan Trace image on and off.

### **To hide the floorplan trace image**

- On the Design menu, click Floorplan Trace Image Visible. The image is visible when there is no check mark next to this menu listing.

### **To show the floorplan trace image**

- On the Design menu, click Floorplan Trace Image Visible. The image is hidden when there is a check mark next to this menu listing.





# Estimator

Punch! Home Design Architectural Series 3000 keeps track of building materials, as you design your home. Estimator continually and automatically tallies your expenses and building materials. This information is presented in an editable, printable, exportable spreadsheet format. Estimator also utilizes the Plan Tabs from Punch! Home Design Architectural Series 3000, so you can easily find the materials for a specific part of your design.

As you input the material costs for your area, Estimator calculates the subtotals of each size door and window, each plant type, including sod, roofing materials and roof trusses, and computes the grand total for the entire project.

You can even create custom pricelists, so you use appropriate vendors or wholesalers for specific parts of the job.

Qty	Description	Unit Cost	Subtotal	Total Cost
1	Commons Square Footage Cost	per sq ft	14,800	
1	Floor Plan Areas (Costs)			\$0.00
4	Floor Cost		1,200	\$0.00
<b>FLOOR SCHEDULE</b>				
<b>Window Schedule</b>				
10	10x14 1/2" Casement/Photo	\$0.20	2	\$0.20
11	10x14 1/2" 4' 4" Double Hung	\$0.20	6	\$0.20
11	10x14 1/2" 3' 0" Double Slip Sided	\$0.20	1	\$0.20
11	10x14 1/2" 4' 4" Slant	\$0.20	1	\$0.20
14	10x14 1/2" 3' 0" Casement/Photo	\$0.20	1	\$0.20
11	10x14 1/2" 4' 4" Casement/Photo	\$0.20	6	\$0.20
11	10x14 1/2" 3' 0" Casement/Photo	\$0.20	4	\$0.20
11	10x14 1/2" 4' 4" Casement/Photo	\$0.20	7	\$0.20
14	Floor Cost		24	\$0.20
<b>Door Schedule</b>				
21	10x14 1/2" 4' 0" 6 Panel	\$0.20	1	\$0.20
21	10x14 1/2" 3' 0" 6 Panel	\$0.20	1	\$0.20
21	10x14 1/2" 4' 0" 6 Panel	\$0.20	1	\$0.20
24	10x14 1/2" 3' 0" 6 Panel	\$0.20	6	\$0.20

## Launching Estimator

Punch! Home Design Architectural Series 3000 includes an extremely versatile PowerTool called Estimator. Estimator inventories almost every feature of your design. Prices may be higher during the peak building season and will depend on the part of the country where you are building your new home. You can obtain specific costs from your local supplier or contractor.

### Launching Estimator

- 1 Launch Estimator by clicking the Estimator icon on the PowerTool Bar. The Setup Options menu is displayed.



- 2 Click the Dry Wall Estimation option you want. By default, Estimator will estimate dry wall usage without regard to where doors or windows are placed. Click “Take out Window and Door Area” if you want to subtract those areas from the calculation.
- 3 Click the Wall Material Estimation options you want. By default, Estimator will make estimations without regard to where doors or windows are placed or whether or not the walls have base trim. Click “Take out Window and Door Area” and/or “Take out Base Trim Area” if you want to subtract those areas from the calculation.
- 4 Click the Insulation option you want. By default, Estimator will estimate insulation needed without regard to where doors or windows are placed. Click “Take out Window and Door Area” if you want to subtract those areas from the calculation.
- 5 Click the Calculate Roofing Squares option you want. By default, Estimator will estimate the number of roofing squares needed for your design. Click “Off” if you do not need this calculation.

- 6 Press OK.
- 7 (optional) Click “Exit and Return to Home Design” if you do not want to launch Estimator and, instead, want to return to Punch! AS3000.

## Customizing the Spreadsheet


You may find it easier if you change the colors of specific areas of your spreadsheet. Punch! AS3000 makes this easy. You can assign any color you want to certain parts of the spreadsheet.

### To customize colors

- 1 Click Set Colors on the Options menu. The Colors dialog box is displayed.



- 2 Click the color block next to the feature you want to customize. The Color dialog box is displayed.

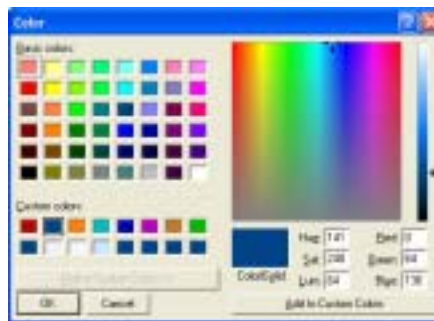

- 3 Click one of the Basic or Custom colors or click on the color spectrum block to select a color.
- 4 (optional) Adjust the current Red, Green and Blue values to create a custom color.
- 5 (optional) Click an area on the color spectrum window to select a color, then adjust the RGB values, if necessary.

- 6 Click OK. The color you defined is displayed on the color block on the Change color dialog box.
- 7 Click OK. The color is applied to the spreadsheet.

### To reset a color back to the default

- Click the Reset button next to the feature you want to reset to the default color. Then click OK.

### To reset all colors

- Click the Reset All button. Then click OK.

### To hide tools

- Click to uncheck Show Tools on the View menu. The tool icons on the spreadsheet are hidden.



## Selecting a Plan Tab

Estimator will automatically display features and materials used on all plan tabs of your design. You can choose to estimate specific areas of your design, for instance just the HVAC materials or just the materials for your deck.

### To select a plan tab

- 1 Click the plan tab you want to use. The plan tab is selected and the materials list for that tab appears.
- 2 (optional) Click Estimates on the View Menu, then click the individual plan you want.

## Calculating Construction Costs

Estimator automatically calculates the total square footage for each floor of your design. The Construction Cost Per Square Foot is dependent upon variables specific to your area. You can obtain specific costs from your local supplier or contractor.

### To calculate construction costs

- 1 Click the green cell next to Construction Square Foot Cost.
- 2 Type the estimated cost.
- 3 Press ENTER. Punch! AS3000 automatically calculates the total and places it in the grey-shaded cell across from Total Cost.

## Completing the Various Schedules

Estimator catalogs the features of your design that appear on each Plan Tab. From cubic yards of concrete, for a slab foundation, to light switches; everything is displayed on individual lines and calculations are based upon prices that you obtain from a building supply company near you.

### To complete Estimator schedules

- 1 Click the green-shaded cell for the Unit Cost of each material or feature of your design.
- 2 Type the estimated cost.
- 3 Press ENTER. Punch! AS3000 automatically calculates the total and displays it in the Total Cost column, then keeps a running Grand Total of each schedule.


**Note:** Use the arrow keys on your keyboard to move around your spreadsheet.

## Creating a Master Pricelist

Estimator saves the prices you enter in a master pricelist file to make it easy to create a new estimate after making alterations to your design. In addition, you can create individual pricelists for each building supply company, vendor or wholesaler that you make purchases from.

### To store a master pricelist

- 1 On the View menu, click Plan Cost List. The Filtered Cost List menu is displayed.

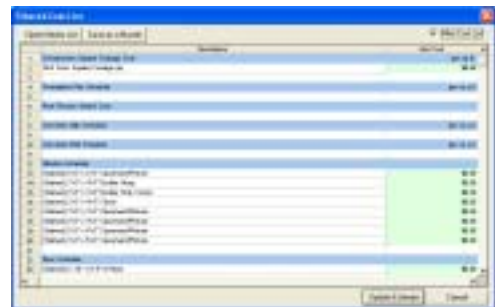


- 2 Type the costs from the source where you plan to purchase materials.
- 3 Click Save as a Master when you have finished updating your prices. The Save as dialog box is displayed.



- 4 Type a file name in the File Name text box. Punch! AS3000 automatically adds the PCL extension.
- 5 Click OK.
- 6 Press ENTER or click Update Estimate. Punch! AS3000 automatically updates the information.
- 7 (optional) If you want to save the drawing to a different drive or folder, click a different drive and folder or type the complete path in the File Name text box. Click OK.

**To open a master pricelist**

- 1 On the View menu, click Plan Cost List. The Filtered Cost List menu is displayed.

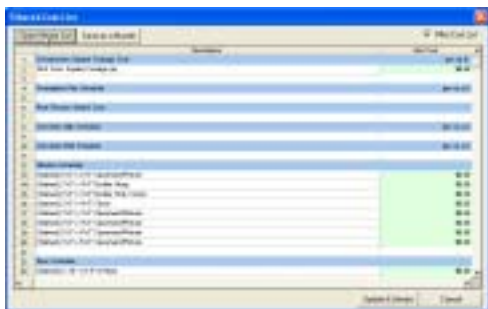

- 2 Click Open Master List. The Open dialog box is displayed.



- 3 Type a file name in the File Name text box or click to select the Master List you want to use. Click OK.

**Exporting a Pricelist**

You can export the information contained in an Estimator spreadsheet so you can use the information in other programs.

**To export a pricelist to Excel**

- 1 Click Export on the File menu, then click Excel File. The Save as dialog box is displayed.



- 2 Type a file name in the File Name text box. Punch! AS3000 automatically adds the XLS extension. Click OK.

**To export a comma delimited file**

- 1 Click Export on the File menu, then click Comma Delimited. The Save as dialog box is displayed.
- 2 Type a file name in the File Name text box. Punch! AS3000 automatically adds the TXT extension. Click OK.

**To export a tab delimited file**

- 1 Click Export on the File menu, then click Tab Delimited. The Save as dialog box is displayed.
- 2 Type a file name in the File Name text box. Punch! AS3000 automatically adds the TXT extension. Click OK.

## To export an HTML file

- 1 Click Export on the File menu, then click HTML File. The Save as dialog box is displayed.
- 2 Type a file name in the File Name text box. Punch! AS3000 automatically adds the HTM extension. Click OK.

**Note:** All necessary graphics are copied to the directory where you save the HTM file. You will need to upload all files to your web server to make them available to be viewed by others.

## Printing a Pricelist

You can print pricelists any way you need them. There are many ways to customize your estimations.

### To print a pricelist

- 1 Click Print on the File menu. The Print dialog box is displayed.



- 2 Click to check and uncheck the options you want to have printed.
- 3 Click Portrait or Landscape.
- 4 Click Printer Setup to specify what printer you want to use. For more information on printer setup, see “Printing Floorplans”, which begins on page 17.
- 5 Click Preview to see what the page will look like before you actually print it.
- 6 Click Print when you have finished setting the options.



# ***PhotoView & PhotoView Editor***

Punch! Home Design Architectural Series 3000 lets you import a digital photograph or a scanned image of your home and landscape around it. From window and door treatments to entire facades, you can simulate your home with ease.

With PhotoView Editor, you can apply different building materials onto your home's picture. No redrawing walls, no adding windows and doors - just click and drag a new material onto your home!

From cars to pets, windows to chimneys, doors to neighbors, you can customize your design to match your dreams. You can even place an imported image of your own backyard, so when you look out a window, you're home.

### **Tips for Using PhotoView**

Punch! AS3000's PhotoView lets you take digital pictures and add them to your landscape design. Although this is a straightforward process, there are a few hints that will make the ultimate result much more satisfying.

- Save digital files in Windows or OS/2 Bitmap (\*.BMP) format.
- Verify that the image is level and square when taking a digital picture or scanning a photograph. If the initial photograph is not square, use your graphics software to rotate it in half-degree increments until it is.
- Photograph the feature when the sun is shining. This ensures more color saturation and detail of the image.
- Double-check the dimensions when importing PhotoView images.
- Take your time masking the image; the better the mask, the better the end result.
- Images are placed in the center of the lot. When importing multiple images, move each image as it is placed to avoid stacking them on top of each other.
- Images should touch the bottom of the image area. If it is centered in the area, it will float above ground level.

## Importing PhotoView Images


Whether you want to import an image of your home's facade to landscape around or you want to add a custom door or window, Punch! PhotoView makes it easy. You can import any image you want, even your pet or your neighbor. Save digital files in Windows or OS/2 Bitmap (\*.BMP) format.

### To import PhotoView images

- 1 On the File menu, click Insert PhotoView Image or click the PhotoView icon. The Open PhotoView Image File dialog box is displayed.



- 2 In the Look In box, type the name of the file you want to insert or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK. The PhotoView Properties dialog box is displayed.

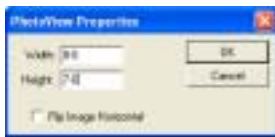

- 5 Type width and height in inches, or feet and inches, separated by a hyphen, then click OK.



**Note:** PhotoView Images appear in the 2D window as lines, similar to walls.



### To delete PhotoView images

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click a PhotoView image to select it.
- 3 Press the DELETE key on the keyboard.



### Moving PhotoView Images

When you import a PhotoView image into your file, it will be placed in the center of the lot. You have freedom to move the image anywhere on the plan window and between plan tabs.

#### To move PhotoView images by dragging

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click a PhotoView image to select it.

- Note:** In 2D plan, a PhotoView image is displayed as a line.
- 3 Holding down the mouse button, drag the image to a new location, then release the mouse button.

**Note:** Be sure to drag the image from the center; dragging an end point resizes the image.



**To move PhotoView images from one plan tab to another**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click the image you want moved. To select more than one image, press the SHIFT key while clicking objects.
- 3 On the Edit menu, click Move to Plan. Then specify the plan where you want the feature to appear, in the pop-up menu that is displayed.
- 4 (optional) Right-click the selection and click Move to Plan on the pop-up menu that is displayed, then click which plan. The selection is moved to a different plan.

**Replacing PhotoView Images**

You can try out different window or door images for example, by using the Set PhotoView Image option on the right-click pop-up menu.

**To replace PhotoView images**

- 1 On the Standard toolbar, click the Selection Tool.
- 1 On the Design window, click the PhotoView image. Then click Set Image on the Properties toolbar. The Open PhotoView Image File dialog box is displayed.
- 2 In the File Name dialog box, type the name of the file you want to insert or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK. The PhotoView Properties dialog box is displayed.
- 5 (optional) Type the width and height in inches or feet and inches, separated by a hyphen in the dialog boxes on the Properties toolbar. The image is resized.



**Elevating PhotoView Images**

You can elevate PhotoView images based on a measurement you define.

**To elevate PhotoView images by specifying a measurement**

- 1 On the Standard toolbar, click the Selection Tool.

- 2 On the Design window, click an image to select it. To select more than one image, hold down the SHIFT key while clicking.
- 3 On the Edit menu, click Set Object Elevation. The Set Elevation dialog box is displayed.



- 4 Type the measurement, in inches, that you want to elevate the image, then click OK.

**Note:** Use this feature to lower objects by typing a negative number in the Set Elevation dialog box.

**To elevate PhotoView images by using the Elevation Slider**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click an image to select it. To select more than one object, hold down the SHIFT key while clicking.
- 3 On the left side of the window, drag the Elevation Slider up or down.
- 4 Release the mouse. The image will be repositioned.

**Altering PhotoView Images**

Once you have imported your PhotoView image, you have the option of further customizing its appearance. You can resize, change elevation, rotate, flip and so on, any PhotoView image at any time during your design process.

**To resize PhotoView images by specifying dimensions**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click the PhotoView image you want to resize.
- 3 Type the width and height in inches or feet and inches, separated by a hyphen in the dialog boxes on the Properties toolbar. The image is resized.



**To resize PhotoView images by dragging**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click a PhotoView image to select it.



- 3 Holding down the mouse button on an end point of the image, drag the end point until the image is the size you want, then release the mouse button.

**Note:** Dragging an end point only changes the width of the image, to keep proportions accurate, update the height in the PhotoView Properties dialog box as shown above.

**To flip PhotoView images**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click the PhotoView image you want to flip, then click <<Flip>> on the Properties toolbar. The image is flipped.




**Masking PhotoView Images**

If you prefer that your images blend more completely into Punch! Home Design Architectural Series 3000, you may want to mask (coloring black) parts of the image. The masking process deletes those parts of the photograph that are not necessary, like signs, mailboxes, driveways, grass, trees and so on.

Although other programs are available, we recommend you use the Punch! PhotoView Editor PowerTool to make any alterations necessary to your PhotoView images.

**To mask PhotoView images**

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click the PhotoView image you want to mask.
- 3 On the PowerTools toolbar, click the Launch PhotoView Editor button. The selected image will be automatically opened in Editor.

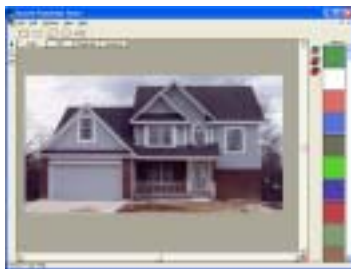


- 4 Click the Fill Tab.
- 5 Double-click one of the colors on the Preview Bar. The Color dialog box is displayed. Define the black color


used to mask as 0-0-0. If this mix is not used, the mask will not appear transparent in Punch! AS3000.



- 6 Using the PhotoView Editor tools, color everything you want to appear transparent in Punch! AS3000.

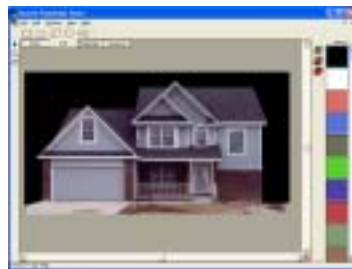

- 7 When you are finished editing, on the File Menu, click Exit and Return to Punch! Home Design. The Exit confirmation dialog box is displayed.

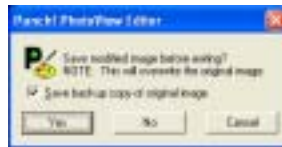

- 8 Click OK. To save a copy of the unaltered file, check the box by Save Backup Copy and follow the prompts that appear.



**Result:** The original, unmasked house on the left and the masked version on the right.

## Landscaping Using PhotoView Images

One way to get started landscaping your yard is to import a PhotoView image of your home. You can then embellish your design with landscaping and other objects.


### To landscape using PhotoView images

- 1 Import the image of your home as explained previously.



**Note:** It's very important to input the correct dimensions of your home. For more information, see "To import PhotoView images", which begins on page 162.

- 2 On the Window menu, click 3D Quarter View, click the 3D Quarter View icon, or right-click while nothing is selected and click 3D Quarter View from the pop-up menu that is displayed. Choose a different LiveView size if you prefer.
- 3 Using tools and techniques described in previous chapters, add pathways, plants, furniture, topography and so on.

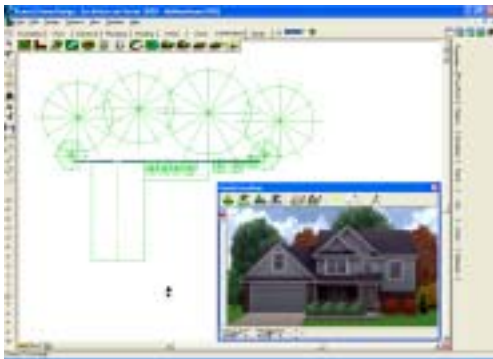


**Note:** PhotoView images appear in the 2D design window as lines, similar to interior walls.

## Right in Your Own Backyard


In Punch! Home Design Architectural Series 3000 you can even look out the window of your new home design and see your own backyard. By taking a digital picture of your backyard, you can position it so when you view your design in LiveView, you're home.

### To view your own backyard

- 1 Create your home design using tools and techniques outlined in previous chapters.
- 2 On the Window menu, click 3D Quarter View, click the 3D Quarter View icon, or right-click while nothing is selected and click 3D Quarter View from the pop-up menu that is displayed. Choose a different LiveView size if you prefer.

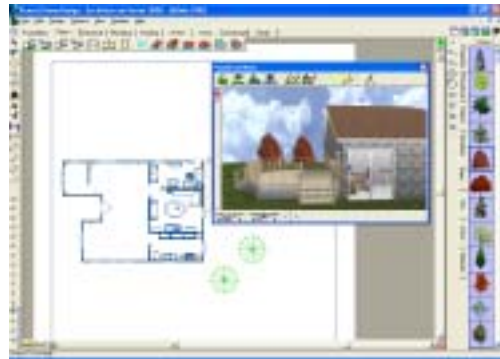

- 3 Import the PhotoView image of your own backyard.
- 4 On the Design window, move the PhotoView image to a position where it can be viewed from your virtual home.

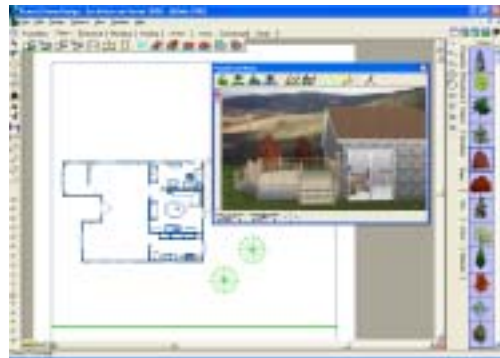


**Note:** In this example, the PhotoView image is the line at the bottom of the Design window.

## PhotoView Editor

You can now take a digital picture of your house, save it in BMP format, import it into Punch! AS3000 and apply materials and colors directly to it with Punch! Home Design Architectural Series 3000's powerful PhotoView Editor!

### Launching PhotoView Editor

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Design window, click the PhotoView image you want to mask.
- 3 Launch PhotoView Editor by clicking the PhotoView Editor icon on the PowerTool Bar. The Open Bitmap File dialog box is displayed.

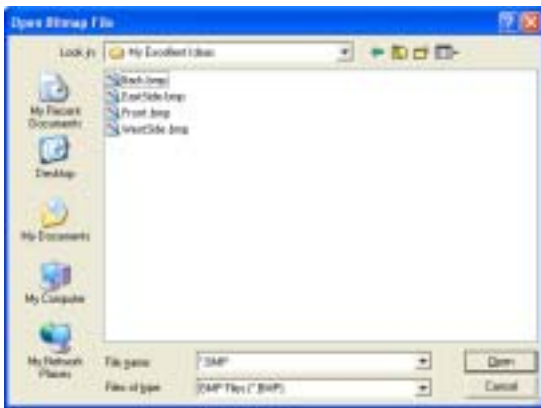

- 4 In the Look In box, type the name of the file you want to insert or search for the file by switching folders or drives.
- 5 When you see the name of the file you want to open, click to select it.
- 6 Click OK.

**Note:** If you have a PhotoView image selected when you click the Launch PhotoView Editor icon, that image will be loaded into Editor.

## File Management

With PhotoView Editor you can save your new image as a new BMP image, or you can overwrite the existing file.

### Saving an image

- 1 On the File menu, click Save Image as BMP, the Save Image dialog box is displayed.
- 2 Type a file name in the File Name text box.
- 3 Click OK.

### Opening an overlay mask

- 1 On the File menu, click Open Overlay Mask, the Open Overlay Mask dialog box is displayed.
- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK.

### Saving an overlay mask

- 1 On the File menu, click Save Overlay Mask, the Save Overlay Mask dialog box is displayed.
- 2 Type a file name in the File Name text box.
- 3 Click OK.

### Opening a custom color list

- 1 On the File menu, click Open Custom Color List, the Open Color List dialog box is displayed.
- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK.

### Saving a custom color list

- 1 On the File menu, click Save Custom Color List, the Save Color List dialog box is displayed.
- 2 Type a file name in the File Name text box.
- 3 Click OK.

## Editing Your PhotoView Image


With Punch! PhotoView Editor, you can draw shapes that will be used to color, fill, replicate or add materials to your photograph.

The four drawing styles available in PhotoView Editor are:

- **Color.** Tools on this tab will create shapes that add a tint to your photograph.
- **Fill.** Tools on this tab will completely replace the original color with a color of your choice.
- **Replicate.** Tools on this tab copy what is on the original photograph, so it can be placed elsewhere.


- Material. Tools on this tab completely replace the original material with a material of your choice.

### To draw rectangles and squares

- 1 Click the Rectangle Tool. The pointer changes to reflect drawing mode. 


**Note:** If you want to draw several rectangles, on the Edit menu, click Keep Tool Selected. To deactivate the tool, click the Selection tool on the Standard Toolbar.

- 2 Click the Color, Fill or Material that you want to apply.
- 3 Click on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer. Dimensions are displayed as you draw.
- 4 Hold the mouse button down as you extend the rectangle to the size you want.

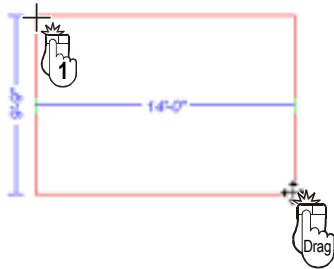


- 5 Release the mouse button.

### To draw circles and ovals


- 1 Click the Circle Tool. The pointer changes to reflect drawing mode. 


- 2 Click the Color, Fill or Material that you want to apply.
- 3 Click on the design window to define the start point of the shape. A rubber-band shape is displayed and follows the pointer. Dimensions are displayed as you draw.
- 4 Hold the mouse button down as you extend the shape to the size you want.

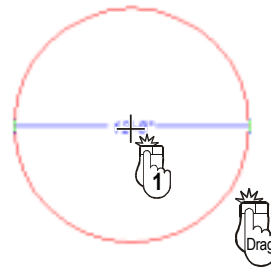

- 5 Release the mouse button.


### To draw a polygon

- 1 Click the Polygon Tool. The pointer changes to reflect drawing mode. 
- 2 Click the Color, Fill or Material that you want to apply.
- 3 Click on the design window to define the start point of the polygon. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- 4 Click and move the mouse to the next corner point. Repeat until you have drawn the necessary shape.

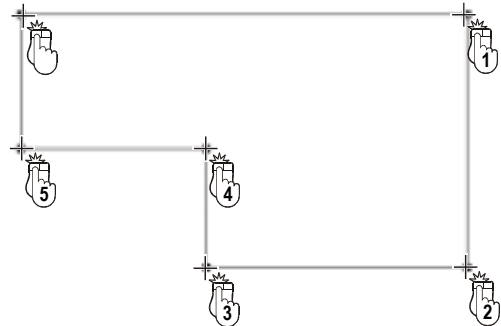


- 5 Right click to end drawing mode.

### To draw a multigon

- 1 Click the Multigon Tool. The pointer changes to reflect drawing mode. 

**Note:** On the Options menu, click Multigon Options to change the number of sides.


- 2 Click the Color, Fill or Material that you want to apply.
- 3 Click on the design window to define the start point of the multigon. A rubber-band multigon is displayed and follows the pointer.
- 4 Hold the mouse button down as you extend the multigon to the size you want.

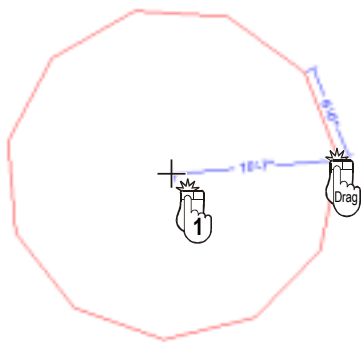

- 5 Release the mouse button.

**Note:** To change the multigon's size, but constrain its orientation, press CTRL while drawing.

### To draw a curve

- 1 Click the Curve Tool. The pointer changes to reflect drawing mode. 
- 2 Click the Color, Fill or Material that you want to apply.
- 3 Click on the design window to define the start point of the curve. A rubber-band curve is displayed and follows the pointer.
- 4 Click and move the mouse to the next point. Repeat until you have drawn the needed shape.

**Note:** Although the lines will initially appear angular, they will become curved when you end drawing mode.


- 5 Double-click to end drawing mode.

## Editing Shapes

All shapes drawn in PhotoView Editor can be edited in a variety of ways. They can be moved specified amounts, rotated, layered, edited and even converted to other types of drawing shapes. Object-Level Editing is active by default. Object-Level Editing, along with Point-Level Editing, controls how your edits impact your object. If you are in object selection mode, changes affect the object as a whole. If you are working in point selection mode, each edge of the object is treated separately as you edit.

### To move a shape


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click the shape you want to move, then click Move on the pop-up menu that is displayed. The Move dialog box is displayed.

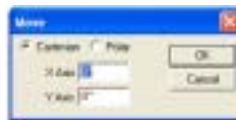

- 3 Click either Cartesian or Polar coordinates.
- 4 Type the X and Y Axis measurements, then click OK.
- 5 The shape is moved to the location you specified.

### To rotate by specifying an amount

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click the shape you want to rotate, then click Rotate on the pop-up menu that is displayed. The Rotate dialog box is displayed.

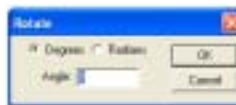

- 3 Type, in degrees or radians, the amount you want to rotate the object and click OK. The shape is rotated.


**Note:** Rotate is not available on the Replicate tab.

### To control layering

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a shape to select it.
- 3 Click Bring to Front on the pop-up menu that is displayed, to place the selected shape on the top of the other shapes.
- 4 (optional) Click Send to Back button on the pop-up menu that is displayed, to place the selected shape behind the other shapes.

### To use object selection mode

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a shape to select it; then click Object-Level Editing on the pop-up menu that is displayed.
- 3 Click the object and drag it into the new position or shape.

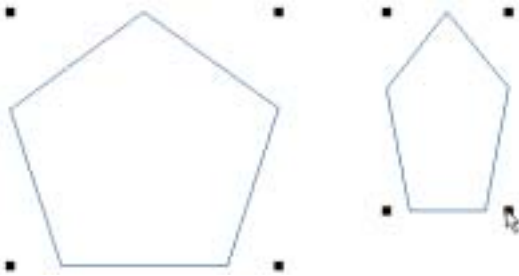

- 4 Release the mouse to end.

### To use point selection mode

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a shape to select it; then click Point-Level Editing on the pop-up menu that is displayed.
- 3 Click a point on the object and drag it into the new position to reshape it.



- 4 Release the mouse to end.

### To convert to another drawing style

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a shape to select it; then click Convert To on the pop-up menu that is displayed.
- 3 Click to select the type of object you want.

## Editing Material Perspective

In addition to the ability to rotate, move, point-level edit and so on; Material shapes can be edited to conform to the perspective in the photograph. Click a shape to select it. This will activate Perspective Editing Mode. In this mode, there will be different colored controls that manipulate different things.

### To change the size of the shape

- Click & Drag the Red dots to control the area of the shape. Drag a corner to make the shape larger or smaller.

### To set the perspective

- Click & Drag a Green dot to change the vanishing point of the material.

### To set the perspective angle

- Click and rotate the Blue arrow.
- (optional) Right-click the material, then click Change Material Angle on the pop-up menu that is displayed. Type the angle in the text box, then click OK.

### To change the centerline

- Click & Drag a Yellow dot to change the centerline of the material.

### To set the scale

- Right-click the material, then click Change Material Scale on the pop-up menu that is displayed. Type the new percentage(s) in the text box, then click OK.

### To reset perspective changes

- Right-click the material, then click Reset Material Attributes on the pop-up menu that is displayed.






# RealModel®

Punch! AS3000 integrates the exclusive, patented RealModel® technology, making it easy to construct an actual scale model of any home you draw.

Once you have completed your home design, details are automatically transferred to the RealModel application. Instructions on building your home model are printed, with numbered sections and floor plan templates that make assembling it simple.

This hands-on model shows you how to improve your design and save on construction costs, before you break ground. This is the perfect tool for presenting your ideas to your builder or architect.

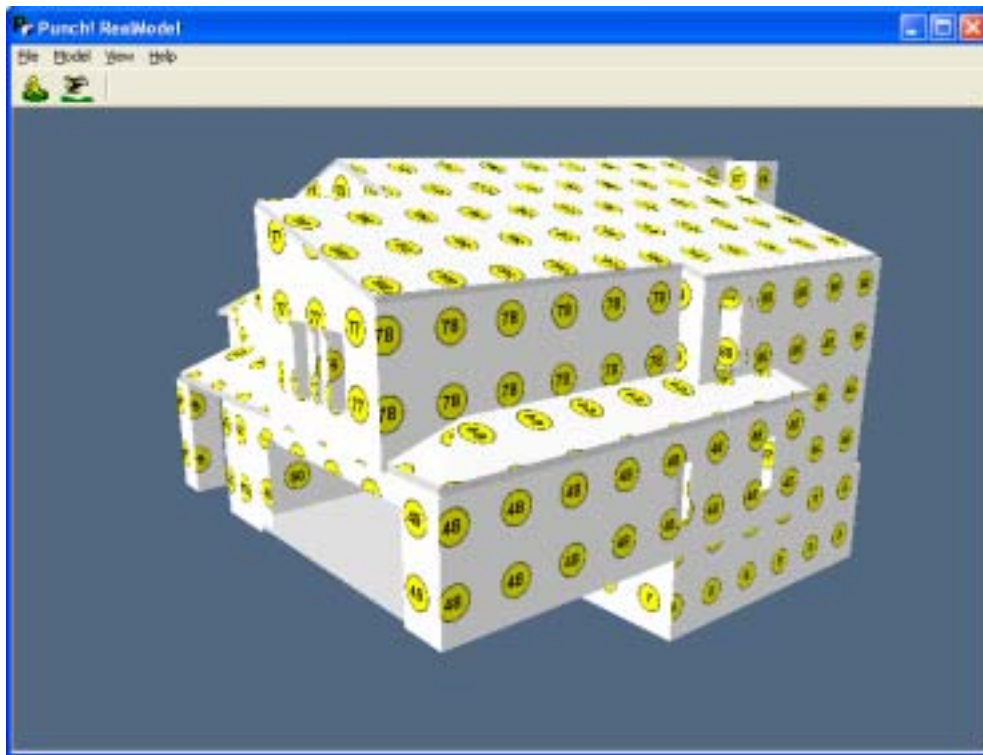

## Preparing to Construct a RealModel

When constructing a RealModel, you'll need to get a few supplies together first. Visit your local craft supply or hobby store to purchase these materials.

### Items you'll need to construct a RealModel:

- Construction material — foam board or poster board
- Adhesive — spray adhesive, rubber cement, or glue stick and so on.
- Tape
- Straight pins
- Straight-edge ruler
- Artist's knife or scalpel

Launch RealModel by clicking the RealModel button on the PowerTool tab or by clicking Launch RealModel on the File menu.



## Defining Scale

The scale you choose will define the actual size of your model. All model templates will print in this scale. For example, if you choose 1/2"=1' - a ten-foot wall will print as a five-inch template.

### To select scale

- 1 On the Model menu, click Scale.
- 2 Click an architectural scale, then click OK.

## Choosing the Construction Material

Choose a sturdy construction material such as foamcore for construction of walls and roofs. Choose a thinner material for the base of the second and third floors, since using thick material may cause a gap in the Material between floors of your final product.

### To select construction material

- 1 On the Model menu, click Construction Material.
- 2 Select the button corresponding to the thickness of the material you will use to construct your model. A preview of the actual size of your construction material is displayed.
- 3 (optional) If the exact measurement is not displayed, use the material thickness slider bar to select your construction material.
- 4 Click OK.

## Setting Print Setup

Punch! AS3000 prints using the current Windows printer. You can, however, print using any installed, Windows-compatible printer. Through the Print dialog box you can specify a printer or plotter from those currently installed.

### To set print setup parameters

- 1 On the File Menu, click Printer Setup. The Printer Setup dialog box is displayed.



- 2 Click on the down arrow next to the printer name.
- 3 Click the printer you want to use.
- 4 Click on the down arrow next to paper size.
- 5 Select the size of paper in your printer. Typically, this will be either 8 1/2x11 in (letter) or 8 1/2x14 in (legal).
- 6 Click on the down arrow next to paper source.
- 7 Click the correct option. Typically, this will be either AutoSelect or Manual Feed.
- 8 Click either Portrait or Landscape in the Orientation area.
- 9 Click OK.

## Printing Templates

The templates are used to guide you as you build your RealModel. They will specify which wall section is attached to other walls and where doors and windows are placed. Floor templates show where each wall is placed. You have the choice of printing all wall, roof or floor templates at one time or printing each individually.

### To print wall templates

- 1 On the File menu, click Print All Wall Templates. The Print dialog box is displayed.
- 2 Confirm your default printer selection, then click OK.

**To print roof templates**


- 1 On the File menu, click Print All Roof Templates. The Print dialog box is displayed.
- 2 Confirm your default printer selection, then click OK.

**To print floor templates**

- 1 On the File menu, click Print Floor Template, then click First Floor (or the floor you want to print). The Print dialog box is displayed.
- 2 Confirm your default printer selection, then click OK.

**To print a specific, individual template**

- 1 On the File menu, click Print Template. The Print Template dialog box is displayed.

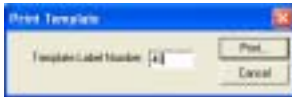

- 2 Type the number of the template you want to print, then click Print. The Print dialog box is displayed.
- 3 Confirm your printer settings, then click OK.

**Constructing Wall Templates**

You will notice that some wall templates will have darker shaded edges. These shaded areas indicate the thickness of your construction material. Use these as guidelines on where to attach adjoining walls. The directions for connecting the walls will be printed on each page. Be sure to transfer this information to the template before cutting it out.

**To construct a wall template**

- 1 Attach each wall template to your construction material, using a permanent adhesive.
- 2 Cut out each wall section to the exact size of the template. Be sure to include shaded areas.
- 3 Attach each template to its appropriate counterpart.

**Constructing Roof Templates**

Although your roof templates may print attached at points, cut out each roof section separately from your construction material to the exact size of the template.

**To construct a roof template**

- 1 Attach each roof template to your construction material, using a permanent adhesive.


- 2 Cut out each roof section to the exact size of the template.
- 3 Attach each roof template to its appropriate counterpart.
- 4 Secure the roof to the walls.

**Printing Template Materials and Colors**


To add a realistic look to your RealModel, you can print sheets of materials and colors to be applied to your model and trimmed to size. With this process you can see what your design will look like. Follow these steps for every wall and roof on your model.

**To print template materials and colors**

- 1 Decide which material you want to print first.

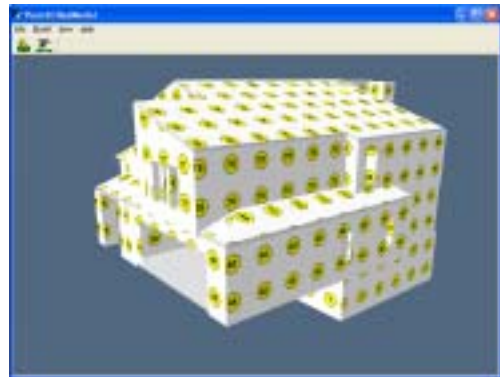

- 2 On the File menu, click Print Template Materials and Colors. The Print Template Materials and Colors dialog box is displayed.

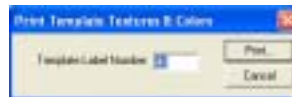

- 3 Type the template number of the material and color you want to print, then click Print. The Print dialog box is displayed.
- 4 Confirm your printer settings, then click OK.

**Note:** It is best to print and assemble the material and color on each wall before moving on to the next wall. If you choose not to do this, you should label each material template and color, as they are printed, to make identifying them easier when attaching them to your model.

## **Attaching Template Materials and Colors to Your Model**

Once the materials and colors have been printed, you will need to affix them to the appropriate template and trim them to size. It is best to use spray adhesive, glue stick or tape for this step, as using white glue may cause the paper to wrinkle.

### **To attach the template materials and colors**

- 1** Affix the material to the proper wall template, which has already been attached to the construction material.
- 2** Carefully trim around the outside edges of the wall template.
- 3** Cut out the door and window openings.
- 4** Attach each template to its appropriate counterpart.

# Cabinet Wizard

Punch! Home Design Architectural Series 3000 has a complete line of cabinets, furniture and appliances that you can drag and drop onto your design from the Object Preview Bar. For more information, see “Objects Preview Bar”, which begins on page 136.

In addition to the available pre-drawn objects, with Punch! Cabinet Wizard you can build custom cabinets to fit almost any design. Whether you choose to add cabinets to your workshop, kitchen or bathroom and so on, Cabinet Wizard makes it easy.

Although they are not set in stone, here are some basic kitchen design dimensions and clearances:


- Stock sizes begin at 9" width and increase in 3" increments
- Standard base cabinets are 36" high and at least 21" deep
- Standard wall cabinets are 12" deep and 30" high (they may be shorter if they are over a refrigerator, microwave and so on)
- Allow 18" between the counter top and the bottom of the wall cabinet above it
- Leave 24" of counter top space on at least one side of the sink
- Place the dishwasher within 3 feet of the sink
- Leave 15-18" of free counter space beside both the refrigerator and the cooking surface
- Cook tops should be no closer than 3" to the wall
- Electrical outlets that are near water should be specified as GFI
- Leave at least 30" of clearance in front of the tub or shower stall
- Standard vanity height is 32", but you may prefer higher or lower
- Whirlpool tubs typically need a space that is 36" x 72", but many take a larger area
- Allow at least 36" of clear space in front of the toilet or bidet
- Keep the sink at least 15" from the nearest wall and, when designing a bathroom with twin lavatories, at least 30" from each other

## Designing Full Cabinets

A full cabinet is one that has both a base and a top cabinet. Stock sizes begin at 9" and increase in 3" increments. With Cabinet Wizard you can design custom cabinets with just a few mouse clicks. Standard base cabinets are 36" high and at least 21" deep. Standard wall cabinets are 12" deep and 30" high, although they may be shorter if they are over a refrigerator, microwave and so on. Allow 18" between the counter top and the bottom of the wall cabinet above it.

### To design a full cabinet

- 1 Open Cabinet Wizard from Punch! AS3000 by clicking the Launch Cabinet Wizard icon on the PowerTools tab, the Cabinet Wizard dialog is displayed.

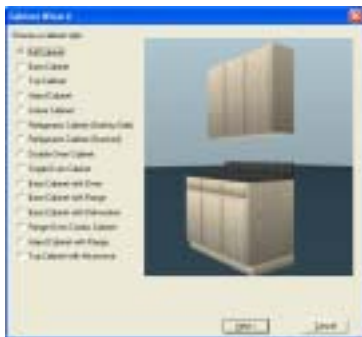

- 2 Click the radio button next to Full Cabinet; the cabinet rendering changes to reflect your choice.
- 3 Click Next.



- 4 Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.
- 5 (optional) Type an angle in the dialog box, then click Next.



- 6 Type the base length, width and depth you require in the A, B and C dialog boxes.
- 7 Type the top cabinet elevation, height and depth you require in the D, E and F dialog boxes.
- 8 Specify the width and height of the toekick you require in the G dialog box.
- 9 Specify the thickness of the counter top you plan to use in dialog box H.
- 10 Type the rail and stile dimensions in the I and J dialog boxes.
- 11 Type the door height in dialog box K.
- 12 Specify the number of doors you want.
- 13 Click to uncheck drawers if you do not want drawers in the base cabinet.
- 14 Click to uncheck backsplash if you do not want this feature or type the backsplash height in dialog box L.
- 15 Click the radio button next to the style of trim you require. Click Finish.
- 16 (optional) At any point, click Back to return to the previous dialog box.


## Designing Base Cabinets

Cabinet Wizard has four styles of base cabinets, including one standard base cabinet and three that feature built-in appliances. Standard base cabinets are 36" high and at least 21" deep. You may choose to design base cabinets at two heights, one height for standing activities (usually 36-45") and a lower height for activities performed while seated (usually 28-36").

### To design a base cabinet

- 1 Launch Cabinet Wizard.
- 2 Click the radio button next to Base Cabinet; the cabinet rendering changes to reflect your choice.

- 3 Click Next.
- 4 Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.
- 5 (optional) Type an angle in the dialog box, then click Next.

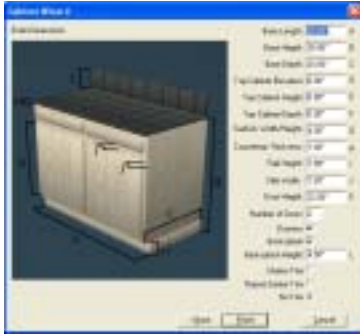

- 6 Type the base length, width and depth you require in the A, B and C dialog boxes.
- 7 Specify the width and height of the toekick you require in the G dialog box.
- 8 Specify the thickness of the counter top you plan to use in dialog box H.
- 9 Type the rail and stile dimensions in the I and J dialog boxes.
- 10 Type the door height in dialog box K.
- 11 Specify the number of doors you want.
- 12 Click to uncheck drawers if you do not want drawers in the base cabinet.
- 13 Click to uncheck backsplash if you do not want this feature or type the backsplash height in dialog box L.
- 14 Click the radio button next to the style of trim you require. Click Finish.
- 15 (optional) At any point, click Back to return to the previous dialog box.

## Designing Top Cabinets

Cabinet Wizard has two styles of top cabinets, including one standard top cabinet and one featuring a built-in microwave. Standard base cabinets are 36" high, at least 21" deep and 18" above the base cabinet.

### To design a top cabinet

- 1 Launch Cabinet Wizard.

- 2 Click the radio button next to Top Cabinet; the cabinet rendering changes to reflect your choice.
- 3 Click Next.
- 4 Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.
- 5 (optional) Type an angle in the dialog box, then click Next.



- 6 Type the base length in dialog box A.
- 7 Type the rail and stile dimensions in the I and J dialog boxes.
- 8 Specify the number of doors you want.
- 9 Click the radio button next to the style of trim you require. Click Finish.
- 10 (optional) At any point, click Back to return to the previous dialog box.

## Designing Islands

You can increase counter space by designing an island. Islands come in many styles and may contain cooktops, sinks and so on. In a well-designed kitchen, an island will not inhibit the “work triangle”, the pattern beginning at the sink, then going to the refrigerator, continuing on to the cooking surface, then returning to the sink.

### To design an island

- 1 Launch Cabinet Wizard.
- 2 Click the radio button next to Island Cabinet; the cabinet rendering changes to reflect your choice.
- 3 Click Next.
- 4 Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.

- (optional) Type an angle in the dialog box, then click Next.



- Type the base length, width and depth you require in the A, B and C dialog boxes.
- Specify the width and height of the toekick you require in the G dialog box.
- Specify the thickness of the counter top you plan to use in dialog box H.
- Type the rail and stile dimensions in the I and J dialog boxes.
- Type the door height in dialog box K.
- Specify the number of doors you want.
- Click to uncheck drawers if you do not want drawers in the base cabinet.
- Click the radio button next to the style of trim you require. Click Finish.
- (optional) At any point, click Back to return to the previous dialog box.

### Designing Cabinets with Built-in Appliances

Cabinet Wizard lets you install your appliances, too. Refrigerators, both side-by-side and stacked, range tops and ovens are easy to add to your design.

#### To design a refrigerator built into cabinets

- Launch Cabinet Wizard.
- Click the radio button next to Refrigerator Cabinet (Side-by-Side) or Refrigerator Cabinet (Stacked); the cabinet rendering changes to reflect your choice.
- Click Next.

- Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.
- (optional) Type an angle in the dialog box, then click Next.



- Type the base length, width and depth you require in the A, B and C dialog boxes.
- Type the rail and stile dimensions in the I and J dialog boxes.
- Specify the number of doors you want.
- Click the radio button next to the style of trim you require. Click Finish.
- (optional) At any point, click Back to return to the previous dialog box.

#### To design an oven built into cabinets

- Launch Cabinet Wizard.
- Click the radio button next to Double-Oven, Single-Oven or Range-Oven Combo; the cabinet rendering changes to reflect your choice.
- Click Next.
- Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.
- (optional) Type an angle in the dialog box, then click Next.





- 6 Type the base length, width and depth you require in the A, B and C dialog boxes.
- 7 Type the rail and stile dimensions in the I and J dialog boxes.
- 8 Specify the number of doors you want.
- 9 Click the radio button next to the style of trim you require. Click Finish.
- 10 (optional) At any point, click Back to return to the previous dialog box.

- 6 Type the base length, width and depth you require in the A, B and C dialog boxes.
- 7 Type the rail and stile dimensions in the I and J dialog boxes.
- 8 Specify 0 (zero) doors.
- 9 Click the radio button next to the style of trim you require.
- 10 (optional) At any point, click Back to return to the previous dialog box. Click Finish.

#### To elevate a built-in oven

- 1 Open Cabinet Wizard from Punch! AS3000 by clicking the Launch Cabinet Wizard icon on the PowerTools tab; the Cabinet Wizard dialog is displayed.
- 2 Click the radio button next to Double-Oven or Single-Oven; the cabinet rendering changes to reflect your choice.
- 3 Click Next.
- 4 Click the radio button next to the direction the cabinet will face when imported into your design, then click Next.
- 5 (optional) Type an angle in the dialog box, then click Next.



- 11 On the Size menu, click Appliance Elevation. The Appliance Elevation dialog box is displayed.



- 12 Type the dimension in the text box, then click OK.




## Defining Dimension Increments

You can gain great control over changes in the dimensions of each cabinet by specifying a dimension increment. This increment will be the measurement amount used when you click the arrows to alter each dimension.

### To change the dimension increment

- 1 On the Standard toolbar, click the Dimension Increment Tool. The Increment dialog box is displayed.

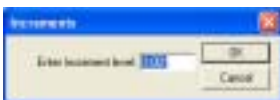

- 2 Type the dimension in the text box, then click OK.

## Specifying a Trim Style

Punch! AS3000 offers three trim styles for the front of your cabinets. You can mix and match or specify that all cabinets use the same trim.

### To specify a trim style

- 1 On the Options menu, click Trim Style. The Trim Style dialog box is displayed.




- 2 Click the radio button next to the trim style you want to use for your cabinetry, then click OK.

## Customizing Cabinet Features

Once the Cabinet Wizard has placed the cabinet in the center of the design window, you can customize the size, material, color, number of drawers and so on.

### To change the base cabinet width

- 1 On the Standard toolbar, click the Base Cabinet Width tool or on the Size menu, click Base Cabinet Width. The Base Cabinet Width dialog box is displayed.

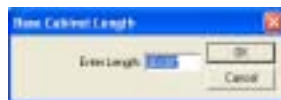

- 2 Type the width of the cabinet in the text box.
- 3 Click OK. The cabinet width changes to reflect the new measurement.

### To change the base cabinet width by set increments


- On the Standard toolbar, click the up or down arrow next to the Base Cabinet Width Tool. Each click will increase (or decrease) the dimension by the set increment.



**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the base cabinet height

- 1 On the Standard toolbar, click the Base Cabinet Height tool or on the Size menu; click Base Cabinet Height. The Base Cabinet Height dialog box is displayed.

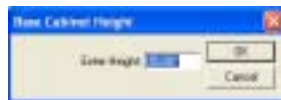


- 2 Type the height of the cabinet in the text box.
- 3 Click OK. The cabinet height changes to reflect the new measurement.

### To change the base cabinet height by set increments

- On the Standard toolbar, click the up or down arrow next to the Base Cabinet Width Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the base cabinet depth

- 1 On the Standard toolbar, click the Base Cabinet Depth tool or on the Size menu, click Base Cabinet Depth. The Base Cabinet Depth dialog box is displayed. 




- 2 Type the depth of the cabinet in the text box.
- 3 Click OK. The cabinet depth changes to reflect the new measurement.


### To change the base cabinet depth by set increments

- On the Standard toolbar, click the up or down arrow next to the Base Cabinet Width Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the top cabinet elevation

- 1 On the Standard toolbar, click the Top Cabinet Elevation tool or on the Size menu, click Top Cabinet Elevation. The Top Cabinet Elevation dialog box is displayed. 

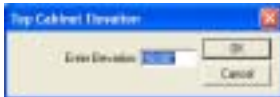


- 2 Type the elevation of the cabinet in the text box.
- 3 Click OK. The cabinet elevation changes to reflect the new measurement.


### To change the top cabinet elevation by set increments

- On the Standard toolbar, click the up or down arrow next to the Top Cabinet Elevation Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the top cabinet height

- 1 On the Standard toolbar, click the Top Cabinet Height tool or on the Size menu, click Base Cabinet Height. The Base Cabinet Height dialog box is displayed. 

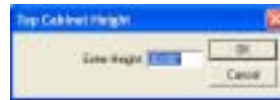


- 2 Type the height of the cabinet in the text box.
- 3 Click OK. The cabinet height changes to reflect the new measurement.

### To change the top cabinet height by set increments

- On the Standard toolbar, click the up or down arrow next to the Top Cabinet Height Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the top cabinet depth

- 1 On the Standard toolbar, click the Top Cabinet Depth tool or on the Size menu, click Top Cabinet Depth. The Top Cabinet Depth dialog box is displayed. 




- 2 Type the depth of the cabinet in the text box.
- 3 Click OK. The cabinet width changes to reflect the new measurement.


### To change the top cabinet depth by set increments

- On the Standard toolbar, click the up or down arrow next to the Top Cabinet Depth Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the counter top thickness

- 1 On the Standard toolbar, click the Counter Top Thickness tool or on the Size menu, click Counter Top Thickness. The Counter Top Thickness dialog box is displayed. 

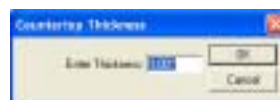

- 2 Type the thickness of the counter top in the text box.


- Click OK. The counter top thickness changes to reflect the new measurement.


### To change the counter top thickness by set increments

- On the Standard toolbar, click the up or down arrow next to the Counter Top Thickness Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the backsplash height

- On the Standard toolbar, click the Backsplash Height tool or on the Size menu, click Backsplash Height. The Counter Backsplash Height dialog box is displayed. 

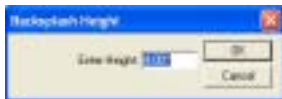


- Type the height of the backsplash in the text box.
- Click OK. The backsplash height changes to reflect the new measurement.


### To change the backsplash height by set increments

- On the Standard toolbar, click the up or down arrow next to the Backsplash Height Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the backsplash thickness

- On the Standard toolbar, click the Backsplash Thickness tool or on the Size menu, click Backsplash Thickness. The Backsplash Thickness dialog box is displayed. 

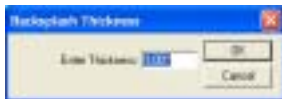


- Type the thickness of the backsplash in the text box.
- Click OK. The backsplash thickness changes to reflect the new measurement.


### To change the backsplash thickness by set increments

- On the Standard toolbar, click the up or down arrow next to the Backsplash Thickness Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the toe kick dimension

- On the Standard toolbar, click the Toe Kick tool or on the Size menu, click Toe Kick Size. The Toe Kick Height dialog box is displayed. 

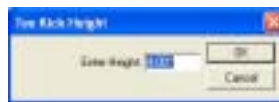


- Type the toe kick size in the text box.
- Click OK. The toe kick dimensions change to reflect the new measurement.


### To change the toe kick by set increments

- On the Standard toolbar, click the up or down arrow next to the Toe Kick Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the rail height

- On the Standard toolbar, click the Rail Height tool or on the Size menu, click Rail Height. The Rail Height dialog box is displayed. 

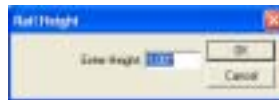


- Type the rail height in the text box.
- Click OK. The rail height changes to reflect the new measurement.


### To change the rail height by set increments

- On the Standard toolbar, click the up or down arrow next to the Rail Height Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the stile width

- 1 On the Standard toolbar, click the Stile Width tool or on the Size menu, click Stile Width. The Stile Width dialog box is displayed. 

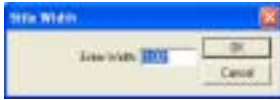


- 2 Type the stile width in the text box.
- 3 Click OK. The stile width changes to reflect the new measurement.


### To change the stile width by set increments

- On the Standard toolbar, click the up or down arrow next to the Stile Width Tool. Each click will increase (or decrease) the dimension by the set increment.

**Note:** The current measurement is always displayed next to the incremental arrows.

### To change the door height

- 1 On the Standard toolbar, click the Door Height tool or on the Size menu, click Door Height. The Door Height dialog box is displayed. 

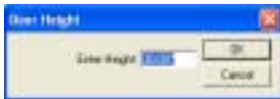

- 2 Type the door height in the text box.
- 3 Click OK. The door height changes to reflect the new measurement.

### To change the door height by set increments

- On the Standard toolbar, click the up or down arrow next to the Door Height Tool. Each click will increase (or decrease) the dimension by the set increment.


**Note:** The current measurement is always displayed next to the incremental arrows.

## Moving around in Cabinet Wizard

Cabinet Wizard provides two of the same interactive 3D viewing options available in LiveView, the 3D Walk-Through and Fly-Around views. Using these tools, you can

vary the viewing level by adjusting the angle to provide the best viewing capabilities available.

### To view your home using Walk-Through

- 1 On the View menu, click 3D Viewing Method>Walk-Through, or click the Walk-Through button on the Cabinet Wizard window. 
- 2 Position the mouse pointer in the Cabinet Wizard window, then click and drag up to move inward or down to move outward.

### To change Walk-Through elevation with the mouse


- Press and hold the right mouse button down to raise and lower the viewpoint.

### To specify an absolute Walk-Through elevation

- 1 On the View menu, click 3D Viewing Method>Walk-Through Elevation. The Walk-Through Elevation dialog box is displayed.
- 2 Type a new elevation measurement, then click OK.



### To view your home using Fly-Around

- 1 On the View menu, click 3D Viewing Method>Fly-Around, or click the Fly-Around button on the Cabinet Wizard window. 
- 2 Move the Fly-Around pointer around inside the Cabinet Wizard window and watch the view move dynamically.

### To change Fly-Around altitude with the mouse

- Press and hold the right mouse button down to change the viewpoint.

### To specify an absolute Fly-Around altitude


- 1 On the View menu, click 3D Viewing Method>Fly-Around Altitude. The Fly-Around Altitude dialog box is displayed.
- 2 Type a new elevation measurement, then click OK.



## Applying Material or Color to Cabinets

You can customize your cabinets' appearance by applying different materials or colors. Just as in Punch! AS3000, customizing your cabinetry is a simple drag and drop procedure.





### To apply material to a cabinet

- 1 In the Cabinet Wizard window, click the Material Tool. Materials appear in the Preview Bar. 
- 2 At the top of the Preview Bar, click the down arrow next to "Materials" to display the Materials style menu, then click to check the material you want. Options of the selected material will be displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Click the material you want to apply, hold down the mouse button and drag the material onto the cabinet in the Cabinet Wizard window. The material you selected is applied.


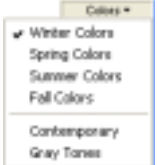
### To apply a series of the same material

- 1 In the Cabinet Wizard window, click the Material Tool. Materials appear in the drag-and-drop Preview Bar.
- 2 At the top of the Preview Bar, click the down arrow next to "Materials" to display the Materials style menu, then click to check the material you want. Options of the selected material will be displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Right-click the material you want to apply.
- 5 Right-click on each surface where you want the chosen material to appear.
- 6 Click the left mouse button to end. The material you selected is applied.

### To apply color from the color ramp


- 1 In the Cabinet Wizard window, click the Color Ramp Tool. Twenty-five shades of the same color appear in the drag-and-drop Preview Bar. 
- 2 At the top of the Preview Bar, click the plus (+)  or minus (-)  signs next to the color spectrum to change the color family. 
- 3 Scroll to view the variations of that color.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto a side of your cabinet in the Cabinet Wizard window. The color you selected is applied.

### To apply color from a customizable palette

- 1 In the Cabinet Wizard window, click the color Tool. Colors appear in the Preview Bar. 
- 2 At the top of the Preview Bar, click the down arrow next to "Colors" to display the Colors style menu, then click to check Spring or whichever category you prefer. The color palette is displayed on the Preview Bar. 
- 3 Scroll to view the available spring colors.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto a side of your cabinet in the Cabinet Wizard window. The color you selected is applied.

**Note:** To customize a color, see "To define a custom color" on page 146.


### To apply a series of the same color

- 1 In the Cabinet Wizard window, click the color Tool. Colors appear in the Preview Bar. 
- 2 At the top of the Preview Bar, click the down arrow next to "Colors" to display the Colors style menu, then click to check Spring or whichever category you prefer. The color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Right-click the color you want to apply.
- 5 On the LiveView window, right-click on each surface where you want the chosen color to appear.
- 6 Click the left mouse button to end. The color you selected is applied.

## Adding Lighting and Shadows

With Cabinet Wizard you can customize how lighting and shadows are rendered.


### To adjust the lighting intensity

- 1 On the View menu, click 3D Lighting or click the 3D Lighting button on the Cabinet Wizard window. The 3D Lighting dialog box is displayed. 
- 2 Click the direction you want the light to originate from in the Direction section of the 3D Lighting dialog box.
- 3 Increase or decrease the light intensity by clicking and dragging the intensity slider.
- 4 Increase or decrease the overall brightness by clicking and dragging the brightness slider.

5 Click OK.



### To add shadows to a 3D view

- On the View menu, click 3D Shadows or click the 3D Shadows button on the Cabinet Wizard window. 


### To hide shadows from a 3D view

- On the View menu, click to uncheck 3D Shadows or click the 3D Shadows button on the Cabinet Wizard window.

## Rendering Options


With Cabinet Wizard's rendering options you can view your cabinet in either Final Quality or ClearView.


### To view a cabinet using ClearView

- On the View menu, click Render ClearView or click the ClearView Tool. 



### To render a cabinet in 3D final quality

- On the View menu, click Render 3D Final Quality or click the 3D Final Quality Tool. 

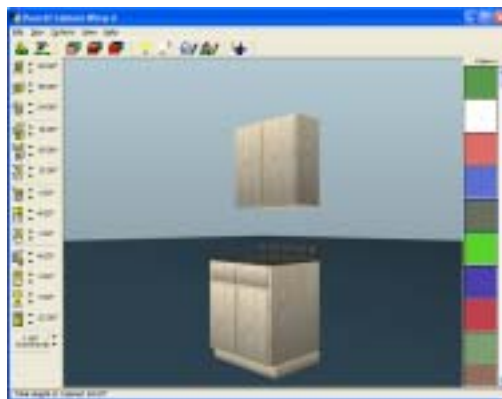

## Saving a Cabinet

When you open a file, Cabinet Workshop copies the file to your computer's memory. As you work, you modify the copy stored in memory. Any system failure or loss of power destroys that copy. To save your work permanently, you must save it to a file on a disk. A good rule of thumb is to save every 15 minutes or after you've completed any work you wouldn't want to redo.

When you click the Save command, Cabinet Workshop saves the active drawing using the name and location you specify. You can create more than one version of a drawing or save copies on another disk for safekeeping. You can save each version under a different name or you can save them under the same name in different folders or on different disks.

### To save an existing file

- On the File menu, click Save or press CTRL+S.

### To save a new, unnamed file

- 1 On the File menu, click Save As. The Save As dialog box is displayed.
- 2 In the File Name text box, type a name. Cabinet Workshop automatically adds the PCW extension.
- 3 Click Save.

## Closing a File

When you finish working with a file, close it to remove the window from the screen and to free up your computer's memory. You have the option of placing your cabinet into your home plan and move it into position.

### **To close a file**

- On the File menu, click Exit. If you have unsaved changes, Cabinet Workshop prompts you to save them before it closes the file and asks if you want the cabinet added to Punch! AS3000. Click Yes. The cabinet will be placed in the center of the design window.

### **Exporting to 3D Custom Workshop**

By exporting a Cabinet Wizard design to 3D Custom Workshop, the smallest details can be added or altered. For example, add knobs to cabinet doors, change the handles from the right side to the left side of the refrigerator and so on. For more information, see “3D Custom Workshop”, which begins on page 259.


### **To export a cabinet to 3D Custom Workshop**

- 1 On the File menu, click Export to Custom Workshop. The Save As dialog box is displayed.
- 2 In the File Name text box, type a name. Cabinet Wizard automatically adds the POB extension. Click OK.



# Framing Editor

Punch! Home Design Architectural Series 3000's versatile Framing Editor allows you to view and edit the framing of your design. You can add beams, joists and other supports, plus you have total control over what size lumber is used for what purpose. All modifications made in Framing Editor can be applied back to Punch! AS3000.

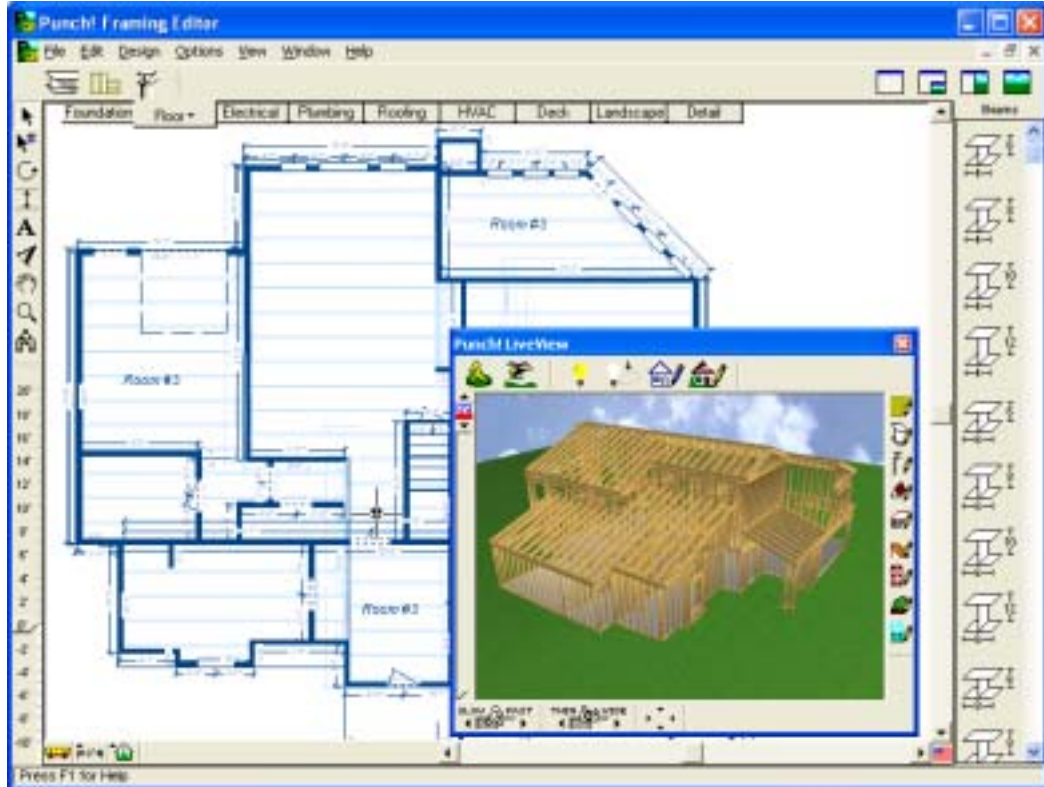

## Launching Framing Editor

Punch! Home Design Architectural Series 3000 includes a PowerTool called Framing Editor.

### Launching Framing Editor

- Launch Framing Editor by clicking the Framing Editor icon on the PowerTool Bar.




## Adding Structural Components

Framing Editor lets you define exactly where and what kind of lumber or other material is to be used for the framing phase of your design.

### To add a framing beam


- Click the Framing Beam Tool. The Preview Bar displays predefined beam sizes.
- On the Preview Bar, click the size of beam you want.
- Press the mouse button on the design window to define the start point of the beam. A rubber-band line is displayed and follows the pointer.
- Hold the mouse button down as you extend the beam to the length you want.
- Release the mouse button to end drawing mode.

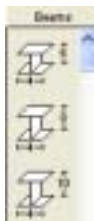

**Note:** Drawing is constrained to 15 degree angles; to release this constraint hold down the SHIFT key while drawing.

### To add flooring joists

- Click the Joists Tool. The Preview Bar displays predefined joists sizes.
- On the Preview Bar, click the size of flooring joists you want.
- Click on the design window to define the start point of the flooring joists. A rubber-band line is displayed and follows the pointer. This line signifies the first edge of the flooring joists. Notice that dimensions appear as you draw.

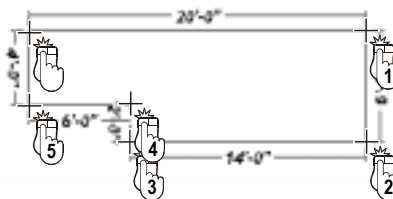

- Click and move the pointer to the next corner point. Repeat until you have completely drawn the flooring joists area.
- Right click to end drawing mode.

### To place support columns

- Click the Support Column Tool. The Preview Bar displays predefined column diameters.
- On the Preview Bar, click the column diameter you want.
- Click on the design window. A support column will be placed at the location of each click.




## Customizing Framing Beam Properties

After adding a framing beam you can change its type and size.

### To specify beam type

- Double click a framing beam. The Beam Properties menu is displayed.

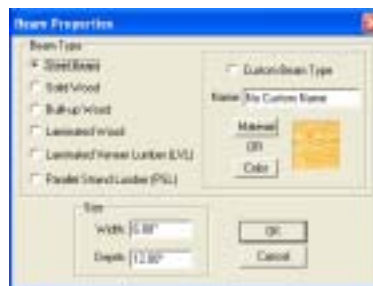

- Click the radio button next to the type of beam you want.
- Click OK.

**To customize beam type**

- 1 Double click a framing beam. The Beam Properties menu is displayed.
- 2 Click the radio button next to Custom Column Type.
- 3 Type the name you want to call the custom column type.
- 4 Click Material. The Choose Framing Material menu is displayed.
- 5 Click the radio button next to the material you want to use.
- 6 (optional) Click Color and choose a custom color.
- 7 Click OK.

**To change framing beam size**

- 1 Double click a framing beam. The Beam Properties menu is displayed.
- 2 Type the width and depth of the beam to be used.
- 3 Click OK.

**Customizing Joist Properties**

Framing Editor automatically frames each floor, wall and roof section with specifications set in Punch! Home Design Architectural Series 3000. You can easily modify all of these settings.

**To specify joist material**

- 1 Double click the perimeter of a framing section. The Joists Properties menu is displayed.



- 2 Click the radio button next to the material you want.
- 3 Click OK.

**To customize joist material**

- 1 Double click the perimeter of a framing section. The Joists Properties menu is displayed.
- 2 Click the radio button next to Custom Joists Type.
- 3 Type the name you want to call the custom joists type.

- 4 Click Material. The Choose Framing Material menu is displayed.
- 5 Click the radio button next to the material you want to use.
- 6 (optional) Click Color and choose a custom color.
- 7 Click OK.

**To change joists angle**

- 1 Double click the perimeter of a framing section. The Joists Properties menu is displayed.
- 2 Type the degree you want the joists to be placed.
- 3 Click OK.

**To change joists spacing**

- 1 Double click the perimeter of a framing section. The Joists Properties menu is displayed.
- 2 Type the new spacing in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.
- 3 Click OK.

**To change joists size**

- 1 Double click the perimeter of a framing section. The Joists Properties menu is displayed.
- 2 Type the new size in inches or feet and inches, separated by a hyphen. For example, 10-0 indicates ten feet while 10 is interpreted as ten inches.
- 3 Click OK.

**To specify rim joists**

- 1 Double click the perimeter of a framing section. The Joists Properties menu is displayed.
- 2 Check the box next to Rim Joists (Headers).
- 3 Click OK.

## Specifying Support Column Properties

After adding a support column in Framing Editor you can change its material and size.

### To specify column material

- 1 Double click a support column. The Column Properties menu is displayed.



- 2 Click the radio button next to the type of column you want.
- 3 Click OK.

### To customize column material

- 1 Double click a support column. The Column Properties menu is displayed.
- 2 Click the radio button next to Custom Column Type.
- 3 Type the name you want to call the custom column type.
- 4 Click Material. The Choose Framing Material menu is displayed.
- 5 Click the radio button next to the material you want to use.
- 6 (optional) Click Color and choose a custom color.
- 7 Click OK.

### To change column size

- 1 Double click a support column. The Column Properties menu is displayed.
- 2 Type the diameter and height of the column to be used.
- 3 Click OK.

## Customizing Door and Window Headers

Framing Editor automatically adds 2"x12" door and window headers above all openings. You can change this preset if you want a different sized header.

### To specify header size

- 1 Click a window or door on the design window, then click Header Size on the pop-up box. The Header Size menu is displayed.



- 2 Click the radio button next to the size header you want.
- 3 Click OK.

## Specifying Estimation Options

Framing Editor automatically adds 2"x12" door and window headers above all openings. You can change this preset if you want a different sized header.

### To specify estimation options

- 1 Click a window or door on the design window, then click Header Size on the pop-up box. The Header Size menu is displayed.




- 2 Click the radio button next to the size header you want.
- 3 Click OK.


## LiveView Window Options

As in Punch! AS3000, there are three pre-set LiveView window sizes. The LiveView window can be repositioned and resized to fit your requirements. All LiveView window

pre-set sizes are accessible from the right-click plan options menu. For more information on LiveView, see “Opening a LiveView Window” on page 128.


### To display the 2D plan view and a small 3D view

- Click the 3D Quarter View icon or on the Window menu, click 3D Quarter View or right-click while nothing is selected and click 3D Quarter View from the pop-up menu that is displayed. 

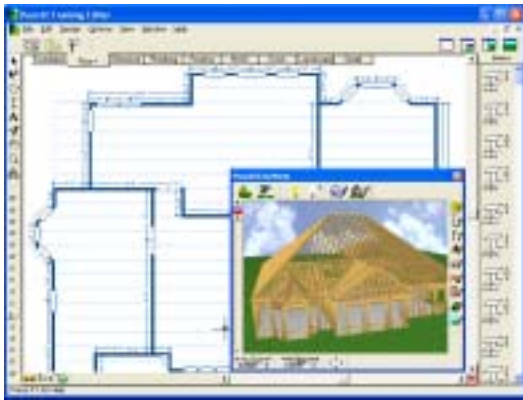

- (optional) For the other LiveView window size options, see “Opening a LiveView Window” on page 128.

### To view your home using Walk-Through

- 1 Open a LiveView window.
- 2 On the View menu, click 3D Viewing Method, Walk-Through or click the Walk-Through button  on the LiveView window.
- 3 Position the mouse pointer in the LiveView window, then click and drag up to move inward.
- 4 Position the mouse pointer in the LiveView window, then click and drag down to move outward.

### To change Walk-Through elevation with the mouse


- Press and hold the right mouse button down to raise and lower the viewpoint, alternately.

### To specify an absolute Walk-Through elevation

- 1 Open a LiveView window.
- 2 On the View menu, click 3D Viewing Method, Walk-Through Elevation. The Walk-Through Elevation dialog box is displayed.
- 3 Type a new elevation measurement in inches, then click OK.




### To view your home using Fly-Around

- 1 Open a LiveView window.
- 2 On the View menu, click 3D Viewing Method, Fly-Around or click the Fly-Around button on the LiveView window. 
- 3 Move the Fly-Around pointer around inside the LiveView window and watch the view move dynamically.

### To change Fly-Around altitude with the mouse

- Press and hold the right mouse button down to change the viewpoint.

### To specify a center of reference in Fly-Around mode

- 1 Open a LiveView window.
- 2 On the design window, click the center of reference icon and drag it to a new position. 


**Note:** The placement of the icon will be the point that the helicopter revolves around.

### To specify an absolute Fly-Around altitude


- 1 Open a LiveView window.
- 2 On the View menu, click 3D Viewing Method, Fly-Around Altitude. The Fly-Around Altitude dialog box is displayed.
- 3 Type a new elevation measurement, then click OK.



### To adjust the 3D camera angle

- 1 Open a LiveView window.
- 2 At the bottom of the LiveView window, click the right camera angle arrow to widen the view. 
- 3 At the bottom of the LiveView window, click the left camera angle arrow to narrow the view.

### To increase or decrease the Fly-Around and Walk-Through speed


- 1 Open a LiveView window.
- 2 At the bottom of the LiveView window, click the right speed arrow to speed up the viewing method. 
- 3 At the bottom of the LiveView window, click the left arrow to slow down the viewing method.

**Note:** The faster the viewing speed, the lower the quality of the rendered 3D image.

### Adding Lighting and Shadows


As in Punch! AS3000, you can customize the lighting and shadows in Framing Editor.

#### To adjust the lighting intensity in a 3D View

- 1 Open a LiveView window.
- 2 On the View menu, click 3D Lighting or click the 3D Lighting button on the LiveView window. The 3D Lighting dialog box is displayed. 
- 3 Click the direction from which you want the light to originate in the Direction section of the 3D Lighting dialog box.
- 4 Increase or decrease the light intensity by clicking and dragging the intensity slider.
- 5 Increase or decrease the overall brightness by clicking and dragging the brightness slider.
- 6 Click OK.



#### To add shadows to a 3D view

- 1 Open a LiveView window.
- 2 On the View menu, click 3D Shadows or click the 3D Shadows button on the LiveView window. 

#### To hide shadows from a 3D view

- On the View menu, click to uncheck 3D Shadows or click the 3D Shadows button on the LiveView window.



#### To control shadow quality

- On the View menu, click Shadow Quality and click either High (slow) or Low (fast).



### Using ClearView

With Framing Editor's ClearView option you can view your three dimensional framed floorplan in varying stages of opacity.

#### To view a room using ClearView

- 1 On the Window menu, click 3D Full View or click the 3D Full View icon. 
- 2 On the View menu, click Render ClearView or click the ClearView Tool. 

#### To control the opacity of a ClearView rendering

- 1 On the View menu, click Render ClearView or click the ClearView Tool. 
- 2 Click the left arrow on the Translucency Slider. Your floorplan will appear more translucent. 
- 3 Click the right arrow on the Translucency Slider. Your floorplan is displayed more solidly.


**Note:** The Translucency Slider will only appear while working in ClearView.

**Note:** To return to normal view, click the ClearView Tool.

### Adjusting Rendering Quality

Punch! AS3000 technology includes anti-aliased, photo-realism. With this technology you can view your plan with incredible detail, whether you are in material mode, ClearView or framing and so on.

#### To render a plan in 3D final quality

- 1 Open a LiveView window.
- 2 On the View menu, click Render 3D Final Quality or click the 3D Final Quality button on the LiveView window. 



### To set 3D render quality

- On the View menu, click 3D Final Quality, Low. This results in a fast rendering speed, but lower quality output.
- On the View menu, click 3D Final Quality, High. This results in a moderate rendering speed and average quality output.
- On the View menu, click 3D Final Quality, Ultra High. This results in a slower rendering speed and a high quality output.
- On the View menu, click 3D Final Quality, Excellent. This results in a very slow rendering speed, but a very high quality, sharp output.

## Viewing Elevations

Framing Editor makes seeing an elevation view of your framed floorplan a snap. With two mouse clicks, the elevation, from any of four pre-set angles, will fill the window.

### To view elevations

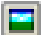- 1 On the Window menu, click 3D Full View or click  the 3D Full View icon.
- 2 In the LiveView window, click one of the Viewpoint Direction buttons. The Set Elevation Zoom menu is displayed. 
- 3 Type the Elevation Zoom you want, then click OK.

**Note:** The higher the Elevation Zoom percentage, the closer the elevation will appear.

**Note:** By clicking the other three Elevation buttons, you will view your floorplan from other angles.

### To return to default view mode

- Click either the Walk-Through or Fly-Around icon.

## Customizing LiveView

There may be times when you will need to see your framed floorplan without joists, beams, roofs and so on. With Framing Editor you have complete control over what parts of your design are visible. The buttons along the right side of the LiveView window toggle many viewing options on and off. These controls operate simply; if there is a red “X” through the icon, that feature is hidden; if there is not an “X”, that feature is visible.

### To hide/view beams in 3D

- Click the Show/Hide 3D Beams icon.



### To hide/view joists in 3D

- Click the Show/Hide 3D Joists icon.



### To hide/view support columns in 3D

- Click the Show/Hide 3D Support Column icon.



### To hide/view roofs in 3D

- Click the Show/Hide 3D Roofs icon.



### To hide/view decks in 3D

- Click the Show/Hide 3D Decks icon.



### To hide/view stairs in 3D

- Click the Show/Hide 3D Stairs icon.



### To hide/view materials in 3D

- Click the Show/Hide 3D Materials icon.



### To hide/view topography in 3D

- Click the Show/Hide 3D Topography icon.



### To hide/view 3D animation

- Click the Show/Hide 3D Animation icon.




## Using the 3D Cut-away Slider

With Framing Editor's 3D Cut-away Slider you peel away layers of your framed floorplan with ease. You can slice away layer after layer of your design from any of the four sides or from the top.

### To view a room using the 3D cut-away slider

- 1 On the Window menu, click 3D Full View or click the 3D Full View icon.
- 2 On the LiveView window, click and drag the 3D Cut-away Slider up and down to see a cut-away view of your design.

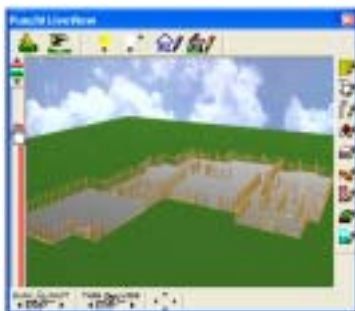

**Note:** To change the direction from which you cut away your design, click the icon above the slider.

## Printing and Exporting Files

Punch! Framing Editor prints using the current Windows printer. You can, however, print using any installed printer. You can print your drawing in color or in black and white; it can be printed to scale or you can print it all on one page, whatever you require. You can also export a rendering to BMP format for use in Layout Manager.

### To print to fit page

- 1 On the File menu, click Print to Fit Page or press Ctrl+P. A Print Manager menu will ask if you want to print your drawing in color. Click Yes to print in color, click no to print in greyscale.
- 2 The Print dialog box is displayed.



- 3 Click the down arrow next to the printer name.
- 4 Click the printer you want to use.
- 5 Click the Properties button. The Properties menu is displayed.

**Note:** The following Properties menu is that of a popular color printer. Refer to your printer's documentation on the use of its specific features.

- 6 Select the paper orientation.
- 7 Select the paper size. Typically, this will be either 8 1/2x11 in (letter) or 8 1/2x14 in (legal).
- 8 Click the down arrow next to media type. Then select the required media.
- 9 Click either Auto Feeder or Manual Feed as your paper feed method, then click OK.



**To print to scale**

- 1 On the File menu, click Print to Scale. A Print Manager menu will ask if you want to print your drawing in color. Click Yes to print in color, click no to print in greyscale.
- 2 The Print dialog box is displayed.
- 3 Click the down arrow next to the printer name.
- 4 Click the printer you want to use.
- 5 Click the Properties button. The Properties menu is displayed.
- 6 Select the paper orientation.
- 7 Select the paper size. Typically, this will be either 8.5x11 in (letter) or 8.5x14 in (legal).
- 8 Click the down arrow next to media type. Then select the required media.
- 9 Click either Auto Feeder or Manual Feed as your paper feed method, then click OK.

**To print a 3D LiveView rendering**

- 1 On the File menu, click Print 3D LiveView, then select the quality needed. The print dialog box is displayed.
- 2 Click the down arrow next to the printer name.
- 3 Click the printer you want to use.
- 4 Click the Properties button. The Properties menu is displayed.
- 5 Select the paper orientation.
- 6 Select the paper size. Typically, this will be either 8.5x11 in (letter) or 8.5x14 in (legal).
- 7 Click on the down arrow next to media type. Then select the required media.
- 8 Click either Auto Feeder or Manual Feed as your paper feed method.
- 9 Click OK.


**To export to BMP**

- 1 On the File menu, click Export BMP. The Export BMP dialog box is displayed.
- 2 In the File Name text box, type a name. Punch! Framing Editor automatically adds the BMP extension, then click OK.

**Moving Features to Different Plans**

Just like in Punch! AS3000, you can move selections to different plan layers. Move to Plan deletes these objects from their original position.

**To move features from one plan to another**


- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the feature or object you want moved. To select more than one object, press the SHIFT key while clicking objects.
- 3 On the Edit menu, click Move to Plan, then specify the plan, where you want the feature to appear, in the pop-up menu that is displayed.
- 4 (optional) Right-click the selection and click Move to Plan on the pop-up menu that is displayed, then click which plan. The selection is moved to the plan you specified.

**Note:** Items on a hidden layer are not available during a Select All process and will not be moved along with the other items and features in your drawing.



# Elevation Editor

Punch! Home Design Architectural Series 3000's powerful Elevation Editor allows you to view and edit your design in 3D! You can add and remove windows or doors, or change their elevation, and all your changes are automatically applied to your 2D floorplan. You can even save the finished image as a bitmap for use in the Layout Manager!

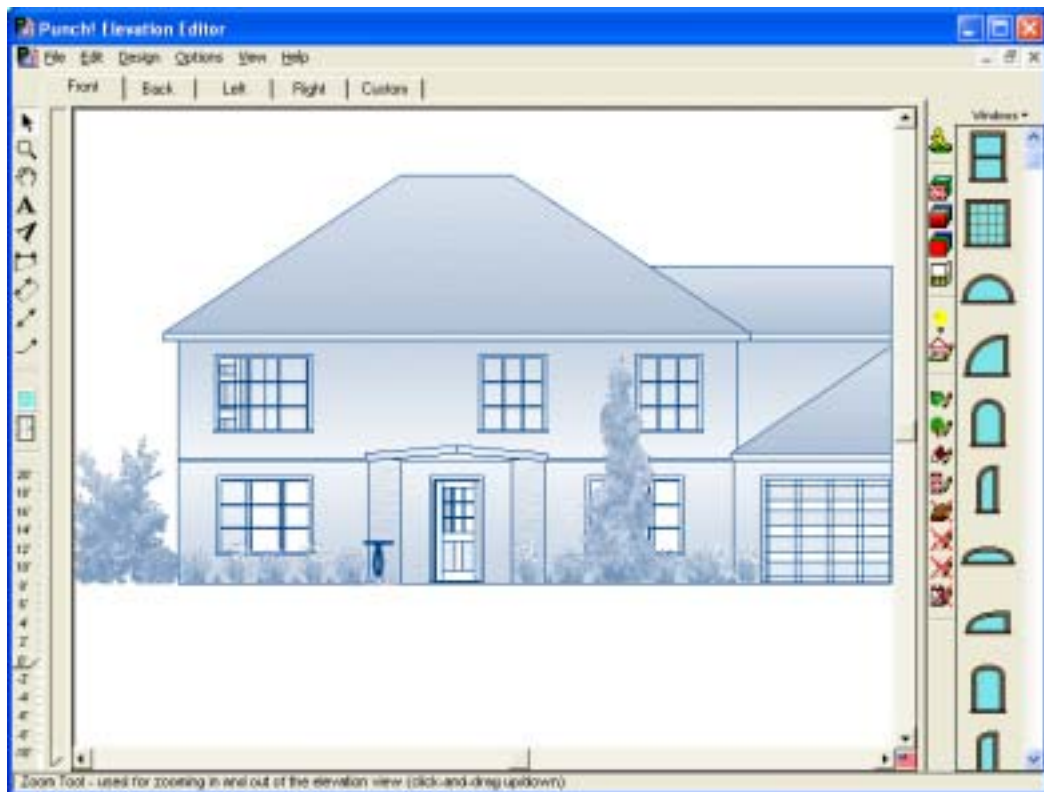

## Launching Elevation Editor

Punch! Home Design Architectural Series 3000 includes a PowerTool called Elevation Editor.

### Launching Elevation Editor

- Launch Elevation Editor by clicking the Elevation Editor icon on the PowerTool Bar.



## Adding and Modifying Doors and Windows

Punch! AS3000 takes the guesswork out of placing doors and windows by allowing you to add and modify doors and windows, while viewing your design in 3D.

There are many styles of openings and doors available in Elevation Editor and they are all placed in the same manner.

### To add an opening or door

- 1 Click the Door Tool.
- 2 The Preview Bar displays the styles that are available.
- 3 Click the arrow to the right of the word Doors above the Preview Bar to select either painted or stained.
- 4 Click the Door style of your choice. The Door Properties menu is displayed.




- 5 (optional) Click the radio button next to another style to choose a different door style.
- 6 Type the Width, Height, Elevation and Trim Width to customize them.
- 7 Click OK.
- 8 Click a wall in the Elevation Editor window where you want to place the door or opening.

## Moving an Opening or Door

Sometimes after placing a door you need to move it to a new position or delete it completely. Both of these procedures are simple.

### To move a door

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click a door to select it.
- 3 Holding down the mouse button, drag the door to a new location, then release the mouse button.

**Note:** Doors can only be moved within the wall where they were placed.

## Changing Door Settings

There is no need to redraw a door just because you need a different size or style. You can control many of the door's features through the Custom Door dialog box.

### To change door type

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a door in your drawing, then click Door Properties on the pop-up menu that is displayed. The Door Properties dialog box is displayed.
- 3 Click a new door type in the Type section of the Door Properties dialog box, then click OK.

### To resize a door by specifying dimensions

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a door in your drawing, then click Door Properties on the pop-up menu that is displayed. The Door Properties dialog box is displayed.
- 3 Type the new dimensions in the Dimensions area of the dialog box, then click OK.



### To change door swing

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a door in your drawing, then click Door Properties on the pop-up menu that is displayed. The Door Properties dialog box is displayed.
- 3 Type the new door swing angle in the text box in the Door Attributes section. Click OK. The door swing updates.

### To change the flip the direction of a door

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a door in your drawing, then click Door Properties on the pop-up menu that is displayed. The Door Properties dialog box is displayed.
- 3 Check Reverse Hinges in the Door Attribute Section. Click OK. The door flips direction.

### To change the elevation of a door

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a door to select it.
- 3 Right-click a door in your drawing, then click Door Properties on the pop-up menu that is displayed. The Door Properties dialog box is displayed.
- 4 Type the elevation in the text box. Click OK. The door is raised or lowered into position.
- 5 (optional) Use the Elevation Slider at the left of the screen to raise or lower the selected door into position.

### To remove doors

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a door to select it.
- 3 Press the DELETE key on the keyboard, or right-click, then click Clear on the pop-up menu that is displayed.

## Adding Windows

Like doors and cased openings, there are an extensive variety of windows available in the Elevation Editor and they are all placed in the same manner.

### To add a window

- 1 Click the Window Tool.



- 1 The Preview Bar displays the available styles.
- 2 Click the arrow to the right of the word Windows above the Preview Bar to select either painted or stained.
- 3 Click the Window style of your choice. The Window Properties dialog box is displayed.



- 4 Type the Width, Height, Elevation and Trim Width to customize them.
- 5 (optional) For double-hung or casement/picture windows, specify the grill spacing.
- 6 (optional) Click the radio button next to another style to choose a different window.
- 7 Click OK.
- 8 Click a wall in the Elevation Editor window where you want to place a window.

**Note:** If you change the elevation, all windows placed after this are placed at the newly-specified elevation.

## Moving a Window

If you want to change the window layout on your home, the Elevation Editor makes moving windows easy.

### To move a window

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a window to select it.
- 3 Holding down the mouse button, drag the window to a new location, then release the mouse button.

**Note:** Press SHIFT to constrain the movement to horizontal or vertical direction.

## Changing Window Settings

The Elevation Editor allows you to resize, reposition or change the properties on windows. You can specify exact dimensions, change the grill settings, flip windows vertically or horizontally or change their elevations.

### To resize a window by specifying dimensions

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a window in your drawing, then click Window Properties on the pop-up menu that is displayed. The Window Properties dialog box is displayed.



- 3 Type the new sizes in the Dimensions area of the Window Properties dialog box, then click OK.

### To flip a window

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a window in your drawing, then click Window Properties on the pop-up menu that is displayed. The Window Properties dialog box is displayed.
- 3 Check the box next to Flip Horizontally, Flip Vertically or both, then click OK.

**Note:** Flip is not available for Double Hung or Casement/Picture windows.

### To change the grill settings of a window

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Right-click a window in your drawing, then click Window Properties on the pop-up menu that is displayed. The Window Properties dialog box is displayed.



- 3 Click either Double Hung or Casement/Picture. The Grill settings dialog is displayed.

**Note:** The Grill settings dialog box only appears when a Double Hung or Casement/Picture window option is chosen.

- 4 Using the scroll bars in the Grill section of the dialog box, adjust the grill appearance, then click OK. The new grill settings are applied.

### To elevate a window

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the window to select it.
- 3 Raise or lower the window into position using the Elevation Slider at the left of the screen.



### To remove windows

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a window to select it.
- 3 Press the DELETE key on the keyboard, or right-click, then click Clear on the pop-up menu that is displayed.

## Controlling Views

The Elevation Editor has several tools that allow you to set a precise view of your home from any angle. The Elevation Editor supports the same zoom and pan capabilities you can use when viewing your design in 2D, plus you can use the 3D Cut-away Slider to see cross-sections of your design.

### To use a preset view direction


- On the Design menu, click Work on View, then select the Front, Back, Left or Right or click the Front, Back, Left or Right tabs.

**Note:** The Elevation Editor Front view corresponds to the bottom side of your 2D floor plan.

### To set a custom view direction


- 1 On the Design menu, click Work on View, then click Custom or click the Custom tab or click the Walk-Around button.
- 2 Position the mouse pointer in the Elevation Editor window, then click and drag left (or down) to rotate the view to the left. Click and drag right (or up) to rotate the view to the right.

### To zoom in

- 1 On the Standard toolbar, click the Zoom button. 
- 2 Click on the Elevation Editor window and drag in an upward direction to zoom in.
- 3 Click on the Elevation Editor window and drag in a downward direction to zoom out.

**Note:** When you click the mouse, the location of the cursor is centered on the Elevation Editor window.


### To zoom in using the wheel mouse

- 1 On the Standard toolbar, click the Zoom button. 
- 2 Click on the design window and use the mouse's wheel to zoom in and out.

**Note:** To access this feature using some older wheel mouse drivers, set the Scrolling Size to "None" in the Control Panel>Mouse>Mouse Properties>Buttons dialog box.

### To set the zoom factor


- 1 On the View menu, click Set Zoom. The Set Plan View Zoom dialog box is displayed.
- 2 Type a new zoom factor, then click OK.

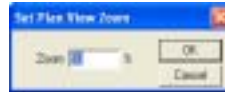

### To reset the view

- On the View menu, click Reset View or press CTRL+E on your keyboard. Your plan is reset to the original, default view.


### To pan in any direction

- 1 On the Standard toolbar, click the Pan button. The pointer changes to reflect Pan mode. 
- 2 Click on the Elevation Editor window and drag in the direction you want to view. The view changes dynamically as you move the mouse.


## Using the 3D Cut-away Slider

Using the 3D Cut-away Slider in the Elevation Editor, you can slice away layer after layer of your design from any of the four sides, making it easy to see room arrangements, furniture placement and so on.

### To view a room using the 3D cut-away slider

- Click and drag the 3D Cut-away Slider up and down to see a cut-away view of your design. 



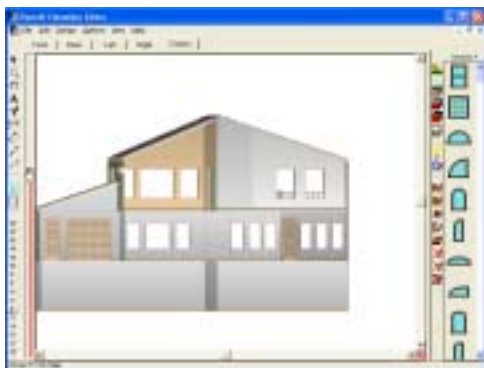

**Note:** To cut away from other directions, click one of the other direction tabs, for example Front, Back, Left, Right or Custom.

## Controlling the Appearance of your Drawing

The Elevation Editor allows you to model the appearance of your drawing on the actual appearance of your home. You can add material such as brick or stucco, or even apply color to an exterior or interior wall. You can even add wall trims,

such as wainscotting, to your interior walls to increase the realism.

## Applying Material

With Punch! AS3000, customizing the exterior appearance of your home is a simple procedure. Available materials include brick, stucco, gravel, roofing and so on. All materials may be customized using the Custom Materials. For more information see “Applying Building Materials”, which begins on page 146. You can even apply two different materials to a wall using the Wainscotting feature. For more information see “Applying Wall Trims”, which begins on page 144.

### To apply material

- 1 In the Elevation Editor, click the Material Tool. Materials appear in the drag-and-drop Preview Bar.



**Note:** When you launch Elevation Editor your design will be rendered in ClearView. Click the ClearView Tool to see it rendered with actual materials.



- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click to check the material you want, for instance brick, stucco, stone, siding and so on. Options of the selected material are displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Click the material you want to apply, hold down the mouse button and drag the material onto the exterior walls of your home in the LiveView window. The material you selected is applied.

**Note:** To increase accuracy when you apply materials, zoom in to the area you are texturing.

**Note:** To apply material to a door, apply the material to the trim of the door, not the door itself.

### To apply a series of the same material

- 1 Click the Material Tool. Materials appear in the drag-and-drop Preview Bar.
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Materials” to display the Materials style menu, then click to check the material you want, for instance brick, stucco, stone, siding and so on. Options of the selected material are displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Right-click the material you want to apply.





- 5 Right-click on each wall section where you want the material to appear.
- 6 Click the left mouse button to end the command. The material you selected is applied.

## Applying Color


With Punch! AS3000, you can try out various color schemes with ease. Now you can choose between color families with just a few mouse clicks. Walls are just one example of what can be colorized; you can also apply color to furniture, window trim, doors, fences and so on.

### To apply color from the color ramp

- 1 Click the Color Ramp Tool. Twenty-five shades of the same color appear in the drag-and-drop Preview Bar. 
- 2 (optional) At the top of the Preview Bar, click the plus (+) or minus (-) signs next to the color spectrum to change the color family. 
- 3 Scroll to view the variations of that color.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto the exterior walls of your home in the Elevation Editor window. The color you selected is applied.


**Note:** To apply color to a door, apply the color to the trim of the door, not the door itself.

### To apply color from a customizable palette

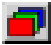- 1 Click the Color Tool. Colors appear in the drag-and-drop Preview Bar. 
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Colors” to display the Colors style menu, then click to check Spring or whichever category you prefer. The color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto the exterior walls of your home in the Elevation Editor window. The color you selected is applied.

**Note:** To customize a color, see “To define a custom color” on page 203.

### To apply a series of the same color


- 1 Click a Color Tool. Colors appear in the drag-and-drop Preview Bar. 

- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Colors” to display the Colors style menu, then click to check Spring. The Spring color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Right-click the color you want to apply.
- 5 In the Elevation Editor window, right-click on each wall where you want the chosen color to appear.
- 6 Click the left mouse button to end the command. The color you selected is applied.

## Using Custom Colors

With Punch! AS3000, you can define your own custom color with the Color dialog box. You can start with one of the basic colors available, then change its red, blue or green values, or click on a color in the color spectrum window to “mix” your own color. By customizing colors, you are sure to find the exact color you want.

### To define a custom color

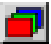- 1 Click the Color Tool. Colors appear in the drag-and-drop Preview Bar. 
- 2 (optional) At the top of the Preview Bar, click the down arrow next to “Colors” to display the Colors style menu, then click to check Summer. The Summer color palette is displayed on the Preview Bar.
- 3 Double-click one of the colors on the Preview Bar. The Color dialog box is displayed.



- 4 Click one of the Basic or Custom colors or click on the color spectrum block to select a color.
- 5 (optional) Adjust the current Red, Green and Blue values to create a custom color.


- 6 (optional) Click an area on the color spectrum window to select a color, then adjust the RGB values, if necessary.
- 7 Click OK. The color you defined is displayed on the Preview Bar replacing the original color.

## Applying Wall Trims

All interior walls are drawn with base trim. It is easy to add library paneling for an elegant appearance or use wainscotting if you want to apply two different materials on one wall.

### To apply library paneling

- 1 Click the Library Paneling button.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Library Paneling from the menu. Library paneling options appear in the Preview Bar.
- 3 Click the library paneling you want to apply; hold down the mouse button and drag it onto the wall of your home in the Elevation Editor window. The library paneling you selected is applied.

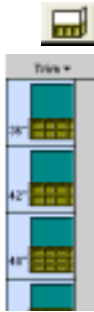

### To apply a series of library paneling

- 1 Click the Library Paneling button.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Library Paneling from the menu. Library paneling options appear in the Preview Bar.
- 3 Right-click the library paneling you want to apply.
- 4 Right-click on each wall section where you want the library paneling to appear.
- 5 Click the left mouse button to end the command. The library paneling you selected is applied.



### To remove library paneling


- 1 Click the Library Paneling button.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Base Trim from the menu. Base trim options appear in the Preview Bar.
- 3 Click the base trim you want to apply; hold down the mouse button and drag it onto the wall of your home in the Elevation Editor window. The base trim you selected is applied.



- 4 (optional) Apply the bottom base trim on the Preview Bar to remove wall trim entirely.

### To apply wainscotting

- 1 Click the Library Paneling button.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Wainscotting from the menu. Wainscotting options appear in the Preview Bar.
- 3 Click the wainscotting you want to apply; hold down the mouse button and drag it onto the wall of your home in the Elevation Editor window. The wainscotting you selected is applied.

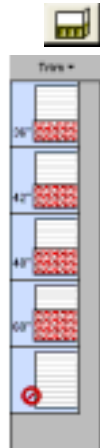

### To apply a series of wainscotting

- 1 Click the Library Paneling button.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Wainscotting from the menu. Wainscotting options appear in the Preview Bar.
- 3 Right-click the wainscotting you want to apply.
- 4 Right-click on each wall section where you want the wainscotting to appear.
- 5 Click the left mouse button to end the command. The wainscotting you selected is applied.

### To remove wainscotting

- 1 Click the Library Paneling button.
- 2 At the top of the Preview Bar, click the down arrow next to “Trim”, then select Base Trim from the menu. Base trim options appear in the Preview Bar.
- 3 Click the base trim you want to apply; hold down the mouse button and drag it onto the wall of your home in the Elevation Editor window. The base trim you selected is applied.
- 4 (optional) Apply the bottom base trim on the Preview Bar to remove wall trim entirely.

## Changing the Light and Rendering Methods

With Punch! AS3000 you can dramatically change the appearance of your drawing by toggling the rendering method between ClearView and Final Quality. ClearView shades the drawing much like a blueprint, while Final Quality fully renders the materials, objects and colors. You can also


change the appearance of your home by adjusting the intensity and brightness of the lighting.

### To view your drawing using ClearView

- On the View menu, click Render ClearView or click the ClearView Tool.



### To adjust the lighting intensity

- 1 On the View menu, click 3D Lighting or click the Lighting button in the Elevation Editor window. The 3D Lighting dialog box is displayed. 
- 2 Increase or decrease the light intensity by clicking and dragging the intensity slider.
- 3 Increase or decrease the overall brightness by clicking and dragging the brightness slider.



- 4 Click OK.

## Customizing LiveView

There may be times when you need to see your design without plants, topography, objects and so on. With Punch! AS3000 you have complete control over what parts of your design are visible. The buttons along the right side of the Elevation Editor window toggle many viewing options on and off. These controls operate simply, if there is a red “X” through the icon, that feature is hidden; if there is not an “X”, that feature is visible.

### To hide/view objects in 3D

- Click the Show/Hide 3D Objects icon.



### To hide/view plants in 3D

- Click the Show/Hide 3D Plants icon.



### To hide/view materials in 3D

- Click the Show/Hide 3D Materials icon.



### To hide/view roofs in 3D

- Click the Show/Hide 3D Roofs icon.



### To hide/view topography in 3D

- Click the Show/Hide 3D Topography icon.



### To hide/view electrical in 3D

- Click the Show/Hide 3D Electrical icon.




### To hide/view plumbing in 3D

- Click the Show/Hide 3D Plumbing icon.



### To hide/view HVAC in 3D


- Click the Show/Hide 3D HVAC icon.

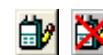


## Dimensioning

Punch! AS3000 allows you to dimension your drawing even in the elevation view. These tools allow you to combine the power of the 2D tools with the aesthetic value of the Elevation Editor.


### To use the offset dimension tool

- 1 On the Standard toolbar, click the Offset Dimension Tool. 
- 2 Click on the Elevation Editor window to define the starting point, hold down the mouse button and drag to the ending point of the measurement you require.
- 3 Release the mouse button.
- 4 Move the mouse in the direction you want to offset the dimension.
- 5 Click to end.


### To use the length dimension tool

- 1 On the Standard toolbar, click the Length Dimension Tool. 
- 2 Click on the Elevation Editor window to define the starting point, hold down the mouse button and drag to the ending point of the measurement you require.
- 3 Release the mouse button.
- 4 Move the mouse in the direction you want to offset the dimension.
- 5 Click to end.

**To use the zero-offset dimension tool**

- 1 On the Standard toolbar, click the Zero-Offset Dimension Tool. 
- 2 Click on the Elevation Editor window to define the starting point, hold down the mouse button and drag to the ending point of the measurement you require.
- 3 Release the mouse button to set the measurement.

**To use the leader dimension tool**

- 1 On the Standard toolbar, click the Leader Dimension Tool. 
- 2 Click on the Elevation Editor window to define the starting point, hold down the mouse button and drag to draw the first segment of the dimension.
- 3 Release the mouse button and move the mouse in the direction you want the second segment to be placed.
- 4 Click to end.

**To automatically dimension a door or window**

- Right-click a door or window, then click Auto-Dimension Height or Auto-Dimension Elevation on the pop-up menu that is displayed.

**To change the end point style**

- 1 On the Options menu, click Dimension Properties. The Dimension Properties dialog box is displayed.



- 2 Click to select the end point style you want to use, then click OK.

**To remove custom dimensions**


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Press the DELETE key on the keyboard.

**Adding Text**

Use text to add information to your drawing. For example, you might add text to specify a home address, the date the drawing was created or a specific feature in your plan. Punch! AS3000 gives you the flexibility to place text

anywhere in your drawing using different formatting techniques for each text instance.


**To place text in your drawing**

- 1 On the Standard toolbar, click the Multi-Line Text tool. 
- 2 Click the area where you want to place text in the Elevation Editor window. An edit text dialog box is displayed.



- 3 Type the notation in the text box. Click OK to end edit mode.
- 4 (optional) Click Font, the Font dialog box is displayed. Choose the Font, Style and Size, then click OK.

**To place text at an angle**

- 1 On the Standard toolbar, click the Rotated Text tool. 
- 2 Click the area where you want to place text in the Elevation Editor window. An edit text dialog box is displayed.



- 3 Type the notation in the text box.
- 4 Click the radio button next to the angle you want or enter a custom angle in the dialog box.
- 5 Click OK to end edit mode.
- 6 (optional) Click Font, the Font dialog box is displayed. Choose the Font, Style and Size, then click OK.

### To change formatting of existing text


- 1 On the Standard toolbar, click the selection tool, then click the text you want to change. Selection handles appear around the text.
- 2 On the Options menu, click Text or double-click the selected text. The Font dialog box is displayed.
- 3 To change the text font, click a new font on the Font list.
- 4 To change the text style, click a new style on the Font style list.
- 5 To change the text size, click a new size on the Size list.
- 6 Click OK.

## Modifying the Elevation Editor Options

Changing the Elevation Editor settings, such as units of measurement or grid spacing, is a snap. These features allow you to draw in Elevation Editor with the same precision you have in Punch! AS3000.


### To set the unit of measurement

- 1 On the Design menu, click Unit of Measure. The Unit of Measure dialog box is displayed.
- 2 Click either English or Metric, then click OK. The unit of measurement you selected is applied.

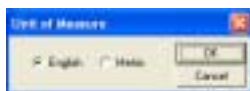

### To change the grid spacing

- 1 On the Options menu, click Grid Properties. The Grid Properties dialog box is displayed.
- 2 Type new horizontal and vertical measurements in the Snap Grid section, then click OK. The new grid spacing measurements are applied.

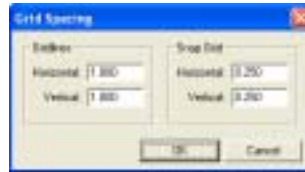

### To turn off Snap to Grid

- On the Options menu, click to uncheck Snap to Grid, or press CTRL+R. The feature is disabled. To enable Snap to Grid, simply recheck the menu item.

## Modifying Screen Colors

You can change the basic screen colors in Elevation Editor with a few clicks. The elevation color is the color in which text, dimensions and Clearview are drawn. The background color controls the color against which your design is drawn.

### To assign an elevation color

- 1 On the Options menu, click Screen Colors, then click Elevation Color. The Color matrix is displayed.
- 2 Click a color from the Basic Color list. Click OK.

**Note:** The Color/Solid preview box displays the chosen color.

- 3 (optional) Click a color from the Custom Colors list. Click OK.
- 4 (optional) Move the arrow to the right of the colorbar at the right of the Color dialog box. Click OK.
- 5 (optional) On the Color Spectrum box, click a color or click-and-drag the color marker. Click OK.
- 6 (optional) Type Hue, Saturation and Luminosity variables. Click OK.
- 7 (optional) Type Red, Green and Blue variables. Click OK.

### To assign a background color

- 1 On the Options menu, click Screen Colors, then click Background Color. The Color matrix is displayed.

2 Click a color from the Basic Color list. Click OK.

**Note:** The Color|Solid preview box displays the chosen color.

3 (optional) Click a color from the Custom Colors list. Click OK.

4 (optional) Move the arrow to the right of the colorbar at the right of the Color dialog box. Click OK.

5 (optional) On the Color Spectrum box, click a color or click-and-drag the color marker. Click OK.

6 (optional) Type Hue, Saturation and Luminosity variables. Click OK.

7 (optional) Type Red, Green and Blue variables. Click OK.

### To reset all colors

- On the Options menu, click Screen Colors, then click Reset Colors. All colors are reset to the default values.

## Outputting Elevation Data

When you've finished modifying your design in the Elevation Editor, you can save the view as a bitmap, print the view or save the changes in Punch! AS3000 and close the Elevation Editor.

### To save an elevation view as a bitmap

- 1 On the File menu, click Export Image as BMP. The Export BMP dialog box is displayed.
- 2 Type a name in the File Name text box. Punch! AS3000 automatically adds the BMP extension, then click OK.

### To save your changes and return to Punch! Home Design

- On the File menu, click Exit and Return to Punch! Home Design. Your changes are saved and the Elevation Editor window closes.

### To print your elevation view

- 1 On the File menu, click Print, then select the quality needed. The print dialog box is displayed.



2 Click the down arrow next to the printer name.

3 Click the printer you want to use.

4 Click the Properties button. The Properties dialog box is displayed.

**Note:** The following Properties dialog box is that of a popular color printer. Refer to your printer documentation on the use of specific features.

5 Select the paper orientation.

6 Select the paper size. Typically, this is either 8.5x 11 in (letter) or 8.5x14 in (legal).


7 Click the down arrow next to media type, then select the required media.

8 Click either Auto Feeder or Manual Feed as your paper feed method.

9 Click OK.

# Layout Manager

Among the Punch! Home Design Architectural Series 3000 PowerTools, is the Layout Manager. Layout Manager makes it easy to create presentations with your design. You can create a presentation of elevations which shows all four sides on one sheet or you can show a floorplan in 2D and a 3D LiveView with the roof cutaway to reveal that floor. The combinations are as varied as your needs.

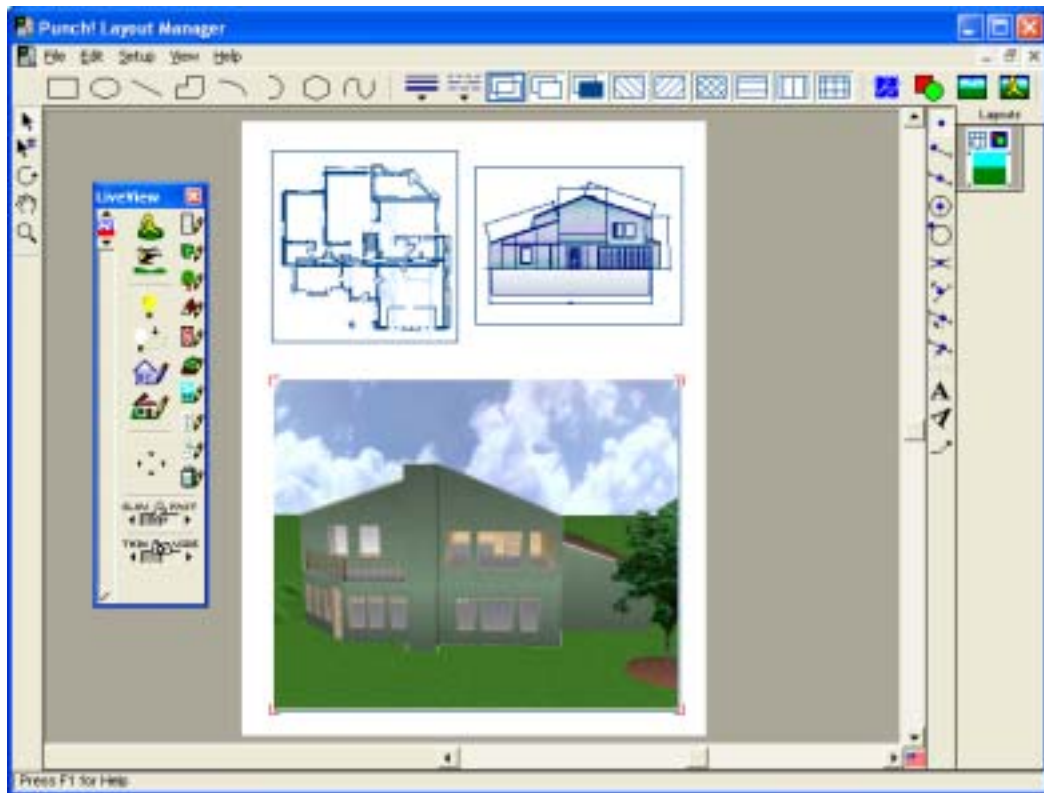

## Launching Layout Manager

Punch! Home Design Architectural Series 3000 includes a PowerTool called Layout Manager.

### Launching Layout Manager

- Launch Layout Manager by clicking the Layout Manager icon on the PowerTool Bar.



## Creating a Layout

Punch! AS3000 allows you to draw three types of layout boxes:

- Home Design Layout Boxes display a 2D plan view of your home. You can display single or multiple floors, as well as select which plan views to display.
- Image Layout Boxes display a bitmap image of your home, created in the Elevation Editor or exported from Punch! Home Design.
- LiveView Layout Boxes display a live, interactive 3D image of your home. You can use the fly-around feature to create a custom view of your home, then use the 3D Cutaway Slider to reveal interior features of the home.

## Adding Home Design Layout Boxes

You can have any number of layout boxes in your presentation to display all aspects of your home plan.

### To insert a Home Design Layout Box

- 1 Click the Home Design Layout Box icon.
- 2 Click and drag to create a rectangle. The floor plan is displayed.



### To change the visible plans


- 1 Click a Home Design Layout box to select it; right-click and select Home Design Layout Properties. The Layout Properties dialog box is displayed.
- 2 Under Visible Plans, select the plans you want displayed.
- 3 Click OK.

### To change the visible floors

- 1 Click a Home Design Layout box to select it; right-click and select Home Design Layout Properties. The Layout Properties dialog box is displayed.
- 2 Under Visible Floors, select the floor(s) you want displayed.
- 3 Click OK.

### To change the active floor

- 1 Click a Home Design Layout box to select it; right-click and select Home Design Layout Properties. The Layout Properties dialog box is displayed.
- 2 Under Active Floor, select the floor(s) you want displayed.
- 3 Click OK.

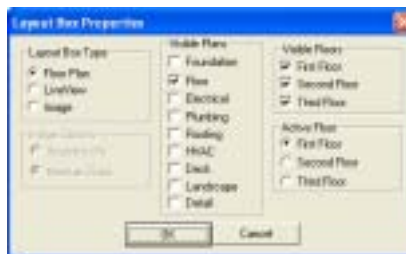

### To delete layout boxes

- Click a Home Design Layout box to select it; right-click and select Clear or press DELETE.

## Adding Image Layout Boxes

Using the Image Layout Box, you can import an image of the house plan in the presentation.

### To insert an Image Layout Box

**Note:** You must first save the plan as a .bmp file. For more information, see “To save an elevation view as a bitmap”, which begins on page 208.

- 1 Click the Image Layout Box icon.
- 2 Click and drag to create a rectangle. The Load Layout Image dialog box is displayed.
- 3 Select the .bmp file for the plan you want to display.
- 4 Click Open.



### To change the image in an Image Layout Box

- 1 Click an Image Layout Box to select it; right-click and select Change Image. The Load Layout Image dialog box is displayed.
- 2 Select the .bmp file.
- 3 Click Open.

### To change the image ratio


- Click the Image Layout Box to select it; right-click and select Stretch to fit or Maintain Ratio.



## Adding LiveView Layout Boxes

Using the LiveView Layout Box, you can include a real-time view of the house plan as part of your presentation.

### To insert a LiveView Layout Box


- 1 Click the LiveView Layout Box icon. 
- 2 Click and drag to create a rectangle. A Live View of the house is created and the LiveView toolbar appears.

## Using LiveView Tools

The LiveView tools give you the options to explore all aspects of your home design by using Walk-Through or Fly-Around to change the angle view, as well as other options that allow you to control the appearance of your drawing.

Punch! AS3000 provides two interactive 3D viewing options, they are 3D Walk-Through and Fly-Around views. Using interactive viewing, you can vary the viewing level by adjusting the altitude and height. Viewing speed and camera angle can also be adjusted to provide the best viewing capabilities available.

### To view your home using Walk-Through

- 1 On the View menu, click 3D Viewing Method, Walk-Through or click the Walk-Through Tool on the LiveView toolbar. 
- 2 Position the mouse pointer in the LiveView layout box, then click and drag up to move inward, down to move outward, or move the pointer to the left or right to turn in those respective directions.

### To change Walk-Through elevation with the mouse


- Press and hold the right mouse button down to raise and lower the viewpoint, alternately.

### To specify an absolute Walk-Through elevation

- 1 On the View menu, click 3D Viewing Method, Walk-Through Elevation. The Walk-Through Elevation dialog box is displayed.
- 2 Type a new elevation measurement in inches, then click OK.




### To view your home using Fly-Around

- 1 On the View menu, click 3D Viewing Method, Fly-Around or click the Fly-Around Tool on the LiveView toolbar. 
- 2 Move the Fly-Around pointer around inside the LiveView window and watch the view move dynamically.

### To change Fly-Around altitude with the mouse

- Press and hold the right mouse button down to change the viewpoint.

### To specify a center of reference in Fly-Around mode

- On the design window, click the center of reference icon and drag it to a new position. 


**Note:** The placement of the icon will be the point that the helicopter revolves around.

### To specify an absolute Fly-Around altitude


- 1 On the View menu, click 3D Viewing Method, Fly-Around Altitude. The Fly-Around Altitude dialog box is displayed.
- 2 Type a new elevation measurement, then click OK.



### To adjust the 3D camera angle

- 1 At the bottom of the LiveView toolbar, click the right camera angle arrow to widen the view. 
- 2 At the bottom of the LiveView toolbar, click the left camera angle arrow to narrow the view.

### To increase or decrease the Fly-Around and Walk-Through speed


- 1 At the bottom of the LiveView toolbar, click the right speed arrow to speed up the viewing method. 
- 2 At the bottom of the LiveView toolbar, click the left arrow to slow down the viewing method.

**Note:** The faster the viewing speed, the lower the quality of the rendered 3D image.

## Adding Lighting and Shadows


With Punch! AS3000 you can customize the lighting and shadows. You can virtually see how that big oak tree casts shadows into your living room window.

### To adjust the lighting intensity in a 3D View

- 3 On the View menu, click 3D Lighting or click the 3D Lighting Tool on the LiveView toolbar. The 3D Lighting dialog box is displayed. 
- 4 Click the direction from which you want the light to originate in the Direction section of the 3D Lighting dialog box.
- 5 Increase or decrease the light intensity by clicking and dragging the intensity slider.
- 6 Increase or decrease the overall brightness by clicking and dragging the brightness slider, then click OK.



### To add shadows to a 3D view

- On the View menu, click 3D Shadows or click the 3D Shadows Tool on the LiveView toolbar. 

### To hide shadows from a 3D view

- On the View menu, click to uncheck 3D Shadows or click the 3D Shadows Tool on the LiveView toolbar.

**Note:** Turning off shadow rendering will increase your rendering speed.


### To control shadow quality

- On the View menu, click Shadow Quality and click either High (slow) or Low (fast).

## Setting the Viewpoint Angle

Punch! AS3000 has four pre-set viewpoint angles and from those angles, moving to the needed viewpoint is easy.

### To set a viewpoint angle


- On the LiveView toolbar, click one of the Viewpoint Direction Tools. 

**Note:** By clicking the other three Viewpoint Direction Tools, you will view your floorplan from the other edges of your lot.

## Using ClearView



With Punch! AS3000 you can dramatically change the appearance of your drawing by rendering the image in ClearView or Final Quality. ClearView shades the drawing much like a blueprint, while Final Quality fully renders the materials, objects and colors. With a couple of clicks of the mouse, you may see potential conflicts hidden within walls between utilities, HVAC and so on.

### To view a room using ClearView

- On the View menu, click Render ClearView or click the ClearView Tool on the LiveView toolbar. 



### To control the opacity of a ClearView rendering

- 1 On the View menu, click Render ClearView or click the ClearView Tool on the LiveView toolbar. 
- 2 Click the left arrow on the Translucency Slider. Your floorplan appears more translucent. 
- 3 Click the right arrow on the Translucency Slider. Your floorplan is displayed more solidly.

**Note:** The Translucency Slider will only appear while working in ClearView.

## Adjusting Rendering Quality

Punch! AS3000 technology includes anti-aliased, photo-realism. With this technology you can view your plan with incredible detail, whether you are in Final Quality mode or ClearView mode.

### To render a plan in 3D final quality

- On the View menu, click Render 3D Final Quality or click the Render Final Quality Tool on the LiveView toolbar.



### To set 3D render quality

- On the View menu, click 3D Final Quality, then select a rendering quality. Low increases rendering speed, but lowers output quality. High results in a moderate rendering speed and average quality output. Ultra High slows rendering speed and increases output quality. Excellent results in a very slow rendering speed, but a very high quality, sharp output.

### To view a room using the 3D cut-away slider

- 1 On the Window menu, click 3D Full View or click the 3D Full View icon.
- 2 On the LiveView window, click and drag the 3D Cut-away Slider up and down to see a cut-away view of your design.



## Customizing LiveView

There may be times when you will need to see your design without plants, topography, objects and so on. With Punch! AS3000 you have complete control over what parts of your design are visible. The buttons along the right side of the LiveView toolbar toggle many viewing options on and off. These controls operate simply, if there is a red “X” through the icon, that feature is hidden; if there is not an “X”, that feature is visible.

### To hide/view roofs in 3D

- On the LiveView toolbar, click the Show/Hide 3D Roofs icon.



### To hide/view materials in 3D

- On the LiveView toolbar, click the Show/Hide 3D Materials icon.



### To hide/view doors in 3D

- On the LiveView toolbar, click the Show/Hide 3D Doors icon.



### To hide/view objects in 3D

- On the LiveView toolbar, click the Show/Hide 3D Objects icon.



### To hide/view plants in 3D

- On the LiveView toolbar, click the Show/Hide 3D Plants icon.



### To hide/view topography in 3D

- On the LiveView toolbar, click the Show/Hide 3D Topography icon.



### To suppress background animation in 3D

- On the LiveView toolbar, click the Animate 3D Background icon.



**Note:** When background animation (cloud movement) is suppressed, no resources will be used to animate the clouds.

### To hide/view electrical in 3D

- On the LiveView toolbar, click the Show/Hide 3D Electrical icon.




### To hide/view plumbing in 3D

- On the LiveView toolbar, click the Show/Hide 3D Plumbing icon.



### To hide/view HVAC in 3D

- On the LiveView toolbar, click the Show/Hide 3D HVAC icon.

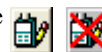

## Manipulating Layout Boxes

### To duplicate an existing layout box

- Click the layout box to select it; right-click and select Duplicate Layout.

### To move a layout box

- 1 Click the layout box you want to move.
- 2 On the Edit menu, click Move. The Move dialog box is displayed.



- 3 Click either Cartesian or Polar, then type amount you want the layout box moved in the appropriate text boxes.
- 4 Click OK. The layout box is moved based on the coordinates you specified.

**Note:** Coordinates are measured in inches or they can be measured in feet and inches separated by a hyphen.

### To nudge a layout box

- 1 Click the layout box you want to move.
- 2 On the Edit menu, click Nudge, then click the direction (up, down, left, or right) or use the arrow keys on your keyboard.

### To clear a layout box

- Click the layout box to select it; right-click and select Clear, or press DELETE.

## Annotating your Layout with CAD tools

CAD objects, such as rectangles, curves and polygons, can serve as powerful annotation tools in your layout. Whether it's creating a shaded box for text or showing design progress with a curve that extends through several image layout boxes, CAD tools can improve the usability of your layout and give it a more professional appearance.


### To draw rectangles and squares

- 1 Click the Rectangle Tool. The Preview Bar displays the predefined drawing methods that are available.
- 2 On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.



**Note:** There are four predefined drawing methods: draw rectangle from corner, draw rectangle from center, draw square from corner and draw square from center.

- 3 Click in the Layout Manager window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer. Dimensions are displayed as you draw.
- 4 Hold the mouse button down as you extend the rectangle to the size you want.

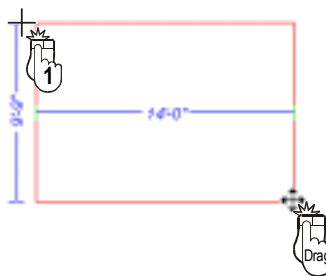

- 5 Release the mouse button.

### To draw circles and ovals


- 1 Click the Circle button. The Preview Bar displays the predefined drawing methods that are available.



- On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.

**Note:** There are four predefined drawing methods: draw oval from corner, draw oval from center, draw circle from corner and draw circle from center.

- Click in the Layout Manager window to define the start point of the shape. A rubber-band shape is displayed and follows the pointer. Dimensions are displayed as you draw.
- Hold the mouse button down as you extend the shape to the size you want.

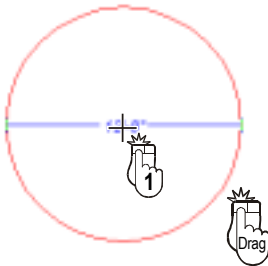

- Release the mouse button.

### To draw lines

- Click the Line button. The Preview Bar displays the predefined drawing methods that are available.
- On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.

**Note:** There are two predefined drawing methods: draw from endpoint and draw from centerpoint.

- Click in the Layout Manager window to define the start point of the line. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- Hold the mouse button down as you extend the line to the length you want.




### To draw a polygon

- Click the Polygon button. The Preview Bar displays the predefined drawing methods that are available.
- On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.

**Note:** There are two predefined drawing methods: closed polygon and open polygon.

- Click in the Layout Manager window to define the start point of the polygon. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- Click and move the mouse to the next corner point. Repeat until you have drawn the necessary shape.

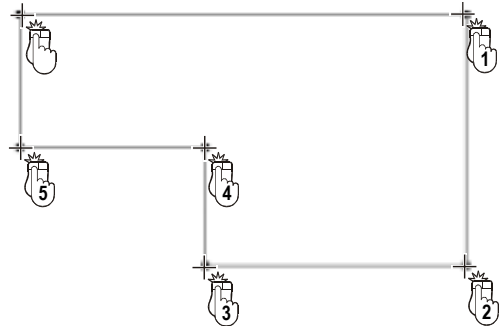


- Right click to end drawing mode.


### To draw an arc

- Click the Arc button. The Preview Bar displays the predefined drawing methods that are available.
- On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.


**Note:** There are two predefined drawing methods: free-form arc and 90 degree arc.

- Click in the Layout Manager window to define the start point of the arc. A rubber-band line is displayed and follows the pointer. Dimensions are displayed as you draw.
- Hold the mouse button down as you extend the arc to the size you want.

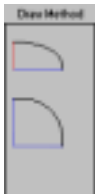

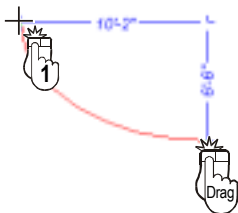
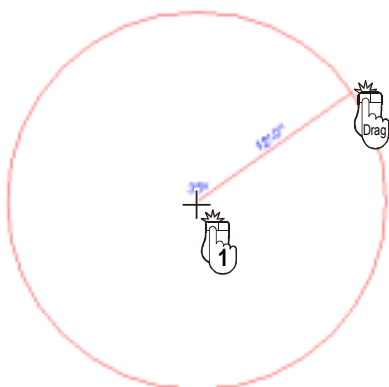


- 5 Release the mouse button.
- 6 (optional) Right-click the arc, click Convert To, then click Closed Polygon to create a closed shape.

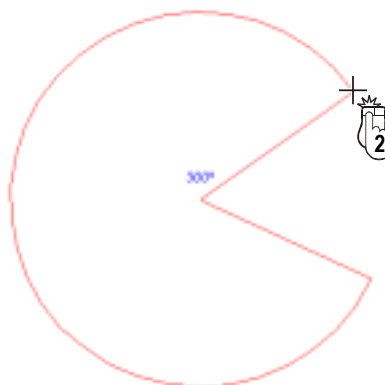

**To draw a circular arc**


- 1 Click the Circular Arc button. The pointer changes to reflect drawing mode. 
- 2 Press the mouse button on the design window to define the center point of the circular arc. A rubber-band line is displayed and follows the pointer. This line signifies the radius of your arc.



- 3 Hold the mouse button down and extend the radius to the size you want. Dimensions appear in the position readout bar as you draw.
- 4 Release the mouse button.
- 5 Move the mouse clockwise or counter-clockwise to create the shape you want.

- 6 Click to end drawing mode.


**To draw a multigon**

- 1 Click the Multigon button. The Preview Bar displays the predefined drawing methods that are available. 
- 2 On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.



**Note:** The number in the middle of the shape represents how many sides the multigon has.

- 3 Click in the Layout Manager window to define the start point of the multigon. A rubber-band multigon is displayed and follows the pointer.
- 4 Hold the mouse button down as you extend the multigon to the size you want.

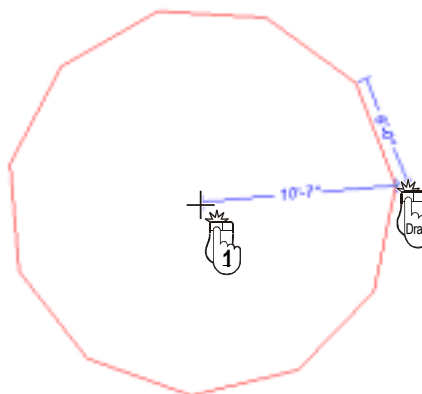

- 5 Release the mouse button.

- 6 (optional) Click the last icon on the Preview Bar. The Customize Multigon menu is displayed.



- 7 Type the number of equal-length sides you want, then click OK.

**Note:** To change the multigon's size, but constrain its orientation, press CTRL while drawing.

### To draw a curve

- 1 Click the Curve button. The Preview Bar displays the predefined drawing methods that are available.



- 2 On the Preview Bar, click one of the drawing methods. The pointer changes to reflect drawing mode.



**Note:** There are two predefined drawing methods: closed curve and open curve.

- 3 Click in the Layout Manager window to define the start point of the curve. A rubber-band curve is displayed and follows the pointer.
- 4 Click and move the mouse to the next point. Repeat until you have drawn the needed shape.

**Note:** Although the lines will initially appear to be angular, they will become curved when you end drawing mode.

- 5 Double-click to end drawing mode.

## Using Rules and Fills

You can change the thickness (weight) of the lines or fills of the CAD shapes.

### To change the line weight

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 Click the Rule Weight icon. The Rule Weight drop-down box is displayed.
- 4 Click a weight on the drop-down box. The weight of the rule outlining the detail shape is changed.
- 5 (optional) Click Other to define a custom weight.



### To change the line style

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 Click the Rule Style icon. The Rule Style drop-down box is displayed.
- 4 Click a style on the drop-down box. The style of the rule outlining the detail shape is changed.




### To change the fill

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 Click one of the Fill icons. The style of the fill is changed.



### To set the fill to transparent


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the Transparent Fill icon. The shape is transparent.

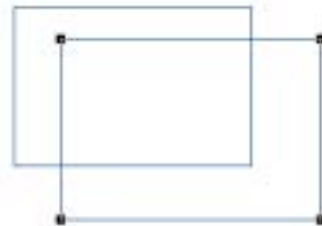

### To set the fill to white


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the White Fill icon. The shape is filled with white.



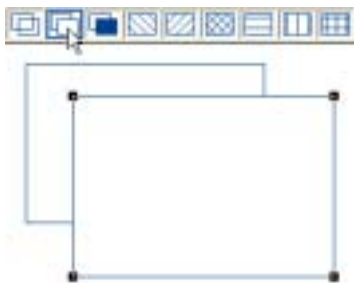


### To set the fill to solid

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click the Solid Fill icon. The shape is filled with a solid color.

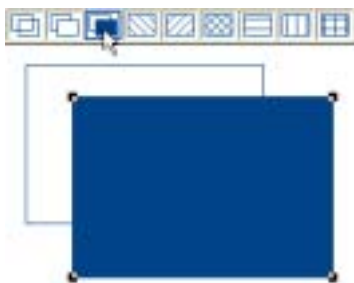

### To set the fill to a pattern

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a shape to select it.
- 3 On the Detail Plan tab, click one of the Pattern Fill icons. The shape is filled with that pattern.

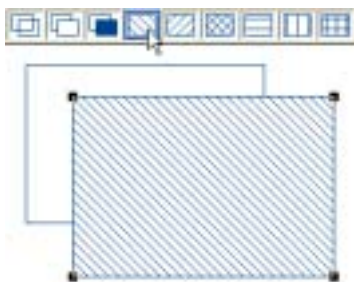


### To nudge a CAD object

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object or feature to select it.

- 3 On the Edit menu, click Nudge, then click the direction (up, down, left, right).
- 4 (optional) Use the arrow keys on your keyboard to nudge the object or feature.

### To rotate CAD objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object, wall or feature you want to rotate.
- 3 On the Standard toolbar, click the Rotate button. 
- 4 Click the object, hold down the mouse button and move the pointer in the direction that you want the object to rotate. Degree of rotation will appear in the status bar as you draw. Press SHIFT to release the 45 degree constraint.
- 5 Release the mouse button.

**Note:** The item rotates around its center point.

### To rotate by specifying an amount

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object you want to rotate.
- 3 Right-click the selection and click Rotate on the pop-up menu that is displayed.



- 4 Type, in degrees or radians, the amount you want to rotate the object and click OK. The object is rotated.

### To resize CAD objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click a CAD object to select it.
- 3 Click and hold down the mouse button, drag the segment or point to a new location, then release the mouse button.

**Note:** To constrain movements horizontally or vertically, press SHIFT while reshaping the object.

### To move CAD objects

- 1 Click the object you want to move.
- 2 On the Edit menu, click Move. The Move dialog box is displayed.





- 3 Click either Cartesian or Polar, then type amount you want the object moved in the appropriate text boxes.
- 4 Click OK. The object is moved based on the coordinates you specified.

**Note:** Coordinates are measured in inches or they can be measured in feet and inches, separated by a hyphen.

### To clear CAD objects


- Click the object to select it then right-click and click Clear.

## Using Snaps to Draw CAD Objects


Punch! AS3000 includes the power of snaps introduced in Punch! AS18. With snaps, you can define exactly what distance CAD objects are placed from other CAD objects. You can move through the Snaps Toolbar with the Tab key. Each time you press Tab, the next Snap Tool is activated, Shift-Tab reverses the process.

**Note:** Each Snap Tool defaults back to “No Snap” after it is used; double-clicking the Snap Tool will lock it in active mode.


### To snap a CAD object to the end of another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Endpoint Tool or press TAB. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the endpoint nearest where you clicked.


### To snap a CAD object to the segment center of another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Segment Centerpoint Tool or press TAB to move through the tools on Snaps toolbar. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the segment center point nearest where you clicked.


### To snap a CAD object to the center of another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Object Centerpoint Tool or press TAB to move through the tools on Snaps toolbar. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the center point of the CAD object clicked.


### To snap a CAD object to the corner of another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Object Cornerpoint Tool or press TAB to move through the tools on Snaps toolbar. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the cornerpoint of the CAD object clicked.


### To snap a CAD object exactly opposite another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Intersection Tool or press TAB to move through the tools on Snaps toolbar. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the endpoint nearest where you clicked.

### To snap a CAD object at right angle to another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Perpendicular Tool or press TAB to move through the tools on Snaps toolbar. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap” perpendicularly to the segment nearest where you clicked.


### To snap a CAD Object a specified distance from another CAD object

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to Segment-Offset Tool. The Snap to Segment-Offset dialog box is displayed. 



- 3 Type a value in the text box, then click OK.
- 4 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the point at the specified distance from the CAD object clicked.


**To snap a CAD Object a segment of another CAD object**

- 1 Click one of the CAD object buttons.
- 2 On the Snaps toolbar, click the Snap to On-Segment Tool or press TAB to move through the tools on the Snaps toolbar. 
- 3 Click a CAD object in the Layout Manager window. The CAD object will “snap to” the segment of the CAD object clicked.

**Adding Text**

Use text to add information to your drawing. For example, you might add text to specify a home address, the date the drawing was created or a specific feature in your plan. Punch! AS3000 gives you the flexibility to place text anywhere in your drawing using different formatting techniques for each text instance.

**To place text in your drawing**


- 1 On the Standard toolbar, click the Multi-Line Text Tool. 
- 2 Click the area where you want to place text in the Layout Manager window. An edit text dialog box is displayed.



- 3 Type the notation in the text box. Click OK to end edit mode.
- 4 (optional) Click Font; the Font dialog box is displayed. Choose the Font, Style and Size, then click OK.



**To place text at an angle**

- 1 On the Standard toolbar, click the Rotated Text Tool. 
- 2 Click the area where you want to place text in the Layout Manager window. An edit text dialog box is displayed.



- 3 Type the notation in the text box.
- 4 Click the radio button next to the angle you want or enter a custom angle in the dialog box.
- 5 Click OK to end edit mode.
- 6 (optional) Click Font; the Font dialog box is displayed. Choose the Font, Style and Size, then click OK.




### To change formatting of existing text

- 1 On the Standard toolbar, click the Selection Tool, then click the text you want to change. Selection handles appear around the text.
- 2 On the Setup menu, click Text or double-click the selected text. The Font dialog box is displayed.



- 3 To change the text font, click a new font on the Font list.
- 4 To change the text style, click a new style on the Font style list.
- 5 To change the text size, click a new size on the Size list.
- 6 Click OK.


### To draw a leader dimension

- 1 On the Standard toolbar, click the Leader Dimension Tool. 
- 2 Click on the Layout Manager window to define the starting point, hold down the mouse button and drag to draw the first segment of the dimension.
- 3 Release the mouse button and move the mouse in the direction you want the second segment to be placed.
- 4 Click to end.

## Viewing your Layout


The Layout Manager supports the same zoom and pan capabilities you can use when viewing your design in 2D.

### To zoom in

- 1 On the Standard toolbar, click the Zoom Tool. 
- 2 Click on the Layout Manager window and drag in an upward direction to zoom in.
- 3 Click on the Layout Manager window and drag in a downward direction to zoom out.


**Note:** When the mouse is clicked, the location of the cursor will be centered on the Layout Manager window.

### To zoom in using the wheel mouse

- 1 On the Standard toolbar, click the Zoom Tool. 
- 2 Click on the Layout Manager window and use the mouse's wheel to zoom in and out.

### To set the zoom factor


- 1 On the View menu, click Set Plan View Zoom. The Set Plan View Zoom dialog box is displayed.
- 2 Type a new zoom factor, then click OK.

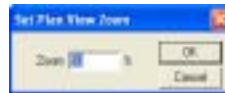

### To reset the view

- On the View menu, click Reset Plan View or press CTRL+E on your keyboard. Your plan is reset to the original, default view.

### To pan in any direction

- 1 On the Standard toolbar, click the Pan Tool. The pointer changes to reflect Pan mode. 
- 2 Click on the Layout Manager window and drag in the direction you want to view. The view changes dynamically as you move the mouse.

## Printing your Layout

Punch! AS3000 prints using the current Windows printer.

### To modify print settings

- On the Setup menu click Paper Size to display the Print Setup dialog box.

### To print your layout

- On the File menu, click Print to display the Print dialog box.

## Using Layout Templates

Layout templates allow you to design a layout page, then save that design as a generic template. If you open another drawing and apply the Layout Template, the new layout will feature the same overall arrangement. If you used Home Design Layout Boxes in the template, those layout boxes will display the new drawing with the same options. The new layout will even display the LiveView of the new drawing!

### To save your layout as a template

- 1 On the File menu, click Save as Layout Template. The Save to Layout Template Library dialog box is displayed.
- 2 Enter a name and description for the layout template.



- 3 Click OK

### To apply a template to your layout


- If you have already saved a template, open the Layout Manager and click and drag a template from the Templates preview bar.

### To delete a layout template

- Right-click a template from the Templates preview bar and click Delete Layout on the pop-up menu.

# ***DXF/DWG Export & Import***

Among the Punch! Home Design Architectural Series 3000 Power Tools, are the DXF/DWG Importer and Exporter. DXF stands for Drawing Exchange File and is an industry-standard format for sharing drawing files. DXF is a two-dimensional graphic file format supported by almost all PC-based CAD programs.

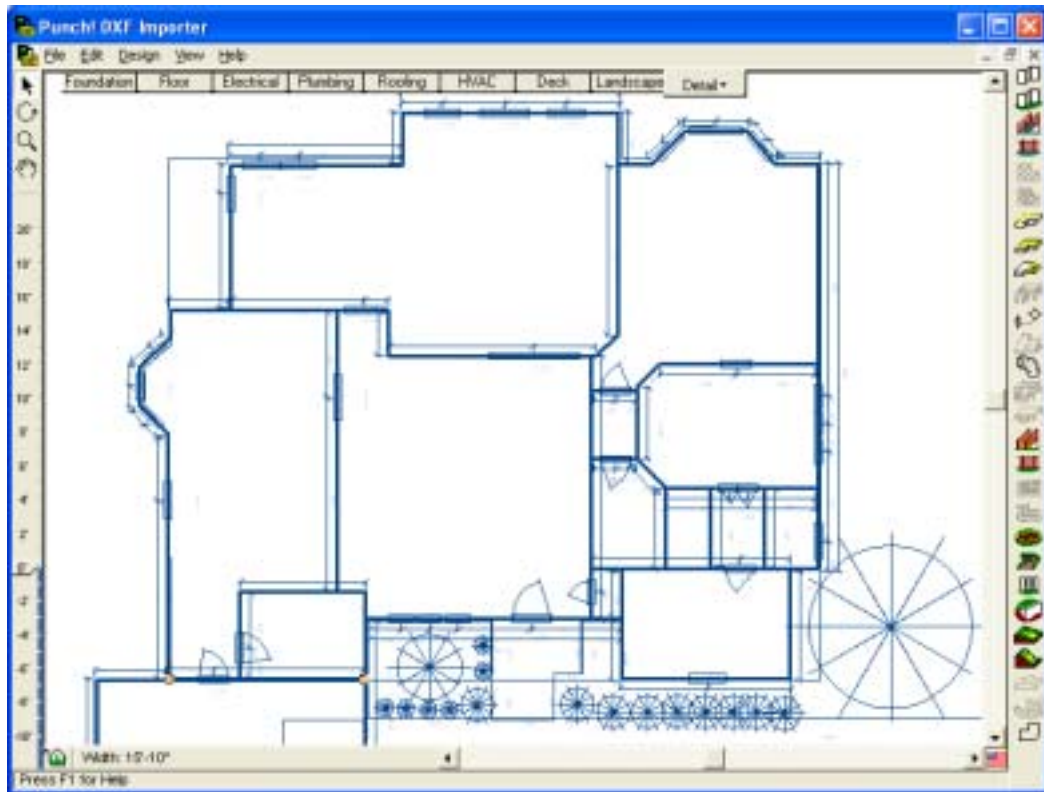

## Exporting and Importing a DXF/DWG File

You may find it useful to share files with your architect, builder, and so on. Importing and exporting your home plan to DXF or DWG format will make sharing your files simple.

### To export a DXF/DWG floorplan

- 1 Click the DXF/DWG Exporter on the PowerTools bar. The Export Options dialog box is displayed.



- 1 Click the DXF/DWG Exporter on the PowerTools bar. The Export dialog box is displayed.



- 2 Type a file name in the File Name text box. Punch! AS3000 DXF Exporter automatically adds the DXF or DWG extension.
- 3 Click Save.

### To import a DXF/DWG floorplan

- 1 Click the DXF/DWG Importer on the PowerTools bar. The Import dialog box is displayed.



- 2 In the File Name box, type the name of the file you want to open, or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, double-click to select it. The Scale menu is displayed.



- 4 Click the radio button next to the scale you want to use.
- 5 Click OK.

## Converting DXF/DWG Lines and Shapes

After importing a DXF or DWG file containing your home plan you can easily convert the lines, arcs and other shapes to intelligent Punch! AS3000 entities. This is where the importing process is most powerful. You can select each item on the floorplan, then click an icon on the Convert2 Bar to automatically change it.

The imported DXF/DWG image will be placed on the plan tab and the floor that is active. As you convert shapes, they move to other plan tabs, if appropriate. They can be moved or copied to other floors as well.

### To convert a line to an exterior wall

- 1 Right-click a line on your design window to select it.
- 2 Hold the mouse button down as you highlight Convert To on the pop-up menu that is displayed.



- 3 Click Exterior on the pop-up menu or click the Exterior Wall button on the Convert-2 bar. The line is converted to an exterior wall and moved to the Floor Plan layer.



### To convert an ellipse to a floor cutout

- 1 Right-click an ellipse on your design window to select it.
- 2 Hold the mouse button down as you highlight Convert To on the pop-up menu that is displayed.



- 3 Click Floor Cutout on the pop-up menu or click the Floor Cutout button on the Convert-2 bar. The line is converted to a floor cutout and moved to the Floor Plan layer.



### To confirm any conversion process

- 1 On the File menu, click Exit and Return to Punch! Home Design or press CTRL+Q.
- 2 Open a LiveView window to check the progress.



### Copying Objects to Different Floors

There may be times when you want multiple floors to contain duplicates. Copy to Floor leaves the object in its original position and places a duplicate where you define.

#### To copy from one floor to another

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object or objects you want duplicated.
- 3 On the Edit menu, click Copy to Floor, Upper Floor. Select Lower Floor if you want to copy the original down one level.

### Moving DXF Features

As with Punch! AS3000, you can move selections between plan layers and between floors. Move to Floor deletes these objects from their original position.

#### To move everything from one floor to another

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the object or objects you want moved. To select more than one object, press the SHIFT key while clicking objects.
- 3 On the Edit menu, click Move to Floor, Upper Floor. Select Lower Floor if you want to move the original down one level.

#### To move features from one plan to another

- 1 On the Standard toolbar, click the Selection Tool.

- 2 Click the feature or object you want moved. To select more than one object, press the SHIFT key while clicking objects.
- 3 On the Edit menu, click Move to Plan, then specify the plan where you want the feature to appear.
- 4 (optional) Right-click the selection and click Move to Plan on the pop-up menu that is displayed, then click which plan. The selection is moved to a different plan.


## Viewing the 2D Plan

When initially designing your home plan, you will probably want to view the 2D plan view only. Once completed, you can view your plan in a combination of 2D and 3D or in 3D only. In addition, Punch! AS3000 organizes your floorplan into layers which are each easily accessible with a single mouse click. For example, you can choose to view the deck plan with landscaping one moment, then quickly switch to view HVAC, electrical and plumbing. Any combination ... any time!


### To view the 2D plan only

- On the Window menu, click Plan Full View. The 2D plan view is displayed.

### To view all 2D floor plan views at once

- Click the Working Floor button at the left bottom of the design window, then click to check View All Floors. 

### To view the working floor only

- Click the Working Floor button at the left bottom of the design window, then click to check View Working Floor Only. 

### To view drawing layer combinations


- 1 Click a plan tab.
- 2 Click the arrow to the right of the tab label. A drop-down menu will appear.
- 3 Click the plan you want to view.
- 4 (optional) Repeat until the combination you want is reached.

## Zooming In and Out in 2D

You can get a closer look at an area or see a larger portion of your plan drawing by zooming in and out. By dragging over the drawing, the view enlarges or decreases dynamically. You can also set the zoom factor to obtain exact zoom


precision. Once you've finished viewing your plan close-up, you can return to the previous, full view with one mouse click.

### To zoom in

- 1 On the Standard toolbar, click the Zoom button. 
- 2 Click on the design window and drag in an upward direction to zoom in.
- 3 Click on the design window and drag in a downward direction to zoom out.

**Note:** When the mouse is clicked, the location of the cursor will be centered on the design window.

 
### To zoom in using the wheel mouse

- 1 On the Standard toolbar, click the Zoom button. 
- 2 Click on the design window and use the mouse's wheel to zoom in and out.

**Note:** To access this feature using some older wheel mouse drivers, set the Scrolling Size to "None" in the Control Panel>Mouse>Mouse Properties>Buttons dialog box.

### To set the zoom factor

- 1 On the View menu, click Set Plan View Zoom. The Set Plan View Zoom dialog box is displayed.
- 2 Type a new zoom factor, then click OK.




### To reset the 2D plan view

- On the View menu, click Reset Plan View or press CTRL+E on your keyboard. Your plan is reset to the original, default view.

## Panning Across the 2D Drawing

You can move the design window to see portions of the plan which are outside the current view by panning. Panning also makes it easy to slowly view areas of your drawing piece-by-piece.

### To pan in any direction

- 1 On the Standard toolbar, click the Pan button. The pointer changes to reflect Pan mode. 



- Click on the design window and drag in the direction you want to view. The view changes dynamically as you move the mouse.

## Using Nudge

Once you've placed an object or feature, you can precisely move it into position using Nudge. Nudge utilizes the arrow keys to move selected objects or features a specified distance. Nudge works in tandem with the Snap Grid. To learn more about the Snap Grid, refer to "Using the Grid" on page 13.

### To adjust Nudge settings

- On the Options menu, confirm there is a check next to Snap to Grid. This confirms that the Snap Grid is activated.
- On the Options menu, click Grid Properties or press CTRL+G. The Grid Properties dialog box is displayed.



- Enter, in inches, the Snap Grid distance you want to set. Click OK.
- On the Edit menu, click Nudge, then click the direction (up, down, left, right) or use the arrow keys on your keyboard.

**Note:** When the "Snap to Grid" is turned off, Nudge moves the object or feature one pixel at a time instead of snapping to grid distance.


### To move a selection using the Nudge feature

- On the Standard toolbar, click the Selection Tool.
- Click the object or feature to select it.
- On the Edit menu, click Nudge, then click the direction (up, down, left, right).
- (optional) Use the arrow keys on your keyboard to nudge the object or feature.

## Rotating a Selection

Using the rotate feature, you can easily spin an object around any point. This is useful when you want to face an object in a different direction from which it was drawn. Using the Rotate tool you can freely rotate the selection, or you can specify the exact amount of rotation using the Rotate dialog box.

### To freely rotate an object

- On the Standard toolbar, click the Selection Tool.
- Click the object, wall or feature you want to rotate.
- On the Standard toolbar, click the Rotate Tool. 
- Click the object, hold down the mouse button and move the pointer in the direction that you want the object to rotate. Degree of rotation will appear in the status bar as you draw. Press SHIFT to release the 45 degree constraint.
- Release the mouse button.

**Note:** The item rotates around its center point.

### To rotate by specifying an amount

- On the Standard toolbar, click the Selection Tool.
- Click the object, wall or feature you want to rotate.
- Right-click the selection and click Rotate on the pop-up menu that is displayed.



- Type, in degrees or radians, the amount you want to rotate the object and click OK. The object is rotated.



# ***Fireplace Wizard***

Adding a fireplace is now #10 on the “Things that Add Value to Your Home” list! With Punch! Fireplace Wizard, it’s a snap to do.

Once you have stepped through the Wizard you are able to customize every feature of your Fireplace. Then you can add materials and colors to create a truly individual home feature!

## Fireplace Wizard

Punch! Fireplace Wizard walks you through the initial design process, then allows total customization of each feature.

### To design a full fireplace

- 1 Open Fireplace Wizard from Punch! AS3000 by clicking the Launch Fireplace Wizard icon on the PowerTools tab; the Fireplace Wizard dialog is displayed.



- 2 Click Next.



- 3 Click the radio button next to the type of fireplace you want to design, then click Next.



- 4 (optional) Type new dimensions in the appropriate dialog box, then click Next.

**Note:** Don't worry, you can always change these dimensions at a later time.



- 5 (optional) Check the feature(s) you want and type new dimensions in the appropriate dialog box(es), then click Finish. Your fireplace is displayed.



## Defining Dimension Increments

You can gain great control over changes in the dimensions of each area of fireplace design by specifying a dimension increment. This increment will be the measurement amount used when you click the arrows to alter each dimension.

### To change the dimension increment

- 1 On the Design menu, click Set Dimensions Increment. The Increment Value dialog box is displayed.



- 2 Type the dimension in the text box, then click OK.

## Customizing the General Dimensions


The General Tab in Punch! Fireplace Wizard allows total control over dimensions of each face and even the firebox. As you make changes, the preview window will display them.

### To select a face


- 1 On the Design menu, click Face, then click which face on the pop-up menu.
- 2 (optional) Click a Work on Face button above the Face Dimension section of the General Tab.

**Note:** All faces may not be available at all times. Some fireplaces may have three faces, while others may have only one face.

### To change the face dimensions

- 1 On the General tab, type a dimension in the Face Width text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment. 
- 2 On the General tab, type a dimension in the Face Height text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- 3 On the General tab, type a dimension in the Face Depth text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.

### To change the firebox dimensions

- 1 On the General tab, type a dimension in the Firebox Width text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment. 
- 2 On the General tab, type a dimension in the Firebox Height text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- 3 On the General tab, type a dimension in the Firebox Depth text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- 4 On the General Tab, type a dimension in the Firebox Elevation text box or click the up or down arrow. Each

click will increase (or decrease) the dimension by the set increment.


## Customizing Hearth & Mantel Dimensions

The Hearth & Mantel Tab is where you can customize these features. As you make changes, the preview window will display them.

### To specify a hearth

- Check the Include Hearth box on the Hearth & Mantel tab.


### To change the hearth dimensions

- 1 On the Hearth & Mantel tab, type a dimension in the Hearth Width text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment. 
- 2 On the Hearth & Mantel tab, type a dimension in the Hearth Height text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- 3 On the Hearth & Mantel tab, type a dimension in the Hearth Depth text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.

### To specify a mantel

- Check the Include Mantel box on the Hearth & Mantel tab.

### To change the mantel dimensions

- 1 On the Hearth & Mantel tab, type a dimension in the Mantel Width text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment. 
- 2 On the Hearth & Mantel tab, type a dimension in the Mantel Height text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- 3 On the Hearth & Mantel tab, type a dimension in the Mantel Depth text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.

- On the Hearth & Mantel Tab, type a dimension in the Mantel Elevation text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.


## Customizing the Chimney Dimensions

The Chimney Tab in Punch! Fireplace Wizard allows you to update whether or not you want a chimney and lets you specify its dimensions. As you make changes, the preview window will display them.


### To specify a chimney

- Check the Include Chimney box on the Chimney tab.

### To change the chimney dimensions

- On the Chimney tab, type a dimension in the Chimney Width text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment. 
- On the Chimney tab, type a dimension in the Chimney Height text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- On the Chimney tab, type a dimension in the Chimney Depth text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.


### To change the chimney pot dimensions

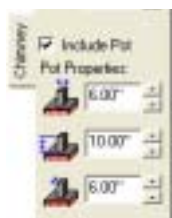- On the Chimney tab, type a dimension in the Pot Width text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment. 
- On the Chimney tab, type a dimension in the Pot Height text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.
- On the Chimney tab, type a dimension in the Pot Depth text box or click the up or down arrow. Each click will increase (or decrease) the dimension by the set increment.

## Moving around in Fireplace Wizard

Fireplace Wizard provides the same two interactive 3D viewing options available in LiveView, the 3D Walk-Through and Fly-Around views. Using these tools, you can vary the viewing level by adjusting the angle to provide the best viewing capabilities available.

### To view your home using Walk-Through

- On the View menu, click 3D Viewing Method>Walk-Through, or click the Walk-Through button  on the Fireplace Wizard window.
- Position the mouse pointer in the Fireplace Wizard window, then click and drag up to move inward or down to move outward.

### To change Walk-Through elevation with the mouse


- Press and hold the right mouse button down to raise and lower the viewpoint.

### To specify an absolute Walk-Through elevation

- On the View menu, click 3D Viewing Method>Walk-Through Elevation. The Walk-Through Elevation dialog box is displayed.
- Type a new elevation measurement, then click OK.



### To view your home using Fly-Around

- On the View menu, click 3D Viewing Method>Fly-Around, or click the Fly-Around button on the Fireplace Wizard window. 
- Move the Fly-Around pointer around inside the Fireplace Wizard window and watch the view move dynamically.

### To change Fly-Around altitude with the mouse

- Press and hold the right mouse button down to change the viewpoint.

### To specify an absolute Fly-Around altitude

- On the View menu, click 3D Viewing Method>Fly-Around Altitude. The Fly-Around Altitude dialog box is displayed.
- Type a new elevation measurement, then click OK.



## Applying Material or Color to Fireplaces


You can customize your fireplace's appearance by applying different materials or colors. Just as in Punch! AS3000 customizing your fireplace is a simple drag and drop procedure.

### To apply material to a fireplace

- 1 In the Fireplace Wizard window, click the Material Tool. Materials appear in the Preview Bar.



- 2 At the top of the Preview Bar, click the down arrow next to "Materials" to display the Materials style menu, then click to check the material you want. Options of the selected material will be displayed on the Preview Bar.

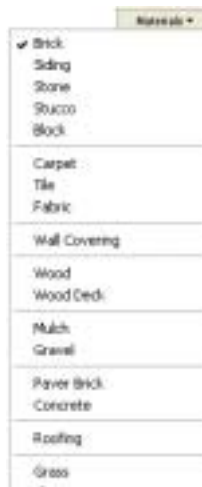

- 3 Scroll to view the available materials.
- 4 Click the material you want to apply, hold down the mouse button and drag the material onto the fireplace in the Fireplace Wizard window. The material you selected is applied.

### To apply a series of the same material

- 1 In the Fireplace Wizard window, click the Material Tool. Materials appear in the Preview Bar.
- 2 At the top of the Preview Bar, click the down arrow next to "Materials" to display the Materials style menu, then click to check the material you want. Options of the selected material will be displayed on the Preview Bar.
- 3 Scroll to view the available materials.
- 4 Right-click the material you want to apply.
- 5 Right-click on each component; for example, mantel, chimney and so on, where you want the chosen material to appear.
- 6 Click the left mouse button to end. The material you selected is applied.


### To apply color from the color ramp

- 1 In the Fireplace Wizard window, click the Color Ramp Tool. Twenty-five shades of the same color appear in the drag-and-drop Preview Bar.
- 2 At the top of the Preview Bar, click the plus (+) or minus (-) signs next to the color spectrum to change the color family.
- 3 Scroll to view the variations of that color.
- 4 Click the color you want to apply; hold down the mouse button and drag the color onto a side of your fireplace in the Fireplace Wizard window. The color you selected is applied.



### To apply color from a customizable palette

- 1 In the Fireplace Wizard window, click the color Tool. Colors appear in the Preview Bar.
- 2 At the top of the Preview Bar, click the down arrow next to "Colors" to display the Colors style menu, then click to check Spring or whichever category you prefer. The color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto a side of your fireplace in the Fireplace Wizard window. The color you selected is applied.

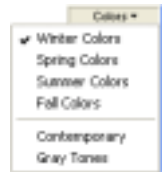

### To apply a series of the same color


- 1 In the Fireplace Wizard window, click the color Tool. Colors appear in the Preview Bar.
- 2 At the top of the Preview Bar, click the down arrow next to "Colors" to display the Colors style menu, then click to check Spring or whichever category you prefer. The color palette is displayed on the Preview Bar.
- 3 Scroll to view the available spring colors.
- 4 Right-click the color you want to apply.
- 5 On the LiveView window, right-click on each component; for example, mantel, chimney and so on, where you want the chosen color to appear.
- 6 Click the left mouse button to end. The color you selected is applied.



## Adding Lighting and Shadows


With Fireplace Wizard you can customize how lighting and shadows are rendered.

### To adjust the lighting intensity

- 1 On the View menu, click 3D Lighting or click the 3D Lighting button on the Fireplace Wizard window. The 3D Lighting dialog box is displayed. 
- 2 Click the direction from which you want the light to originate in the Direction section of the 3D Lighting dialog box.
- 3 Increase or decrease the light intensity by clicking and dragging the intensity slider.
- 4 Increase or decrease the overall brightness by clicking and dragging the brightness slider.
- 5 Click OK.



### To add shadows to a 3D view

- On the View menu, click 3D Shadows or click the 3D Shadows button on the Fireplace Wizard window. 


### To hide shadows from a 3D view

- On the View menu, click to uncheck 3D Shadows or click the 3D Shadows button on the Fireplace Wizard window.

## Rendering Options

With Fireplace Wizard's rendering options you can view your fireplace in either Final Quality or ClearView.

### To view a fireplace using ClearView

- On the View menu, click Render ClearView or click the ClearView Tool. 



### To render a fireplace in 3D final quality

- On the View menu, click Render 3D Final Quality or click the 3D Final Quality Tool. 



**Note:** If your fireplace is current in ClearView mode, you must click the ClearView Tool to render with materials.

## Saving a Fireplace

When you open a file, Fireplace Workshop copies the file to your computer's memory. As you work, you modify the copy stored in memory. Any system failure or loss of power destroys that copy. To save your work permanently, you must save it to a file on a disk. A good rule of thumb is to save every 15 minutes or after you've completed any work you wouldn't want to redo.

When you click the Save As command, Fireplace Workshop saves the active drawing using the name and location you specify. You can create more than one version of a drawing



or save copies on another disk for safekeeping. You can save each version under a different name or you can save them under the same name in different folders or on different disks.

### To save an existing file

- On the File menu, click Save or press CTRL+S.

### To save a new, unnamed file

- 1 On the File menu, click Save As. The Save As dialog box is displayed.
- 2 In the File Name text box, type a name. Fireplace Workshop automatically adds the PFW extension.
- 3 Click Save.

## Closing a File

When you finish working with a file, close it to remove the window from the screen and to free up your computer's memory. You have the option of placing your fireplace into your home plan and move it into position.

### To close a file

- On the File menu, click Exit and Return to Punch! Home Design. The Save fireplace to current design menu is displayed. Click Yes. The fireplace will be placed in the center of the design window.

## Exporting to 3D Custom Workshop

By exporting a Fireplace Wizard design to 3D Custom Workshop, the smallest details can be added or altered. For more information, see "3D Custom Workshop", which begins on page 259.

### To export a fireplace to 3D Custom Workshop

- 1 On the File menu, click Export to Custom Workshop. The Save As dialog box is displayed.
- 2 In the File Name text box, type a name. Fireplace Wizard automatically adds the POB extension. Click OK.

**Note:** You may then open the file in 3D Custom Workshop.



Part 1

# ***Punch!***

# ***Animator***

Chapter 30: File Management and Editing Controls . . .	239
Chapter 31: KeyPoints and Animation Paths . . . . .	243
Chapter 32: Segment Tab . . . . .	247
Chapter 33: Video Tab . . . . .	255



# ***File Management and Editing Controls***

When you start Punch! Animator, the current file from your Punch! PowerTool-enabled software program will be loaded into memory and displayed. If you are returning to work on an existing animation file, you must open it or display it, on the screen. Opening a file involves clicking Open on the File menu and specifying the name of the file you want to open. Once you have opened a file, you can edit, import, export, print, view and save it.

The changes you make to a plan drawing occur only in your computer's memory, until you save them. To preserve a drawing for later use, you must save it to a file. If you want to save a drawing using its current name or if you want to save a new, untitled drawing, use Save. If you want to save a drawing using a new name, use Save As.

In addition to standard Windows commands like cut, copy, paste and delete, Punch! Animator includes more sophisticated modes of manipulating your design. You can move or rotate selected KeyPoints, Animation Segments or Animation Paths. Learn to customize settings like nudge factor, so Punch! Animator works best for you.

## Exporting an AVI File

Punch! Animator exports AVI files to make it easier to show your architect, friends, colleagues and so on the ins and outs of your newly designed home plan.

### To export an AVI file

- 1 On the File menu, click Export Animation Video or press Ctrl+S. The Save Animation Video dialog box is displayed.



- 2 (optional) On the Toolbar, click the Export Animation Video button. The Save Animation Video dialog box is displayed.
- 3 In the File Name text box, type a name. Punch! Animator automatically adds the AVI extension.
- 4 (optional) If you want to save the drawing to a different drive or folder, click a different drive and folder or type the complete path in the File Name text box.
- 5 Click OK.



**Note:** To play back the video after exporting, make sure the Play Video After Export option is checked on the Video Tab.

### To set the temporary directory

- 1 On the Video Tab, click Temp Directory. The Browse for Folder dialog box is displayed.



- 2 Click the folder where you want your working files to be saved. Click OK.

## Opening a Video File

You can view any exported video file at any time.

### To open and play an existing AVI file

- 1 On the File menu, click Open Video File or press Ctrl+O. The Open dialog box is displayed.
- 2 In the File Name text box, type the name of the file you want to open or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK. Depending on the media player installed on your computer, a player window similar to this one is displayed.



- 5 View your movie using the Play, Pause, Stop and so on, buttons available from your media playing software.

## Saving Animation Paths

With Punch! Animator you can save a variety of Animation Paths to be sure you have just the right viewpoints recorded.

### To save an animation path

- 1 On the File menu, click Save Animation Paths. The Save As dialog box is displayed.
- 2 If you want to save the drawing under another name, type a name in the File Name text box.
- 3 If you want to save the drawing to a different drive or folder, click a different drive and folder or type the complete path in the File Name text box.
- 4 Click OK.

## Importing Animation Paths

When you decide which view you like, you can import any of the saved Animation Paths.

### To import an animation path

- 1 On the File menu, click Import Animation Paths. The Open dialog box is displayed.
- 2 In the File Name text box, type the name of the file you want to open or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK.

### Closing a File

When you finish working with a file, close it to remove the window from the screen and to free up your computer's memory. When you are done working in Punch! Animator, close all your files and return to Punch! Home Design.

#### To close a file

- On the File menu, click Exit & Return to Punch! Home Design or press Ctrl+Q. If you have unsaved changes in your plan drawing, Punch! Animator prompts you to save them before it closes the file.

### Using Undo


With Punch! Animator you can specify up to 50 levels of Undo, making it easy to recover your work. Bear in mind, the more levels of undo you specify, the more system resources will be used. To conserve system resources, set the undo level at the lowest level possible.

#### To use undo

- On the Edit menu, click Undo or press CTRL+Z. The previous action is reversed.

#### To turn off undo

- 1 On the Edit menu, click Undo Preferences; the Undo Preferences dialog box is displayed.

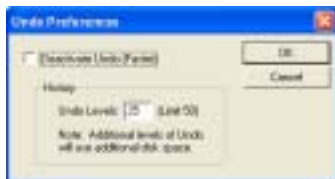

- 2 Click the Deactivate Undo (Faster) box, then click OK.

### To set undo parameters

- 1 On the Edit menu, click Undo Preferences; the Undo Preferences dialog box is displayed.
- 2 Type the number of undo levels you want to use; click OK.


### To use redo

- On the Edit menu, click Redo or press CTRL+Y. The previous action is reversed.

### Editing Using Cut, Copy, Paste and Clear

Cut moves the selection to the Clipboard and deletes the original. Copy places a duplicate of the selection on the Clipboard. Paste places the contents of the Clipboard into your drawing. You can place the Clipboard contents as many times as necessary. Clear removes the selection.

#### To edit using the cut command

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the selection you want to cut.
- 3 On the Edit menu, click Cut or press CTRL+X. The selection is removed to the Clipboard.

#### To edit using the copy command

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the selection you want to copy.
- 3 On the Edit menu, click Copy or press CTRL+C. The selection is copied to the Clipboard.

#### To edit using the paste command

- 1 On the Standard toolbar, click the Selection Tool.
- 2 On the Edit menu, click Paste or press CTRL+V. The selection is copied from the Clipboard to the design window.

#### To edit using the clear command

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the selection you want to cut.
- 3 On the Edit menu, click Clear or press DELETE or right-click the selection and click Clear on the pop-up menu that is displayed. The selection is removed from your design.

## Using Nudge

Once you've placed a KeyPoint or Animation Path, you can precisely move it into position using Nudge. Nudge utilizes the arrow keys to move the selection a specified distance. Nudge works in tandem with the Snap Grid. To learn more about the Snap Grid, refer to "Using the Grid" on page 13.

### To adjust Nudge settings

- 1 On the Options menu, confirm there is a check next to Snap to Grid. This confirms that the Snap Grid is activated.
- 2 On the Options menu, click Grid Properties or press CTRL+G. The Grid Properties dialog box is displayed.



- 3 Enter, in inches, the Snap Grid distance you want to set. Click OK.
- 4 On the Edit menu, click Nudge, then click the direction (up, down, left, right) or use the arrow keys on your keyboard.

**Note:** When the "Snap to Grid" is turned off, Nudge moves the KeyPoint or Animation Path one pixel at a time instead of snapping to grid distance.

### To move a selection using the Nudge feature


- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the KeyPoint or Animation Path to select it.
- 3 On the Edit menu, click Nudge, then click the direction (up, down, left, right).
- 4 (optional) Use the arrow keys on your keyboard to nudge the KeyPoint or Animation Path.

## Moving a Selection

At any point during the design process, you can move KeyPoints or Animation Paths.

### To move a KeyPoint or Animation Path

- 1 On the Edit menu, click Move. The Move dialog box is displayed.

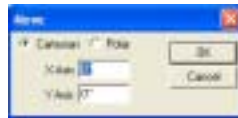



- 2 Click either Cartesian or Polar, then type the amount you want the selection moved in the appropriate text boxes.
- 3 Click OK. The selection is moved, based on the coordinates you specified.

**Note:** Coordinates are measured in inches or they can be measured in feet and inches, separated by a hyphen.

## Rotating a Selection


Using the rotate feature, you can easily spin an Animation Path around any point. Using the Rotate tool, you can freely rotate the selection or you can specify the exact amount of rotation using the Rotate dialog box.

### To freely rotate an object

- 1 On the Standard toolbar, click the Selection Tool. 
- 2 Click the Animation Segment or Animation Path you want to rotate.
- 3 On the Standard toolbar, click the Rotate Tool. 
- 4 Click the selection, hold down the mouse button and move the pointer in the direction that you want the selection rotated. Degree of rotation will appear in the status bar as you draw. Press SHIFT to release the 45 degree constraint.
- 5 Release the mouse button.

### To rotate by specifying an amount

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the Animation Segment or Animation Path you want to rotate.
- 3 On the Edit menu, click Rotate. The Rotate dialog box is displayed.

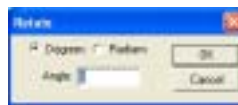


- 4 Type, in degrees or radians, the amount you want the selection rotated and click OK. The selection is rotated.



# KeyPoints and Animation Paths

Among the most common functions of Punch! Animator are KeyPoints, Animation Segments and Animation Paths. These three terms will be used throughout this User's Guide. All AVI files will be composed of combinations of these three entities.


The AVI files you create with Punch! Animator are limited only by the amount of free hard disk space on your computer!

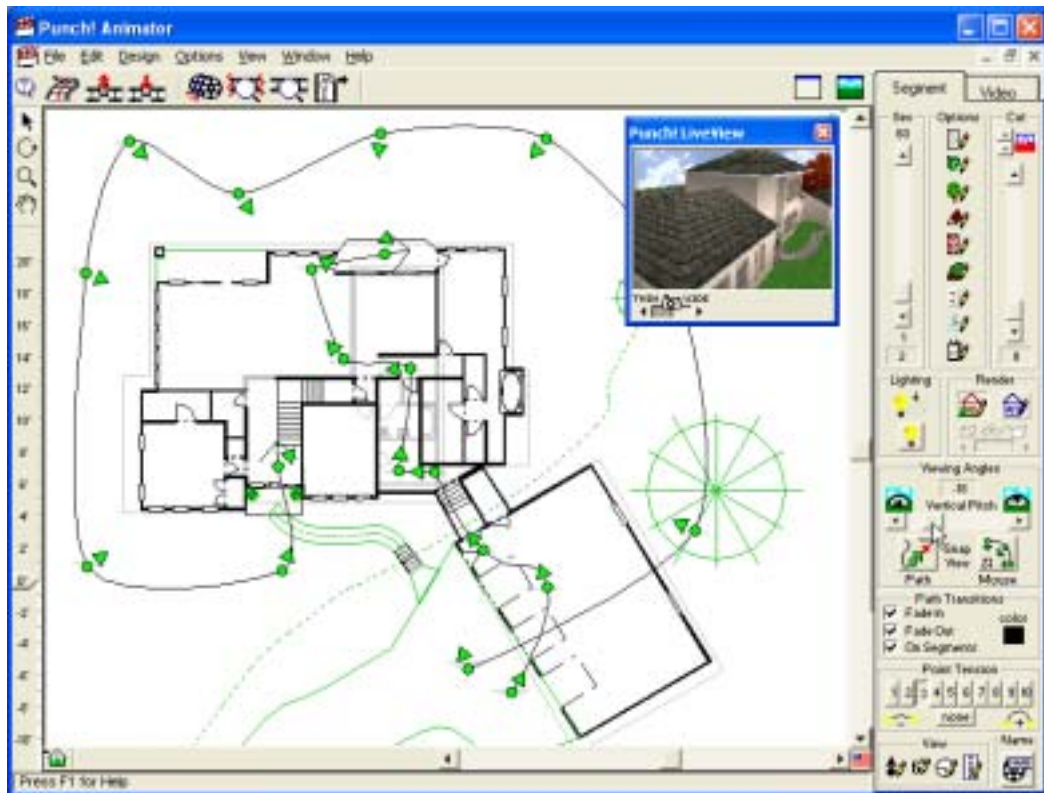

## Drawing Animation Paths

With Punch! Animator, you can draw extremely intricate Animation Paths. Then, you can set each KeyPoint's view individually. For more information on customizing KeyPoint views, see "Segment Tab", which begins on page 247.

### To draw an animation path


- 1 On the toolbar, click the Animation Path tool. The pointer changes to reflect drawing mode. 
- 2 Click on the design window to define the start point of the Animation Path. A rubber-band curve is displayed and follows the pointer.
- 3 Click and move the mouse to the next point. Repeat until you have drawn the needed shape.
- 4 Right-click to end drawing mode.


**Note:** Although the lines will initially appear to be angular, they will become curved as you continue drawing.

## Adding and Deleting KeyPoints

You can add or delete KeyPoints at any time on any Animation Path you have drawn.


### To add KeyPoint(s) to an Animation Path


- 1 On the toolbar, click the Add KeyPoint tool. The pointer changes to reflect drawing mode. 
- 2 Click on an Animation Path where you want to add a KeyPoint.

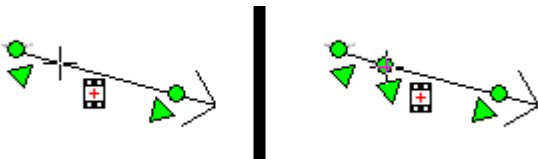

- 3 Continue adding KeyPoints until you are finished, then right-click to end.

### To remove KeyPoint(s) from an Animation Path

- 1 On the toolbar, click the Remove KeyPoint tool. The pointer changes to reflect drawing mode. 
- 2 Click on an Animation Path where you want to remove a KeyPoint.

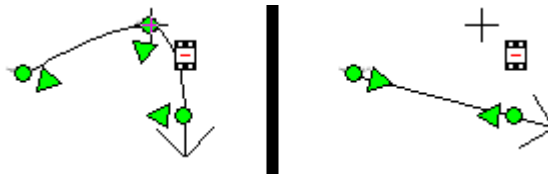


- 3 Continue deleting KeyPoints until you are finished, then right-click to end.

## Naming and Ordering Animation Paths

Punch! Animator makes it easy to set the exact order of multiple Animation Paths. Adding descriptive names to each path will make it easier to set their order in the final video.

### To name an Animation Path


- 1 On the design window, click a KeyPoint or Animation Segment to select it.
- 2 On the Segment Tab, click the Name icon on the "Name" section. The Name Path dialog box will be displayed. 



- 3 Type the name in the dialog box, then click OK.

**Note:** Path names are restricted to 22 characters, including spaces.

### To set the order of Animation Paths

- 1 On the toolbar, click the Order Paths tool. The Animation Path Order dialog box is displayed. 



- 2 Click a path name on the Active (export to AVI) section to select it.

- 3 Click the Order arrows to change the order of the Animation Paths.
- 4 (optional) Click the arrows between the Active and Inactive menus to suppress export of specified Animation Paths.
- 5 When you are finished ordering Animation Paths, click OK.

## Previewing

At any point you can view your video. You can view it in its entirety or you can view individual Animation Segments.

### To preview Animation Segments

- 1 On the design window, click an Animation Segment to select it.
- 2 (optional) Hold down the shift key and click several Animation Segments.
- 3 On the toolbar, click the Preview Selected Segments tool. A LiveView window will open and the selected Animation Segments will be played.



### To preview the entire animation

- On the toolbar, click the Preview Animation tool. A LiveView window will open and the Animation will be played.



### To set the preview speed

- On the Video Tab, click the left or right scroll arrows on the “Preview Speed” section. To increase the speed in larger increments, click the control shaft, between the scroll box and a scroll arrow.



## Exporting an AVI File

Punch! Animator exports AVI files to make it easier to show your architect, friends, colleagues and so on, the ins and outs of your newly designed home plan.

### To export an AVI file

- 1 On the Toolbar, click the Export Animation Video button. The Save Animation Video dialog box is displayed.



- 2 (optional) On the File menu, click Export Animation Video or press Ctrl+S. The Save Animation Video dialog box is displayed.



- 3 In the File Name text box, type a name. Punch! AS3000 automatically adds the AVI extension.
- 4 (optional) If you want to save the drawing to a different drive or folder, click a different drive and folder or type the complete path in the File Name text box.
- 5 Click OK.


**Note:** To play back the video after exporting, make sure the Play Video After Export option is checked on the Video Tab.



# Segment Tab

Many of the controls that allow you to customize your video are contained on the Segment Tab. Using these tools in Punch! Animator gives you total control over how and what your video displays at any KeyPoint along the Animation Path.

Controls on the Segment Tab can be used to change a single KeyPoint. They impact only that KeyPoint or Animation Segment that is selected. Controls on the Video Tab have a global effect on the entire video.

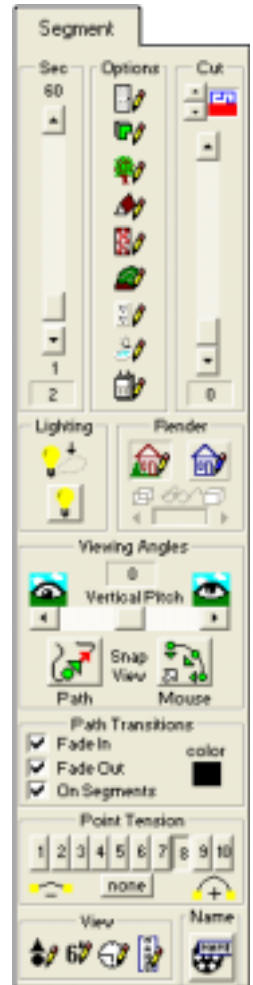

## Defining Segment Times

Each Animation Segment is treated separately by Punch! Animator. You have the ability to control how long each segment takes to complete. Segments can be defined to last from one to sixty seconds, or anywhere in between.

### To define a segment time

- 1 On the design window, click an Animation Segment. The KeyPoints on both ends should be highlighted (red) to indicate the segment is selected.
- 2 On the Segment Tab, click the scroll arrow on the “Sec” section. To increase the time in larger increments, click the control shaft, between the scroll box and a scroll arrow.





**Note:** To easily select all points along an Animation Path, on the design window, right-click, then click Select All from the pop-up menu that is displayed.



## Customizing Segment Options

What is visible during each Animation Segment is totally customizable. If a tree is in the way of the view, you can hide the tree. If you want to walk through a closed doorway, hide the door when you reach it, just like it’s opening to let you in. These controls operate simply; if there is a red “X” through the icon, that feature is hidden; if there is not an “X”, that feature is visible.



### To hide/view doors

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Doors icon on the “Options” section.  



### To hide/view objects

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Objects icon on the “Options” section.  



### To hide/view plants

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Plants icon on the “Options” section.  



### To hide/view roofs

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Roofs icon on the “Options” section.  



### To hide/view materials

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Materials icon on the “Options” section.  



### To hide/view topography

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Topography icon on the “Options” section.  



### To hide/view electrical

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Electrical icon on the “Options” section.  

### To hide/view plumbing

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D Plumbing icon on the “Options” section.  

### To hide/view HVAC

- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the Show/Hide 3D HVAC icon on the “Options” section.  


## Using the 3D Cut-away Slider

With Punch! Animator’s 3D Cut-away Slider you peel away layers of your floor plan with ease. You can slice away layer after layer of your design from any of the four sides or from the top, making it easy to view room arrangements, furniture placement and so on.

### To set the 3D cut-away slider direction

- 1 On the design window, click a KeyPoint to select it.

- On the Segment Tab, click the scroll arrow on the “Cut” section to set the direction.

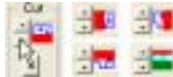

### To set the 3D cut-away slider depth

- On the design window, click an Animation Segment. The KeyPoints on both ends should be highlighted (red) to indicate the segment is selected.
- On the Segment Tab, click the up or down scroll arrows on the “Cut” section. To increase the depth in larger increments, click the control shaft, between the scroll box and a scroll arrow.



## Adding Lighting and Shadows

With Punch! Animator you can customize the lighting and shadows for each KeyPoint or Animation Segment.

### To add shadows

- On the design window, click a KeyPoint to select it.
- On the Segment Tab, click the Segment Shadow icon on the “Lighting” section.



### To set shadow quality

- On the View menu, click Shadow Quality, Low. This results in a fast rendering speed, but lower quality output.
- On the View menu, click Shadow Quality, High. This results in a moderate rendering speed and average quality output.

### To customize shadows

- On the design window, click a KeyPoint to select it.
- On the Segment Tab, click the Segment Shadow icon on the “Lighting” section.
- On the Segment Tab, click the Segment Lighting button on the “Lighting” section. The 3D Lighting dialog is displayed.



- Click the direction from where you want the light to originate in the Direction section of the 3D Lighting dialog box.
- Increase or decrease the light intensity by clicking and dragging the intensity slider.
- Increase or decrease the overall brightness by clicking and dragging the brightness slider.
- Click OK.

### To preview with shadows

- On the Video Tab, check the box next to Shadows in Preview on the “Preview Speed” section.



## Adjusting Rendering Quality

Punch! Animator technology includes anti-aliased photo-realism. With this technology you can view your plan with incredible detail.

### To render in 3D final quality

- On the View menu, click Render 3D Final Quality.

### To set 3D render quality


- On the View menu, click 3D Final Quality, Low. This results in a fast rendering speed, but lower quality output.
- On the View menu, click 3D Final Quality, High. This results in a moderate rendering speed and average quality output.
- On the View menu, click 3D Final Quality, Ultra High. This results in a slower rendering speed and a high quality output.

- On the View menu, click 3D Final Quality, Excellent. This results in a very slow rendering speed, but a very high quality, sharp output.



## Using ClearView Mode

With Punch! Animator's ClearView option you can set any KeyPoint, Animation Segment or Animation Path to be viewed in varying stages of opacity.

### To render using ClearView

- 1 On the design window, click a KeyPoint or Animation Segment to select it.
- 2 On the Segment Tab, click the Render ClearView icon on the "Render" section. 


### To control the opacity of a ClearView rendering

- 1 On the design window, click a KeyPoint or Animation Segment to select it.
- 2 On the Segment Tab, click the Render ClearView icon on the "Render" section. 
- 3 Click the left arrow on the Segment Opacity Slider. Your rendering will appear more translucent. 
- 4 Click the right arrow on the Segment Opacity Slider. Your rendering will appear more solid.

## Using Shaded Mode

With Punch! Animator's shaded viewing option you can set any KeyPoint, Animation Segment or Animation Path to be viewed in its appropriate material.


### To render with shaded mode

- 1 On the design window, click a KeyPoint or Animation Segment to select it.
- 2 On the Segment Tab, click the Render Materials icon on the "Render" section. 

## Defining Viewing Angles

Punch! Animator's useful Viewing Angle controls make it easy to set exactly the KeyPoint view that you want.

### To define viewing pitch


- 1 On the design window, click a KeyPoint to select it.
- 2 On the Segment Tab, click the left arrow on the Vertical Pitch slider to look down. 

- 3 Click the right arrow on the Vertical Pitch slider to look up.


### To snap KeyPoints to the path

- 1 On the design window, click a KeyPoint or Animation Segment to select it.

**Note:** To easily select all points along an Animation Path, on the design window, right-click, then click Select All from the pop-up menu that is displayed.

- 2 On the Segment Tab, click the Snap to Path icon on the "Viewing Angles" section. The KeyPoint will automatically snap to the direction the Animation Path was drawn. 


### To snap KeyPoints to a point on the plan

- 1 On the design window, click a KeyPoint or Animation Segment to select it.
- 2 On the Segment Tab, click the Snap to Mouse icon on the "Viewing Angles" section. 
- 3 On the design window, click to set the direction you want the KeyPoint to face.
- 4 Right-click to end Snap to Mouse mode.


## Defining Path Transitions

When you define more than one Animation Path, you will want to make the transition easy on the eye for the person watching your video file. With Punch! Animator you can define exactly how these transitions happen.

### To fade in at the beginning of a path

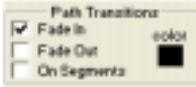- 1 On the design window, click an Animation Path to select it.
- 2 On the Segment Tab, check the box next to Fade In on the "Path Transitions" section. 

### To fade out at the end of a path

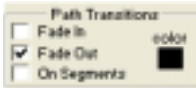- 1 On the design window, click an Animation Path to select it.
- 2 On the Segment Tab, check the box next to Fade Out on the "Path Transitions" section. 



**To fade on segments**

- On the Segment Tab, check the box next to On Segments on the “Path Transitions” section.

**To define a custom transition color**

- On the Segment Tab, click the Color box on the “Path Transitions” section. The Color dialog box is displayed.



- Click one of the Basic or Custom colors or click on the color spectrum block to select a color.
- (optional) Adjust the current Red, Green and Blue values to create a custom color.
- (optional) Click an area on the color spectrum window to select a color, then adjust the RGB values, if necessary.
- Click OK.

**Customizing Point Tension**


As you draw each Animation Path, you can adjust the tension of each point. This function lets you define the exact path your video will show.

**To define point tension**


- On the design window, click an Animation Path to select it.
- On the Segment Tab, click a number, or none, on the “Point Tension” section. A low number will result in a more angular path, while a higher number will create a sweeping curved path.




**Examples:**

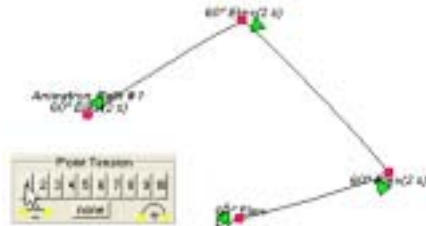


Point Tension set at “1”.

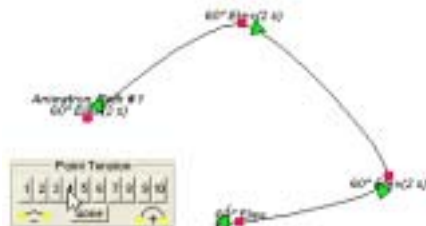


Point Tension set at “4”.

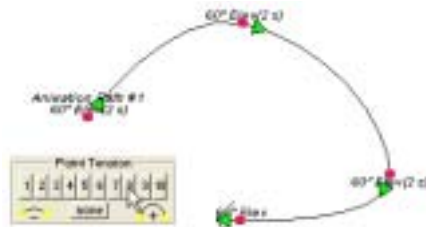

Default Point Tension is “8”.

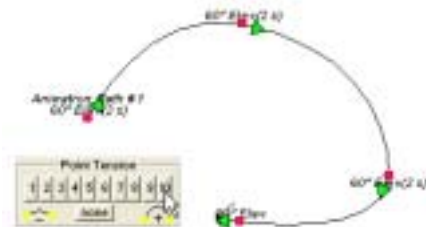

Point Tension set at “10”.

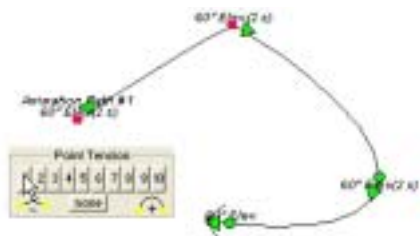

Point Tension for only 2 KeyPoints set at “1”.

### Customizing KeyPoint Views

There will be times when you will want to alter what is visible and what is hidden around KeyPoint intersections. Punch! Animator lets you have total control. These controls operate simply; if there is a red “X” through the icon, that feature is hidden; if there is not an “X”, that feature is visible.



View all.



Hide all.

### To hide/view KeyPoints

- 1 On the design window, click a KeyPoint or Animation Path to select it.
- 2 On the Segment Tab, click the Show/Hide KeyPoints icon on the “View” section.



### To hide/view Point Elevations

- 1 On the design window, click a KeyPoint or Animation Path to select it.
- 2 On the Segment Tab, click the Show/Hide Point Elevations icon on the “View” section.



### To hide/view Segment Times

- 1 On the design window, click a KeyPoint or Animation Path to select it.
- 2 On the Segment Tab, click the Show/Hide Segment Times icon on the “View” section.



### To hide/view Path Name

- 1 On the design window, click a KeyPoint or Animation Path to select it.
- 2 On the Segment Tab, click the Show/Hide Path Name icon on the “View” section.



**Note:** The Path Name is only displayed on the first KeyPoint.

### Naming and Ordering Animation Paths

Punch! Animator makes it easy to set the exact order of multiple Animation Paths. Adding descriptive names to each path will make it easier to set their order in the final video.

#### To name an Animation Path

- 1 On the design window, click a KeyPoint or Animation Segment to select it.
- 2 On the Segment Tab, click the Name icon on the “Name” section. The Name Path dialog box will be displayed.



- 3 Type the name in the dialog box, then click OK.

**Note:** Path names are restricted to 22 characters, including spaces.

#### To set the order of Animation Paths

- 1 On the toolbar, click the Order Paths tool. The Animation Path Order dialog box is displayed.





- 2 Click a path name on the Active (export to AVI) section to select it.
- 3 Click the Order arrows to change the order of the Animation Paths.
- 4 (optional) Click the arrows between the Active and Inactive menus to suppress export of specified Animation Paths.
- 5 When you are finished ordering Animation Paths, click OK.




# Video Tab

Many of the controls that allow you to customize the way to video is presented are contained on the Video Tab. Using these tools in Punch! Animator, you take total control over how your video file exports and plays back.

Each control on the Video Tab will have a global effect for the entire video. They will directly impact the file size when the video is exported or the time it takes to export.

Punch! Animator keeps track of many details of your video on the Video Properties section. You can choose which codec installed on your computer to use when exporting your AVI file.

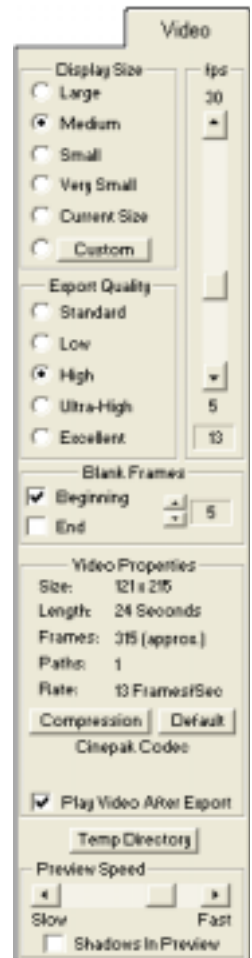

## Setting the Display Size

You can select the size of the media player window. Display size affects file size of the exported AVI file; the larger the display, the larger the file.

### To set the display size

- On the Video Tab, click the radio button next to the size of the display you want.

**Note:** If you have dragged a corner of the LiveView window to a size you like, you can set that size by clicking the radio button next to “Current Size”.



### To set a custom display size

- 1 On the Video Tab, click the Custom button. The Custom Video Pixel Size dialog box is displayed.



- 2 Enter, in pixels, the Width and Height you want to set.
- 3 Click OK.

## Setting the Frames per Second

Frames per second, also referred to as frame rate, is the frequency in which video frames are displayed on a monitor. High frame rates improve the appearance of video motion. For example, the frame rate for professional motion pictures is 24 fps, television is 30 fps, while your PC processor may only be capable of playing 10-15 frames per second.

### To set the frames per second

- On the Video Tab, click the up or down scroll arrows on the “fps” section. To increase the depth in larger increments, click the control shaft, between the scroll box and a scroll arrow.



## Setting the Export Quality

The export quality controls the final quality render of each scene before exporting to the AVI file. If this is set at standard quality, the export will not be anti-aliased and the export will be faster. Any of the other export quality settings

will anti-alias (final quality) each frame before exporting it, which can take considerably more time.

### To set the export quality

- On the Video Tab, click the radio button next to the export quality you want.



**Note:** These options do not affect file size, but greatly impact the time it takes to export the AVI file. Some codecs export the video faster and with better quality, but the file size is much larger. In addition, some shareware and freeware codecs are of lower quality and if one of them is being used, it may not matter what export quality is selected.

## Setting the Blank Frames

You can specify the number of blank frames at the beginning, end, or both, of your video.

### To specify blank frames

- On the Video Tab, check Beginning or End on the “Blank Frames” section. If a checkmark is next to the word, the specified number of blank frames will be placed appropriately.



### To set the number of blank frames

- On the Video Tab, click the up or down scroll arrows on the “Blank Frames” section.


**Note:** If you want one second of black before fading into your video, you would set the blank frames the same as your “fps” setting.

## Assigning a Codec

Every codec residing on your computer is available for use with Punch! Animator, although some might not be compatible. While some codecs on your computer export to MPG or other video formats, Punch! Animator only exports to AVI format.

### To choose a codec


- 1 On the Video Tab, click the Compression button on the “Video Properties” section. The Video Compression dialog box is displayed.

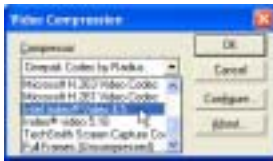

- 2 Scroll through the list of installed codecs and choose the one you want to use. Click OK.
- 3 (optional) Click Default and the codec will be reset to the Cinepak codec.

**To configure the selected codec**

- 1 On the Video Tab, click the Compression button on the “Video Properties” section. The Video Compression dialog box is displayed.

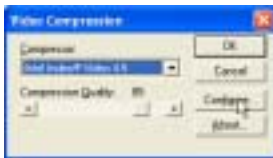

- 2 Click Configure. The configuration dialog for that specific codec is displayed.



**Note:** This is just one example of a configuration dialog; each codec will have a unique set of controls.

**Assigning a Temporary Directory**

You can specify a directory where all your video files can be saved.

**To set the temporary directory**

- 1 On the Video Tab, click Temp Directory. The Browse for Folder dialog box is displayed.



- 2 Click the folder where you want your working files to be saved. Click OK.

**Setting the Preview Speed**

With Punch! Animator you can set the exact preview speed you want; this will make previewing your video much easier. You can also preview with or without shadows.

**To set the preview speed**

- On the Video Tab, click the left or right scroll arrows on the “Preview Speed” section. To increase the speed in larger increments, click the control shaft, between the scroll box and a scroll arrow.



**To preview with shadows**

- On the Video Tab, check the box next to Shadows In Preview on the “Preview Speed” section.







---

Part 8

# 3D Custom Workshop


Chapter 34: Window Layout .....	261
Chapter 35: File Management .....	263
Chapter 36: Drawing Grids .....	267
Chapter 37: Drawing in 3D .....	271
Chapter 38: Drawing in 2D .....	283
Chapter 39: Converting 2D Objects to 3D .....	291
Chapter 40: Editing 3D Objects .....	295
Chapter 41: Controlling Views .....	303
Chapter 42: Applying Color and Material .....	307



# ***Window Layout***

The Punch! 3D Custom Workshop window provides an assortment of features that make it easy to create custom objects. This chapter describes the basic components.

In most cases, this chapter does not provide detailed information on standard Windows concepts or on specific menu items. For information on standard Windows concepts, such as the mouse, the control menu, the window border, the maximize button, dialog box controls and so on, refer to Windows online Help.

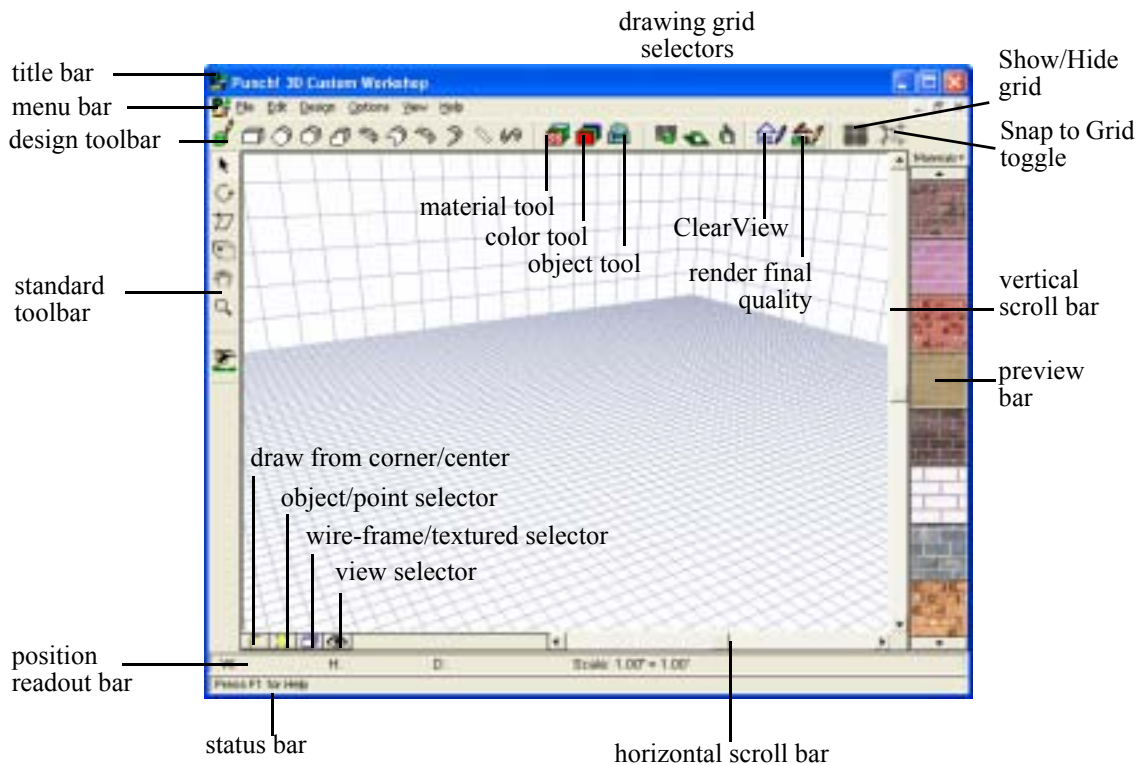

## Title Bar

The title bar extends across the top of the application window. It displays the name of the program and the name of the current drawing file. With the buttons at the right end of the title bar you can minimize, maximize, close or restore the window. You can also maximize or restore a window by double-clicking on the title bar. Double-clicking the Control menu box at the left end of the title bar is a quick way to exit. If the application is running in a window rather than maximized, dragging the title bar moves the entire window on the desktop.

## Menu Bar

You can choose menu items using either the mouse or the keyboard. To use the mouse, click the menu name. When the menu drops down, click the item you want. Menu items with an arrow to the right display cascading menus when you place the pointer over one of them. When you highlight a menu item, a description is displayed on the status bar.

To use the keyboard, press the ALT key and type the underlined letter in the menu name, then type the underlined letter in the menu item's name. If there is a cascading menu, you must type another letter. You can also use the arrow keys to move through menu items and press ENTER to select one. The ESC key backs out of the menu items one level at a time.

There are single-key or key combination shortcuts for certain frequently-used menu items. Each menu lists available shortcut keys to the right of the item's name. You can use the techniques for choosing menu items in combination.

## Toolbars

Clicking a button on a toolbar has the same effect as choosing the menu item or feature it represents.

To find out what a certain tool represents, hold the pointer over the tool and read the description on the status bar at the bottom of the window.

## Position Readout Bar

The position readout bar displays the exact measurements of your object as you draw. The scale of your drawing is also displayed here.

## Status Bar

The status bar displays prompts and other program messages and is a good place to look when you are holding the pointer over a button or menu item to find its function.

## Scroll Bars

Using the scroll bars, you can pan across the drawing, that is, to change the part of the drawing visible in the window without changing the level of magnification. To pan the drawing in small increments, click the scroll arrow that points in the direction you want to pan. To pan in larger increments, click the control shaft, between the scroll box and a scroll arrow. To pan by a custom increment, drag the scroll box in the direction you want to pan.

## Preview Bar

You can click and drag objects from the Preview Bar onto your design window. The Preview Bar changes to reflect the current design mode. For instance, if the color tool is selected, palettes of colors will appear and if you are using the material tool, collections of materials are available. The Preview Bar is the easiest and quickest way to customize your drawing.

# ***File Management***

When you start 3D Custom Workshop, a new blank drawing grid is displayed with the floor grid active. The foreground and background colors will be those that were assigned in the home design program, as will the unit of measurement (inches or metric). If you start 3D Custom Workshop by double clicking an object in your home design program, that object is displayed on the design window.

If you are returning to work on an existing drawing, you must open it, or display it on the screen. Opening a file involves clicking Open on the File menu and specifying the name of the file you want to open. When you open a file, 3D Custom Workshop displays it in a new window.

The changes you make to an object occur only in your computer's memory until you save them. To preserve a drawing for later use, you must save it to a file. If you want to save a drawing using its current name or if you want to save a new, untitled drawing, use Save. If you want to save a drawing with a new name, use Save As.

## Opening a New File

Opening a new file creates a new blank drawing grid with the floor grid active. The foreground and background colors will be those that were assigned in the home design program.

### To open a new file

- On the File menu, click New or press CTRL+N. An empty drawing grid is displayed.

**Note:** If you were working on an object, you will be prompted to save your work.


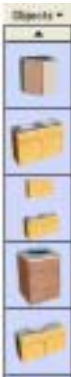
## Opening an Existing Object

Opening a file copies the data it contains into memory, making it available for you to edit or print.

### To open an existing file

- 1 On the File menu, click Open. The Open dialog box is displayed.
- 2 In the File Name box, type the name of the file you want to open or search for the file by switching folders or drives.
- 3 When you see the name of the file you want to open, click to select it.
- 4 Click OK.

### To open objects using drag-and-drop

- 1 On the Design Toolbar, click the Object Tool. The Preview Bar displays furnishing objects. 
- 2 (optional) Click the arrow next to “Objects” at the top of the Preview Bar to display the object library list, then click another object library. 
- 3 Scroll to view the available objects.
- 4 Click the object you want to place, hold down the mouse button and drag the object onto your design window.
- 5 (optional) Click the object you just placed to select it; then click and drag it to another location on your design window.

## Saving a File

When you open a file, 3D Custom Workshop copies the file to your computer’s memory. As you work, you modify the copy stored in memory. Any system failure or loss of power destroys that copy. To save your work permanently, you must save it to a file on a disk. A good rule of thumb is to save every 15 minutes or after you’ve completed any work you wouldn’t want to redo.

When you click the Save command, 3D Custom Workshop saves the active drawing using the name and location you last gave it. You can create more than one version of a drawing or save copies on another disk for safekeeping. You can save each version under a different name or you can save them under the same name in different folders or on different disks.


### To save an existing file

- On the File menu, click Save or press CTRL+S.

### To save a new, unnamed file

- 1 On the File menu, click Save As. The Save As dialog box is displayed.
- 2 In the File Name text box, type a name. 3D Custom Workshop automatically adds the POB extension.
- 3 Click Save.

### To save an object to an object library

- 1 On the File menu, click Save to Object Library. The Save to Object Library dialog box is displayed. 
- 2 Click the Object Category button, then click the category where you want the object filed.
- 3 Type the Object Name in that dialog box. This will appear in the status bar when the mouse is held over the object on the Preview Bar.
- 4 (optional) Type a description of the object in the Object Description dialog box.
- 5 Click Save. The Save As dialog box is displayed.

- 6 In the File Name text box, type a name. 3D Custom Workshop automatically adds the POB extension.
- 7 Click OK.

**Note:** This process also creates the preview file that is displayed in the Preview Bar, under the Object Category selected in Step 2. You can change the appearance of the preview by changing the position of the object on the design window. The object will always appear on a light blue background.

## Closing a File

When you finish working with a file, close it to remove the window from the screen and to free up your computer's memory.



### To close a file

- On the File menu, click Close. If you have unsaved changes in your plan drawing, 3D Custom Workshop prompts you to save them before it closes the file.

## Exporting Files

With 3D Custom Workshop, you can export your design to either 2D or 3D DXF format. You can also export a rendering to BMP format. Files can be exported to BMP format in Textured, Wire Frame and ClearView modes.

### To export wire frame view to BMP

- 1 Click the Rendering Style button or on the View menu, click 3D Rendering Style, Wire Frame.  
- 2 On the File menu, click Export Wire Frame. The Export BMP dialog box is displayed.



- 3 In the File Name text box, type a name. 3D Custom Workshop automatically adds the BMP extension, then click OK.

### To export to textured view to BMP

- 1 On the File menu, click Export BMP, then click the quality you want. The Export BMP dialog box is displayed.

- 2 In the File Name text box, type a name. 3D Custom Workshop automatically adds the BMP extension, then click OK.

**Note:** The background of the BMP file will be white, regardless of what color is specified in 3D Custom Workshop.

### To export to 2D DXF

- 1 On the File menu, click Export>DXF (2D). The Export DXF dialog box is displayed.
- 2 In the File Name text box, type a name. 3D Custom Workshop automatically adds the DXF extension.
- 3 Locate the directory where you want the file exported, then click Save.



### To export to 3D DXF

- 1 On the File menu, click Export>DXF (3D). The Export DXF dialog box is displayed.
- 2 In the File Name text box, type a name. 3D Custom Workshop automatically adds the DXF extension.
- 3 Locate the directory where you want the file exported, then click Save.

## Printing Objects

3D Custom Workshop prints using the current Windows printer. You can, however, print using any installed printer. Using the Print dialog box you can specify a printer or plotter from those currently installed. Your object can be printed in Textured, Wire Frame, or ClearView modes. In rendered mode, you have the choice of four qualities.

### To print in wire frame mode

- Click the Rendering Style button or on the View menu, click 3D Rendering Style, Wire Frame.  
- 1 On the File menu, click Print, then click Print Wire Frame or press Ctrl+P.



- 2 On the Print dialog box, click the down arrow next to the printer name.
- 3 Click the printer you want to use.



- 4 (optional) Click the Properties button. The Properties menu is displayed.
  - 5 (optional)
- Note:** This Properties menu is from a popular color printer. Refer to your printer's documentation on the use of its specific features.
- 6 Select the paper orientation.
  - 7 Select the paper size. Typically, this will be either 8.5x11 in (letter) or 8.5x14 in (legal).
  - 8 Click the down arrow next to media type. Then select the required media.
  - 9 Click either Auto Feeder or Manual Feed as your paper feed method, then click OK.

### To print in rendered mode

- 1 On the File menu, click Print, then click the Quality you want to use.



- 2 On the Print dialog box, click the down arrow next to the printer name.
- 3 Click the printer you want to use.
- 4 Click the Properties button. The Properties menu is displayed.
- 5 Select the paper orientation.
- 6 Select the paper size. Typically, this will be either 8 1/2x11 in (letter) or 8 1/2x14 in (legal).
- 7 Click the down arrow next to media type. Then select the required media.
- 8 Click either Auto Feeder or Manual Feed as your paper feed method, then click OK.



# ***Drawing Grids***


By using the Drawing Grids in 3D Custom Workshop you can work on any object from three distinct 3D angles. Each grid controls two axes. You can also draw or edit in 2D from any of six directions, which will make editing and detailed alignment simple.


The 3D drawing grids are the Front, Floor and Side grids. The X (Width) and Y (Height) dimensions are the dominant axes when drawing on the Front Grid. While the Floor Grid controls the X (Width) and Z (Depth) dimensions, the Side Grid controls the Z (Depth) and Y (Height) dimensions. Using these grids in concert will give you the ability to design anything you want.

## Drawing on the Front Grid

Using the Front Grid you can concentrate on the X (Width) and Y (Height) dimensions. You can extrude objects along the Z (Depth) axis. You will be able to tell by the tighter grid pattern which drawing grid is active.

### To draw on the front grid

- 1 On the Design menu, click Draw on Front Grid (X-Y Axis) or click the Front Grid tool on the toolbar. 
- 2 On the View menu, click to check 3D Design tools.
- 3 On the Design toolbar, click the Rectangle Tool. The pointer changes to reflect rectangle drawing mode.
- 4 Press the mouse button on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.

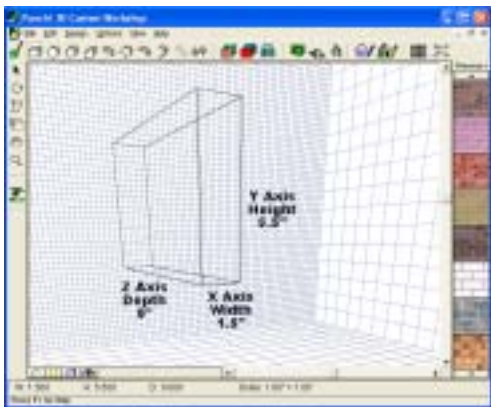


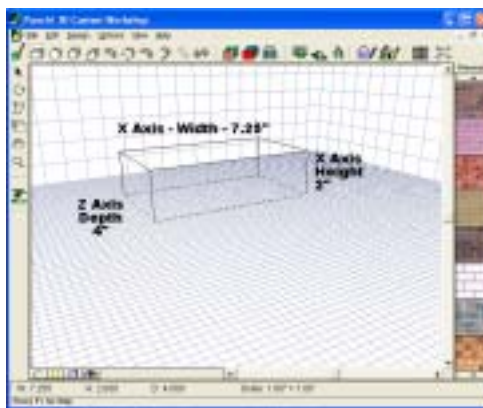
- 5 Hold the mouse button down while you extend the rectangle front to back and left to right (along the X and Y axes) until it reaches the size you want. Notice that dimensions appear in the status bar as you draw.
- 6 Release the mouse button.
- 7 Move the cursor to extrude the rectangle along the Z Axis to the depth you want.
- 8 Click to finish drawing and place the rectangle.

## Drawing on the Floor Grid

From the Floor Grid you concentrate on the X (Width) and Z (Depth) dimensions. You will be able to extrude objects along the Y (Height) axis.

### To draw on the floor grid

- 1 On the Design menu, click Draw on Floor Grid (X-Z Axis) or click the Floor Grid tool on the toolbar. 
- 2 On the Design toolbar, click the Rectangle Tool. The pointer changes to reflect rectangle drawing mode.
- 3 Press the mouse button on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.




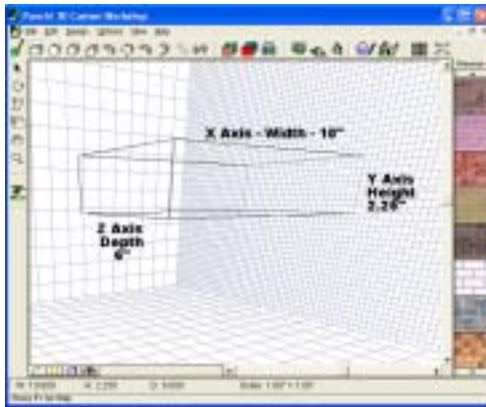
- 4 Hold the mouse button down while you extend the rectangle front to back and left to right (along the X and Z axes) until it reaches the size you want. Notice that dimensions appear in the status bar as you draw.
- 5 Release the mouse button.
- 6 Move the cursor to extrude the rectangle along the Y Axis to the height you want.
- 7 Click to finish drawing and place the rectangle.

## Drawing on the Side Grid

The Side Grid activates the Z (Depth) and Y (Height) dimensions. You will be able to extrude objects along the X (Width) axis.

### To draw on the side grid

- 1 On the Design menu, select Draw on Side Grid (Z-Y Axis) or select the Side Grid icon from the toolbar. 
- 2 On the Design toolbar, click the Rectangle Tool. The pointer changes to reflect rectangle drawing mode.
- 3 Press the mouse button on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.




- 4 Hold the mouse button down while you extend the rectangle front to back and left to right (along the Z and Y axes) until it reaches the size you want. Notice that dimensions appear in the status bar as you draw.
- 5 Release the mouse button.
- 6 Move the cursor, to extrude the rectangle along the X Axis to the height you want.
- 7 Click to finish drawing and place the rectangle.

## Changing Grid Settings

By default, the Grid is visible and set at twelve inches. This way you can visualize that each large square on the floorplan is one (1) square foot. By defining a customized Grid, you can design to fit your specific needs. In addition, by turning the Snap Grid on and off, you will be able to make detailed placement of the components simple.

### To change grid spacing


- 1 On the Design menu, click Grid Spacing. The Grid Spacing dialog box is displayed.
- 2 Type Horizontal and Vertical measurements, then click OK.

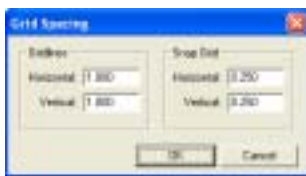

### To change snap grid spacing

- 1 On the Design menu, click Grid Spacing. The Grid Spacing dialog box is displayed.

- 2 Type Horizontal and Vertical measurements for the Snap Grid, then click OK.

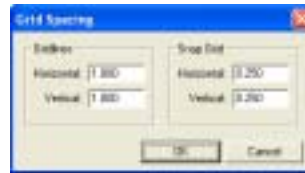

### To hide the grid from view

- Click the Grid On/Off Toggle at the upper right of the window or on the Design menu, click to uncheck Grid Visible. If Grid Visible is checked it is displayed. If unchecked, the grid is hidden from view.



### To turn off the snap grid

- Click the Snap Grid On/Off Toggle at the upper right of the window or on the Design menu, click to uncheck Snap to Grid.



### To change the grid size

- 1 On the Design menu, click on Grid Size. The Grid Size dialog box is displayed.
- 2 Type Width and Depth measurements, then click OK.



## Using 2D Views

2D Views work in harmony with the 3D Views. The 2D Top and Bottom Views are used in tandem with the 3D Floor Grid; the Front and Back Views are used with the 3D Front Grid; the Left and Right Views work with the Side Grid.


The 2D Views make complex alignment straightforward and simple. It is easy to toggle back and forth using the pop-up menu. All 2D views work in the same manner.

### To edit using 2D view


- 1 On the Design toolbar, click the Object Tool.
- 2 At the top of the Preview Bar, click the down arrow next to "Objects" to display the object libraries, then click to check Exterior Accessories category. Exterior Accessories objects are displayed on the Preview Bar.




- 3 Click to select an object on the Preview Bar. As you pass the mouse over objects, their names appear on the status bar.
- 4 Click-and-drag the object into the design window.

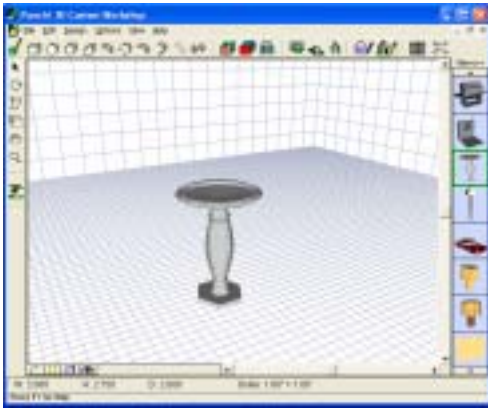


- 5 On the View menu, click 2D View, click Top or right-click anywhere on the design window, then click 2D Top View on the pop-up menu that is displayed.

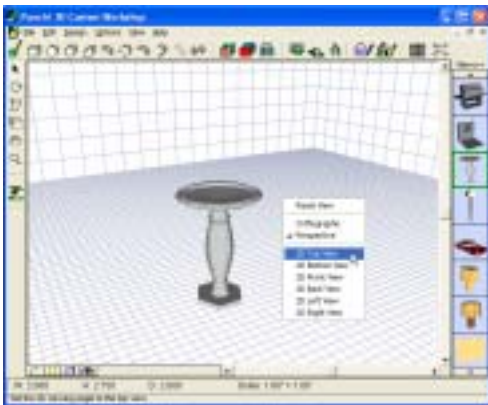

- 6 Click the object to select it.
- 7 Click-and-drag a corner of the object to reshape it. The dimensions will appear in the status bar as you reshape the object.

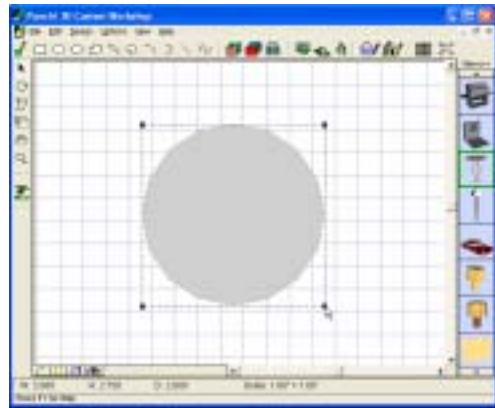

- 8 Release the mouse button.
- 9 Right-click, then click Reset View on the pop-up menu that is displayed to view the resized object.

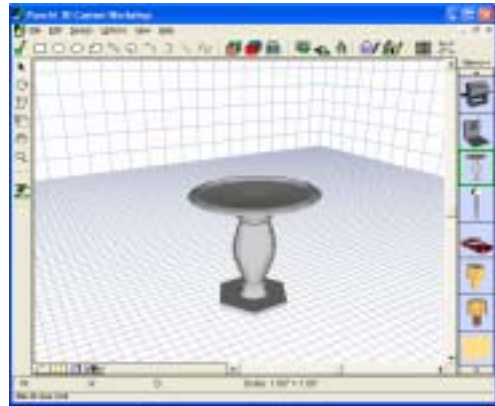

- 10 On the File menu, click Exit & Return to Punch! Home Design.
- 11 Click Yes to place the object in the center of your design.
- 12 Drag the modified object into position.

# ***Drawing in 3D***


3D Custom Workshop is an extremely powerful CAD (computer-aided design) program. Whether you want to draw angular objects like cabinets, desks and so on, or curved objects like lamps, mirrors and so on, there is a tool to match each task.

In this chapter, each drawing tool's function will be explained. You will also learn the Draw from Center, Draw from Corner, Object Editing and Point Editing techniques, which will make drawing any object you want easier.


## Drawing a 3D Rectangle


In rectangle drawing mode, you can draw cubes and boxes. You will find this tool useful when drawing tables, cabinets, counters and so on.

### To draw a rectangle


- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2. 

**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Rectangle Tool. The pointer changes to reflect drawing mode. 
- 4 Press the mouse button on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.

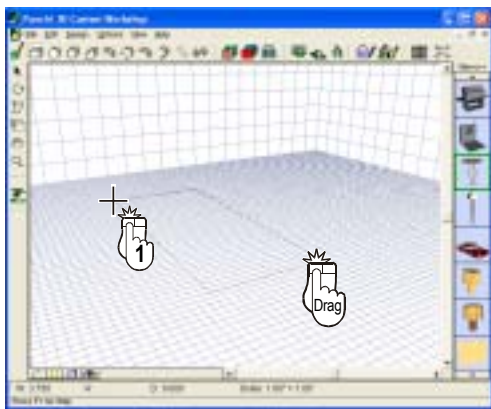

- 5 Hold the mouse button down as you extend the rectangle to the size you want. Dimensions will appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse in the direction you want to extrude the rectangle.

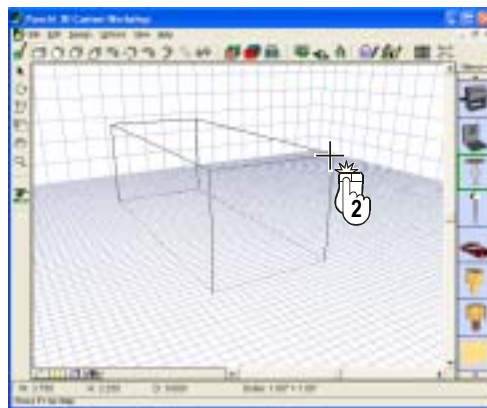

- 8 Click to end.


## Drawing a 3D Oval


In ellipse drawing mode, you can draw circles and ovals. You will find this tool useful when drawing lamps, couches, planters, rugs and so on.

### To draw an oval


- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Oval Tool. The pointer changes to reflect drawing mode. 
- 4 Press the mouse button on the design window to define the start point of the oval. A rubber-band oval is displayed and follows the pointer.

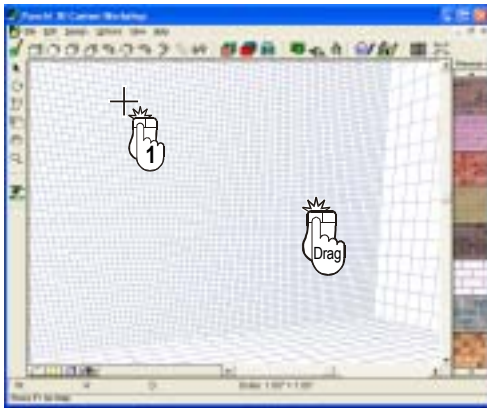

- 5 Hold the mouse button down as you extend the oval to the size you want. Dimensions will appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse in the direction you want to extrude the oval. During the extruding process, only the perimeter will be visible. The 3D oval is displayed once drawing mode has ended.

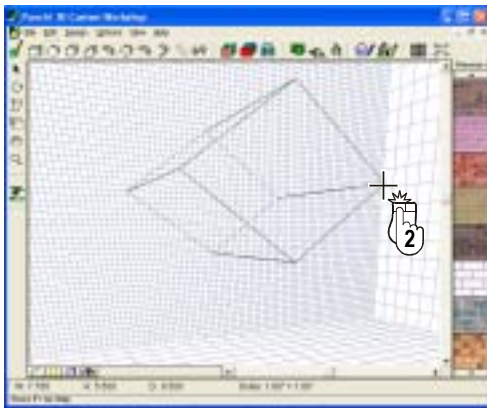

- 8 Click to end.
- 9 (optional) Press and hold SHIFT while drawing to draw a perfect circle from its center point.


## Drawing a 3D Multigon


In multigon drawing mode, you will be able to draw objects with a specified number of equal-length sides. You will find this tool useful when drawing mirrors, tabletops, hot tubs and so on.

### To draw a multigon

- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.


**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3 or right-click anywhere on the design window, then click 3D Design Tools from the pop-up menu that is displayed.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Multigon Tool. The pointer changes to reflect drawing mode. 
- 4 On the Options menu, click Custom Options. The Custom Options dialog box is displayed.

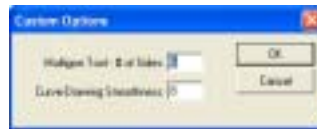


- 5 Type the number of equal-length sides you want, then click OK.
- 6 Click on the design window to define the start point (center) of the multigon. A rubber-band multigon is displayed and follows the pointer.

**Note:** Although you can define any number of sides, the more sides you specify, the more the multigon will begin to look like a circle.

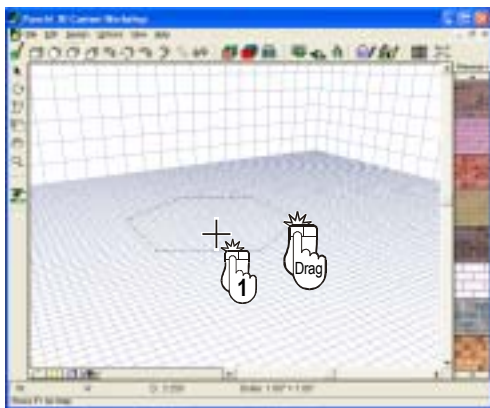

- 7 Hold the mouse button down while you draw the polygon to the size you want. The radius measurement will appear in the position readout bar as you draw.
- 8 Release the mouse button.
- 9 Move the mouse in the direction you want to extrude the polygon.

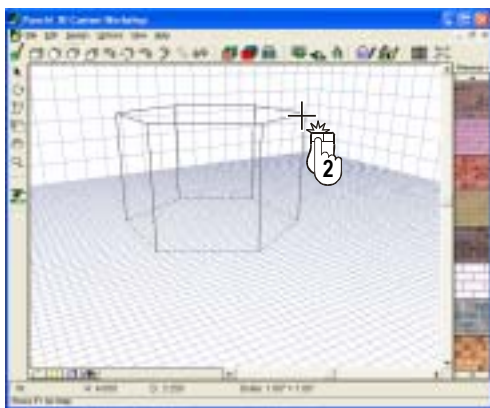

- 10 Click to end.

## Drawing a 3D Polygon


In polygon drawing mode, you can draw an object with any number of sides at any angle or length. You will find this tool useful when drawing corner cabinets, futons and so on.


### To draw a polygon

- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.




**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Polygon Tool. The pointer changes to reflect drawing mode. 
- 4 Click on the design window to define the start point of the polygon. A rubber-band line is displayed and follows the pointer. This line signifies the first side of the polygon.

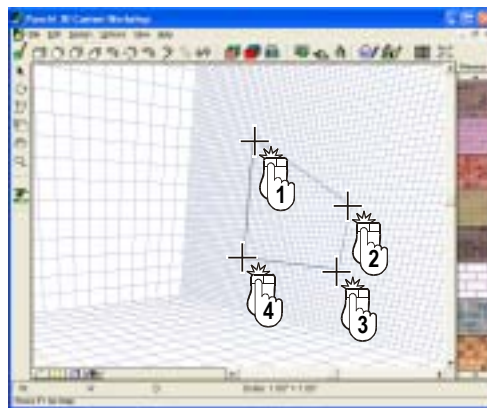

- 5 Click and move the mouse to the next corner point. Repeat until you have drawn the shape.
- 6 Double-click to end drawing the 2D shape.
- 7 Move the mouse in the direction you want to extrude the object.

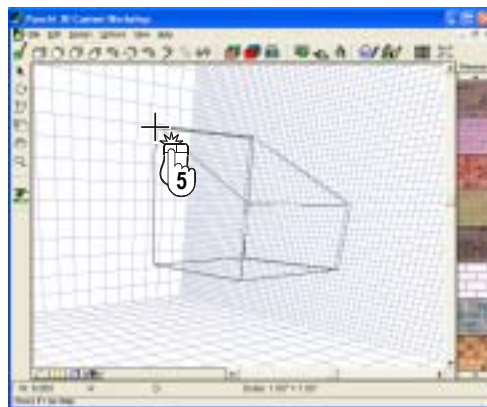

- 8 Click to end.



## Drawing a 3D Closed Arc


In closed arc drawing mode, you will be able to draw an elliptical arc which will automatically close along the bottom. You will find this tool useful when drawing couches, chairs, drop-leaf tables and so on.

### To draw a closed arc


- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.


- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.

- 3 Click the Closed Arc Tool. The pointer changes to reflect drawing mode. 

- 4 Press the mouse button on the design window to define the start point of the closed arc. A rubber-band line is displayed and follows the pointer.

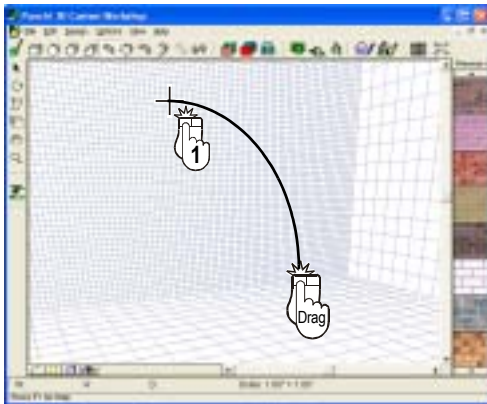

- 5 Hold the mouse button down while you extend the arc to the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse in the direction you want to extrude the object.

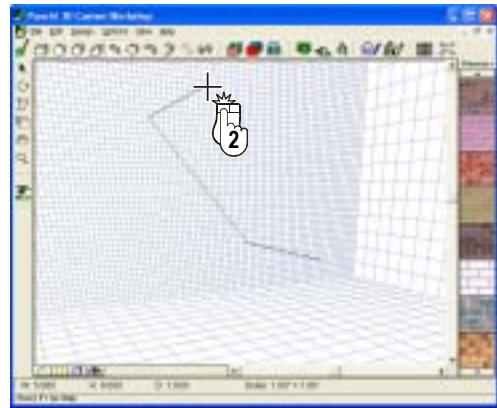

- 8 Click to end.
- 9 (optional) Press and hold SHIFT while drawing to constrain the arc to 90 degrees.

## Drawing a 3D Circular Closed Arc


In circular closed arc drawing mode, you will be able to draw closed circular objects that have a cutout area. You will find this tool useful when drawing mouldings for cabinets and so on.

### To draw a circular closed arc


- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.


- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.

- 3 Click the Circular Closed Arc Tool. The pointer changes to reflect drawing mode. 


- 4 Press the mouse button on the design window to define the center point of the arc. A rubber-band line is displayed and follows the pointer. This line signifies the radius of your arc.

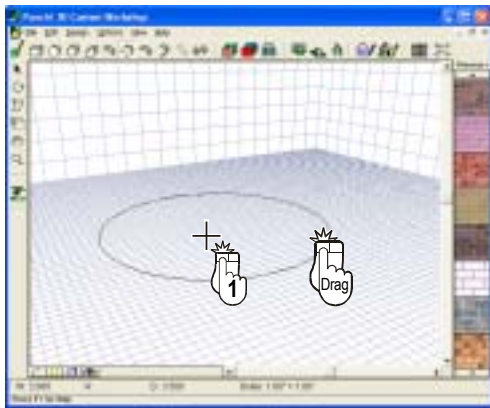

- 5 Hold the mouse button down while you extend the radius to the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse clockwise or counter-clockwise to create the shape you want.

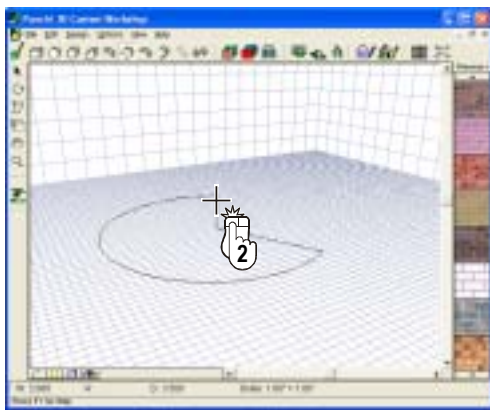

- 8 Click to end drawing the 2D shape.
- 9 Move the mouse in the direction you want to extrude the object.

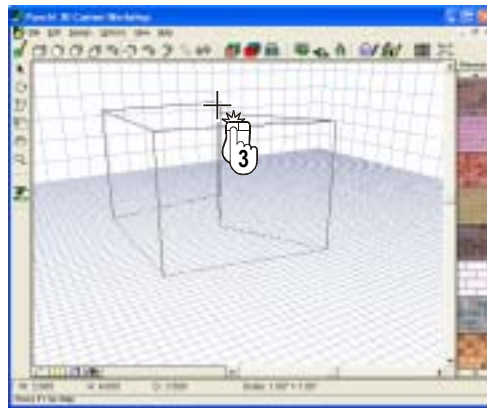

- 10 Click to end.


## Drawing a 3D Open Arc


In open arc drawing mode, you will be able to draw an elliptical arc which will remain open along the bottom. You will find this tool useful when drawing outdoor bridges, slides and so on.

### To draw an open arc


- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Open Arc Tool. The pointer changes to reflect drawing mode. 
- 4 Press the mouse button on the design window to define the start point of the closed arc. A rubber-band line is displayed and follows the pointer.

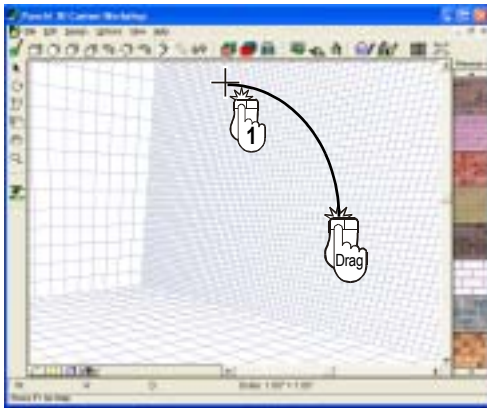

- 5 Hold the mouse button down while you extend the arc to the shape you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse in the direction you want to extrude the object.

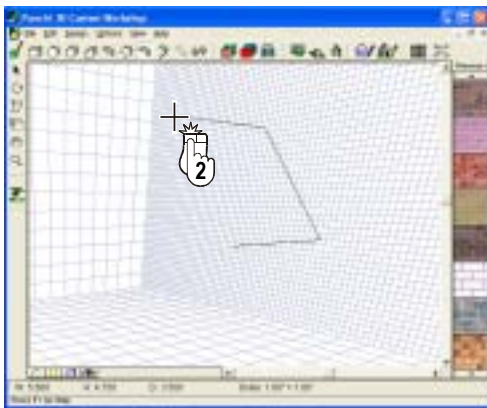

- 8 Click to end.
- 9 (optional) Press and hold SHIFT while drawing to constrain the arc to 90 degrees.

## Drawing a 3D Circular Arc

In circular arc drawing mode, you can draw an arc of any radius. You will find this tool useful when drawing decorative edges, barrel planters and so on.


### To draw a circular arc

- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.




**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Circular Arc Tool. The pointer changes to reflect drawing mode.
- 4 Press the mouse button on the design window to define the center point of the arc. A rubber-band line is displayed and follows the pointer. This line signifies the radius of your arc.

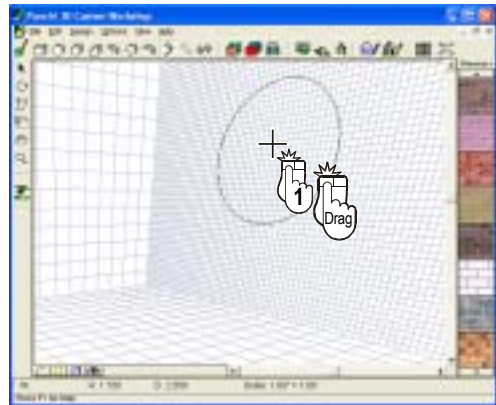


- 5 Hold the mouse button down while you extend the radius to the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse clockwise or counter-clockwise to create the shape you want.

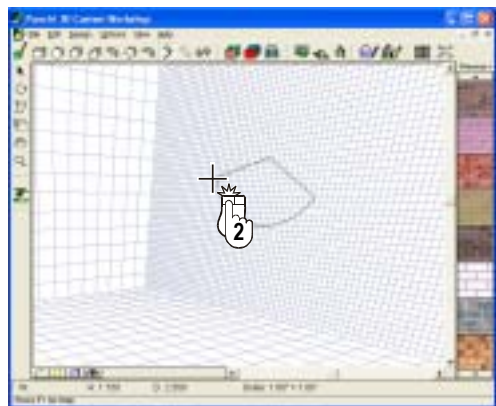

- 8 Click to end drawing the 2D shape.

- 9 Move the mouse in the direction you want to extrude the object.

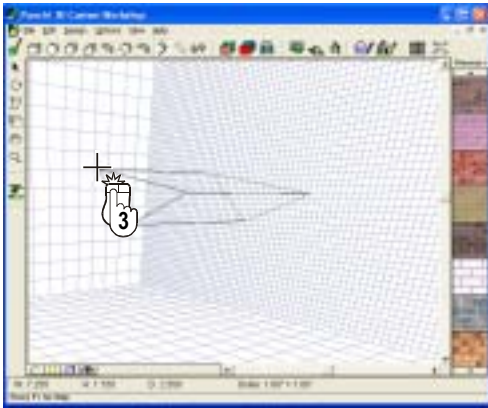


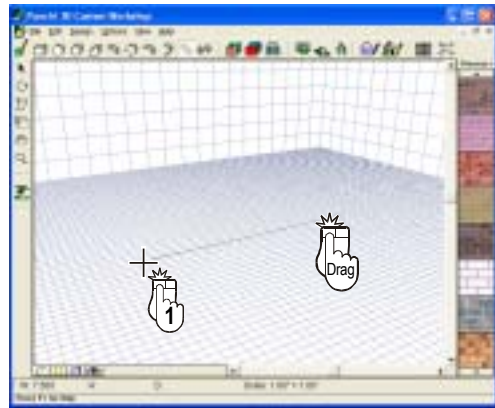
- 10 Click to end.

## Drawing a 3D Plane


In plane drawing mode, you will be able to draw flat planes to the size you want. You will find this tool useful when adding angular details to cabinets and so on.

### To draw a plane

- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2.
- Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.
- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
  - 3 Click the Plane Tool. The pointer changes to reflect drawing mode. 
  - 4 Press the mouse button on the design window to define the start point of the line. A rubber-band line is displayed and follows the pointer.



- 5 Hold the mouse button down while you extend the line in the direction and to the length you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse in the direction you want to extrude the plane.

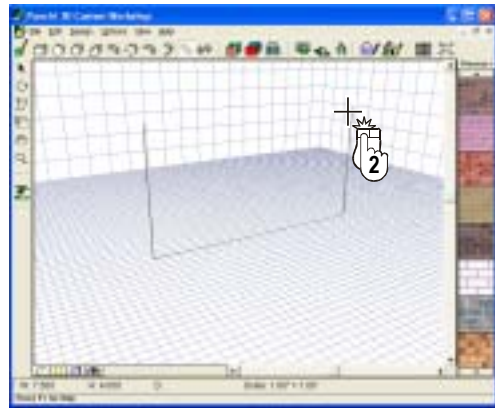


- 8 Click to end.
- 9 (optional) Press and hold the Shift key while drawing, to constrain the line horizontally or vertically.


## Drawing a 3D Curve


In curve drawing mode, you will be able to draw an open curved shape which changes direction. You will find this tool useful when drawing curved ceilings, outdoor grills and so on.

### To draw a curve


- 1 On the Design toolbar, click the Tool Toggle to access the 3D Design Toolbar. If the 3D Design Toolbar is already active, please skip to step 2. 

**Note:** Other ways to access the 3D design toolbar are on the View menu, click 3D Design Tools or press CTRL+3.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Curve Tool. The pointer changes to reflect drawing mode. 
- 4 Click and move the mouse to the next corner point. Repeat until you have drawn the necessary shape. Although the lines will initially appear angular, they will become curved when you end drawing mode.

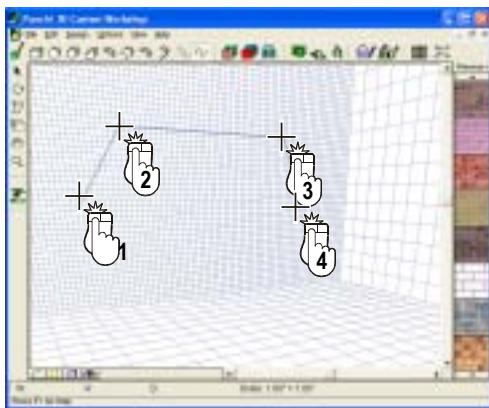

- 5 Double-click to end.
- 6 Move the mouse in the direction you want to extrude the object.

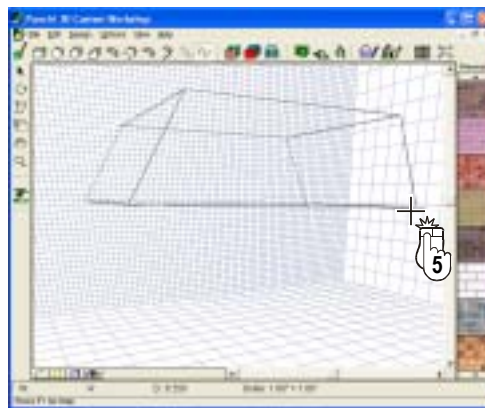


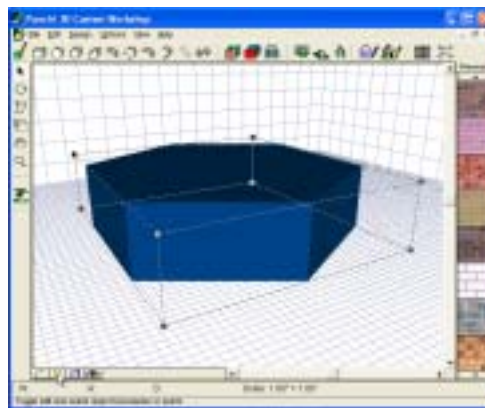
- 7 Click to end.

## Using Object Selection Mode

Object Selection Mode is active by default. Object selection, along with point selection, controls how your edits impact your object. If you are in object selection mode, changes affect the object as a whole. If you are working in point selection mode, each edge of the object is treated separately as you edit.

### To use object selection mode


- 1 On the Options menu, click Object Selection or click on the Object Selection tool in the lower left corner of the window. 
- 2 Click the object and drag it into the new position.




## Using Point Selection Mode


In point selection mode, you are able to move each edge individually in your drawing. While it is easy to move an entire object in object selection mode, it is much more convenient to handle detailed edits using point selection mode.



### To use point selection mode

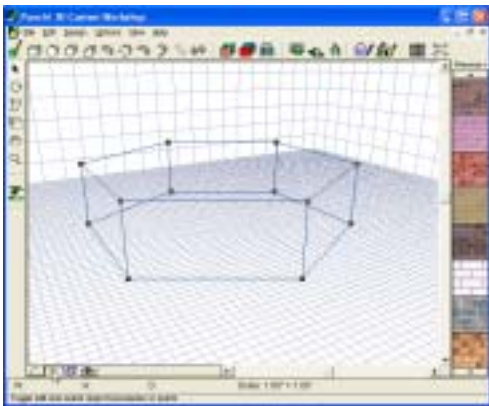- 1 On the Options menu, click Point Selection or click on the Point Selection tool in the lower left corner of the window. The design window changes to reflect wire frame view. 

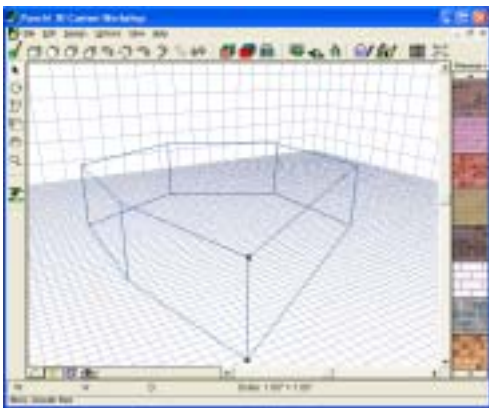

- 2 On the Design menu, click a drawing grid.
- 3 Click a section of the object and drag it into the new position to reshape it.



**Note:** To restore colors and materials, click the   Rendering Style toggle at the lower left of your window or on the View menu, click 3D Rendering Style, then click Textured.


## Drawing from Corner


Draw from Corner, along with Draw from Center, controls the beginning points of objects drawn with the drawing tools. Draw from Corner makes drawing cabinets, tables and most other angular objects much easier. Draw from Corner works with the rectangle, oval and line/plane tools only.

### To draw from corner


- 1 On the Options menu, click Draw From Corner or click on the Draw from Corner Tool. 

**Note:** Draw from Corner mode is the 3D Custom Workshop's default drawing style.

- 2 Click the Rectangle Tool. The pointer changes to reflect drawing mode. 
- 3 Press the mouse button on the design window to define the corner point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.

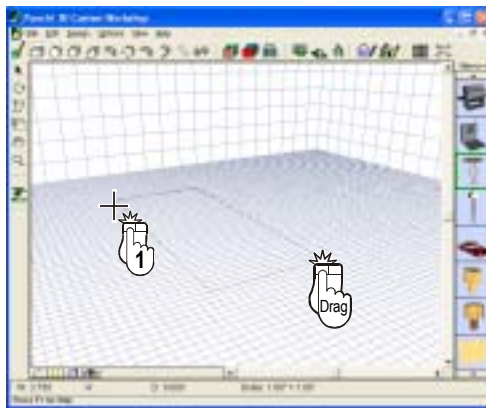

- 4 Hold the mouse button down as you extend the opposite corner of the rectangle to the size you want. Dimensions will appear in the position readout bar as you draw.
- 5 Release the mouse button.
- 6 Move the mouse in the direction you want to extrude the rectangle.

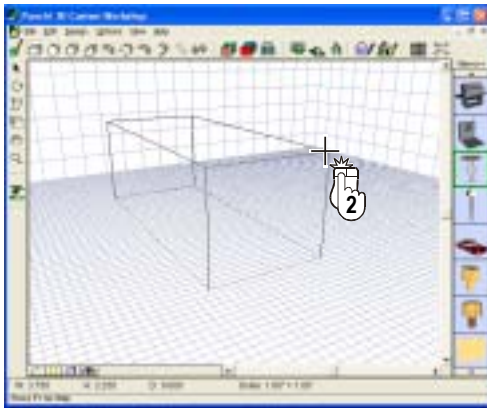




7 Click to end.

## Drawing from Center


Draw from Center, along with Draw from Corner, controls the beginning points of objects drawn with the drawing tools. Draw from Center makes drawing concentric objects a breeze. Draw from Center is applicable with the rectangle, oval and line/plane tools only.

### To draw from center

- 1 On the Options menu, click Draw from Center or click on the Draw from Center Tool. 
- 2 Click the Rectangle Tool. The pointer changes to reflect drawing mode. 
- 3 Press the mouse button on the design window to define the center point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.

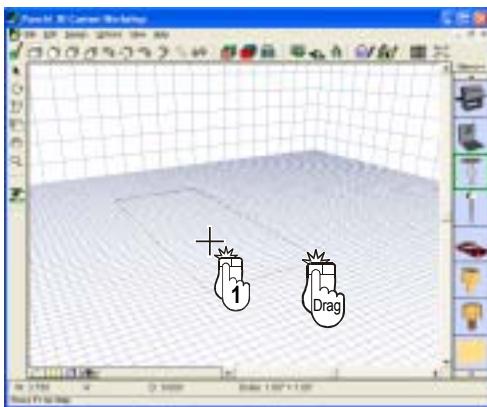

- 4 Hold the mouse button down as you extend the rectangle to the size you want. Dimensions will appear in the position readout bar as you draw.
- 5 Release the mouse button.
- 6 Move the mouse in the direction you want to extrude the rectangle.

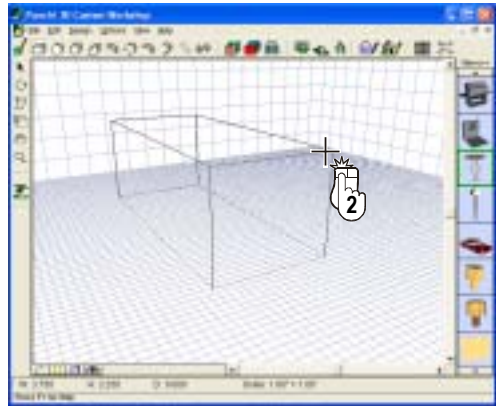

7 Click to end.





# ***Drawing in 2D***

You may find it easier to begin your design in 2D and add the third dimension later. You will find the 2D design tools are extremely useful for this technique. These tools are the counterpart to the 3D drawing tools and work similarly. For more information on 3D drawing tools, see the chapter titled “Drawing in 3D”, which begins on page 271. The 2D toolset can be used in 3D view or a 2D view from a specific direction.

In this chapter we will explore the uses of each 2D drawing Tool. In addition, the Curve Tension technique is explained.

## Drawing a 2D Rectangle

In rectangle drawing mode you will be able to draw squares and rectangles. You will find this tool useful when drawing tables, cabinets, counters and so on.


### To draw a rectangle

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.



**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Rectangle Tool. The pointer changes to reflect drawing mode.
- 4 Press the mouse button on the design window to define the start point of the rectangle. A rubber-band rectangle is displayed and follows the pointer.

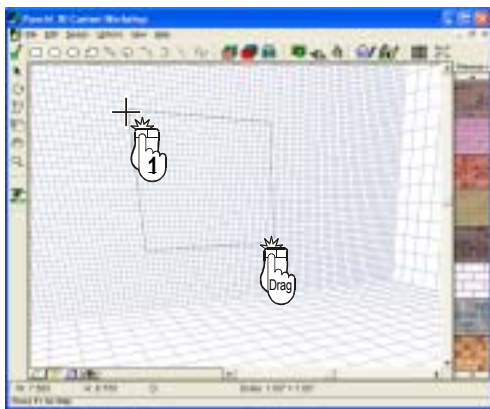

- 5 Hold the mouse button down as you extend the rectangle to the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.

## Drawing a 2D Oval


In ellipse drawing mode you will be able to draw circles and ovals. You will find this tool useful when drawing lamps, couches, planters, rugs and so on.

### To draw an oval

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Oval Tool. The pointer changes to reflect drawing mode.
- 4 Press the mouse button on the design window to define the start point of the oval. A rubber-band shape is displayed and follows the pointer.

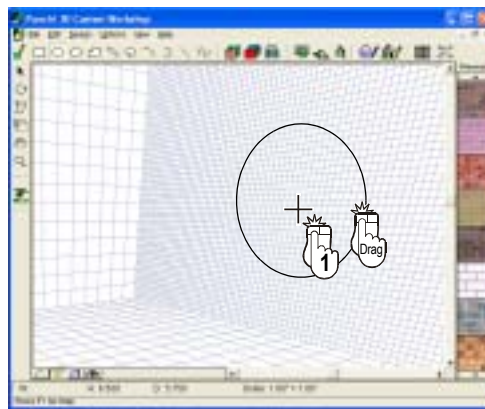

- 5 Hold the mouse button down and extend the oval until it reaches the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 (optional) Press and hold SHIFT while drawing to draw a perfect circle.


## Drawing a 2D Multigon


In multigon drawing mode you will be able to draw objects with a specified number of equal-length sides. You will find this tool useful when drawing mirrors, tabletops, hot tubs and so on.

### To draw a multigon


- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Multigon Tool. The pointer changes to reflect drawing mode. 

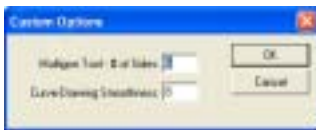

- 4 On the Options menu, click Custom Options, then type the number of equal-length sides you need.
- 5 Press the mouse button on the design window to define the start point (center) of the multigon. A rubber-band multigon is displayed and follows the pointer.

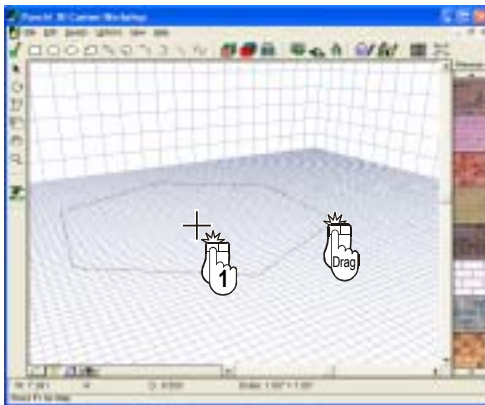

- 6 Hold the mouse button down and extend the multigon to the size you want. The radius will appear in the position readout bar as you draw.
- 7 Release the mouse button.


## Drawing a 2D Polygon


In polygon drawing mode you can draw an object with any number of sides at any angle or length. You will find this tool useful when drawing corner cabinets, futons and so on.

### To draw a polygon

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Polygon Tool. The pointer changes to reflect drawing mode. 
- 4 Click on the design window to define the start point of the polygon. A rubber-band line is displayed and follows the pointer. This line signifies the first side of your polygon.

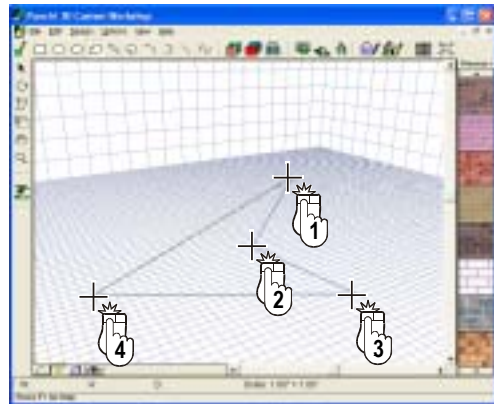

- 5 Click and move the mouse to the next corner point. Repeat until you have drawn the needed shape.
- 6 Double-click to end drawing mode. Dimensions appear in the position readout bar.


## Drawing a 2D Closed Arc


In closed arc drawing mode you will be able to draw an elliptical arc which will automatically close along the bottom. You will find this tool useful when drawing couches, chairs, drop-leaf tables and so on.

### To draw a closed arc

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Closed Arc Tool. The pointer changes to reflect drawing mode. 
- 4 Press the mouse button on the design window to define the start point of the closed arc. A rubber-band line is displayed and follows the pointer.

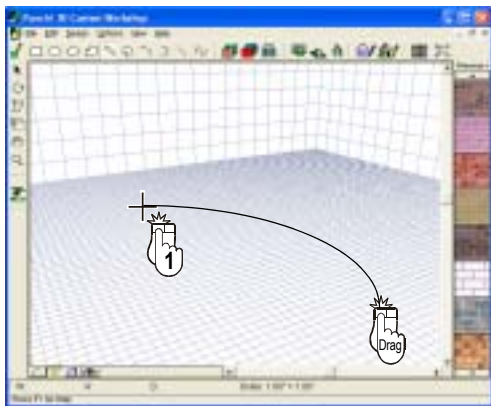

- 5 Hold the mouse button down and extend the arc to the shape you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 (optional) Press and hold SHIFT while drawing to constrain the arc to 90 degrees.


## Drawing a 2D Circular Closed Arc


In circular closed arc drawing mode you will be able to draw a closed shape of any rounded item. You will find this tool useful when drawing cabinet mouldings, decorative edges and so on.

### To draw a circular closed arc


- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Circular closed arc Tool. The pointer changes to reflect drawing mode. 
- 4 Press the mouse button on the design window to define the center point of the arc. A rubber-band line is displayed and follows the pointer. This line signifies the radius of your arc.

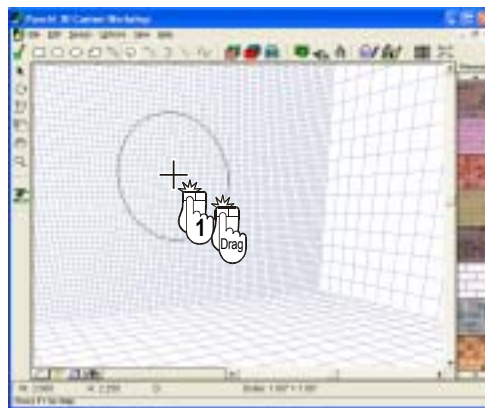

- 5 Hold the mouse button down and extend the radius to the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse clockwise or counter-clockwise to create the shape you want.

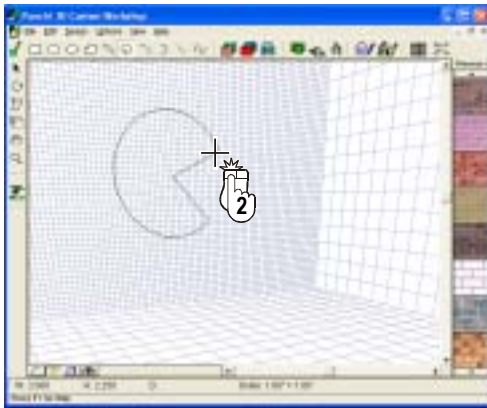

- 8 Click to end drawing mode.

## Drawing a 2D Open Arc

In open arc drawing mode you will be able to draw an elliptical arc which will remain open along the bottom. You will find this tool useful when drawing outdoor bridges, slides and so on.


### To draw an open arc

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.



**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Open Arc Tool. The pointer changes to reflect drawing mode.
- 4 Press the mouse button on the design window to define the start point of the closed arc. A rubber-band line is displayed and follows the pointer.

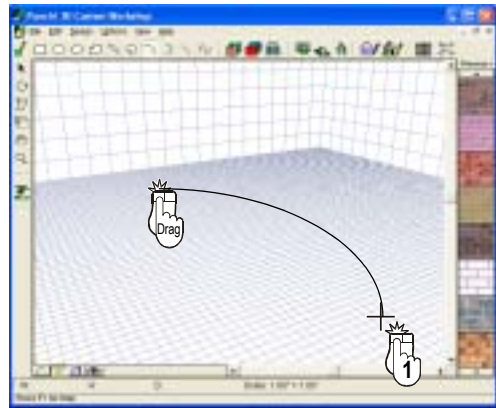

- 5 Hold the mouse button down and extend the arc to the shape you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 (optional) Press and hold SHIFT while drawing to constrain the arc to 90 degrees.

## Drawing a 2D Circular Arc

In circular arc drawing mode you will be able to draw an open shape of any radius. You will find this tool useful when drawing decorative edges, barrel planters and so on.


### To draw a circular arc

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.


**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Circular arc Tool. The pointer changes to reflect drawing mode.
- 4 Press the mouse button on the design window to define the center point of the arc. A rubber-band line is displayed and follows the pointer. This line signifies the radius of your arc.



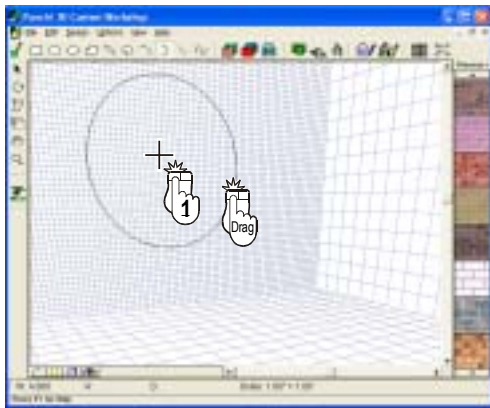

- 5 Hold the mouse button down and extend the radius to the size you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 Move the mouse clockwise or counter-clockwise to create the shape you want.

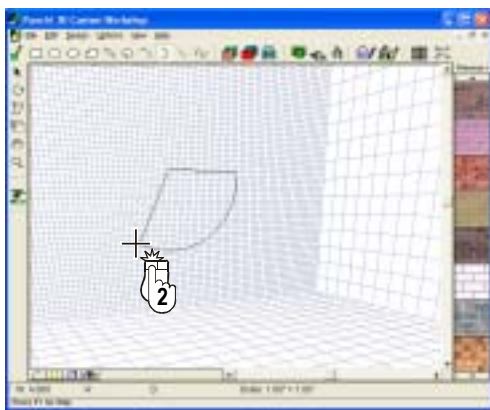

- 8 Click to end drawing mode.


## Drawing a 2D Line


In line drawing mode you will be able to draw straight lines of any length. You will find this tool useful when drawing angular details to cabinets, tables and so on.

### To draw a line

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2.

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Line Tool. The pointer changes to reflect drawing mode. 
- 4 Press the mouse button on the design window to define the start point of the line. A rubber-band line is displayed and follows the pointer.

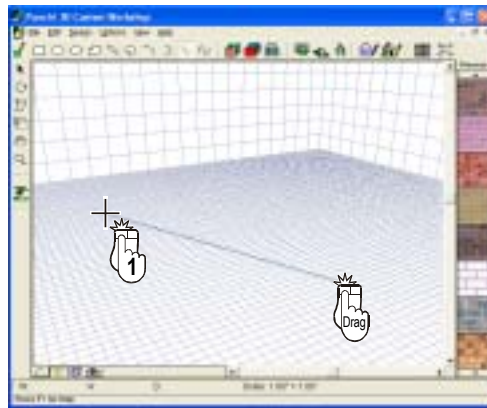


- 5 Hold the mouse button down and extend the line to the length you want. Dimensions appear in the position readout bar as you draw.
- 6 Release the mouse button.
- 7 (optional) Press and hold SHIFT while drawing to constrain the line horizontally or vertically.


## Drawing a 2D Curve

In curve drawing mode you will be able to draw an open curved shape which changes direction. You will find this tool useful when drawing outdoor grills and so on.


### To draw a curve

- 1 On the Design toolbar, click the Tool Toggle to access the 2D Design Toolbar. If the 2D Design Toolbar is already active, please skip to step 2. 

**Note:** Other ways to access the 2D design toolbar are on the View menu, click 2D Design Tools or press CTRL+2.

- 2 On the Design menu, click a drawing grid. If the appropriate drawing grid was previously selected, please skip to step 3.
- 3 Click the Curve Tool. The pointer changes to reflect drawing mode. 

- Click and move the mouse to the next corner point. Repeat until you have drawn the needed shape.

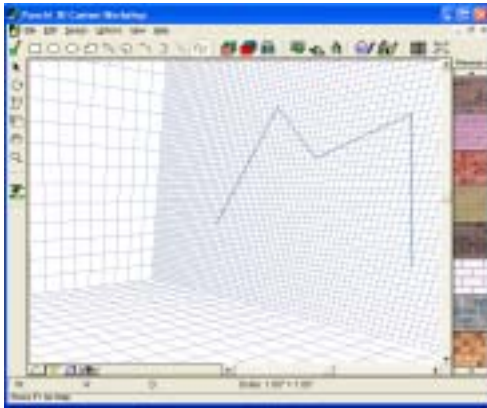

**Note:** Although the lines will initially appear to be angular, they will become curved when you end drawing mode.


- Double-click to end drawing mode.

## Changing Curve Tension

To further control the look of the shapes drawn with any of the arc or curve tools, you have control over the degree of curve assigned to them. With the Unsmooth feature it is easy to create angular shapes and with Curve Tension you can change the appearance. Curve Tension is measured between 1 and 50. Specifying 1 in the dialog box results in very little tension being applied, while specifying 50 is the maximum amount allowed and causes a greatly-exaggerated curve.

### To change curve tension


- Click an object to select it.
- On the Options Menu, click Curve Smoothing, Curve Tension. The Curve Tension dialog box is displayed.

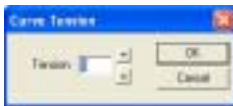


- Type the amount of tension that you want.
- Click OK. The Curve Tension you specified is applied.

Examples:


Default Curve Tension (5):

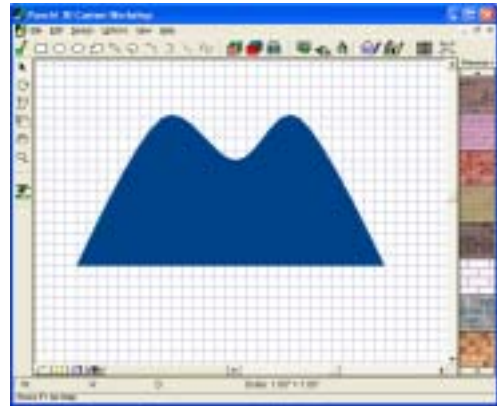


Curve Tension set at 10:

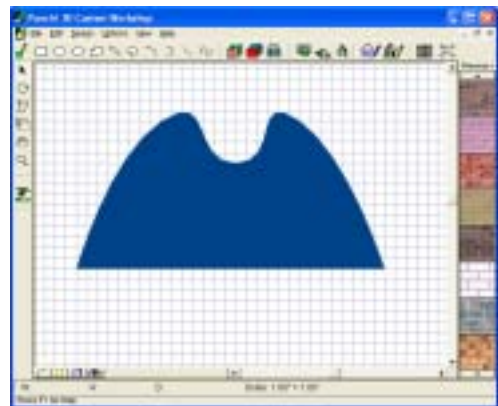

Curve Tension set at 20:

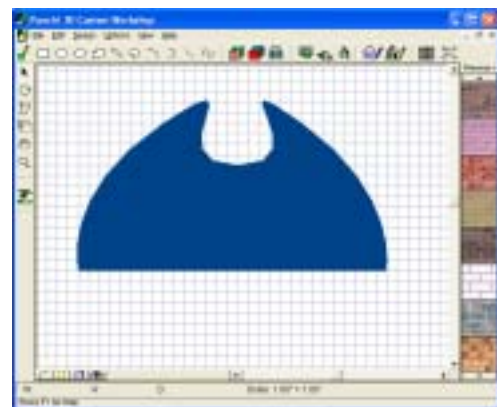

Curve Tension set at 30:

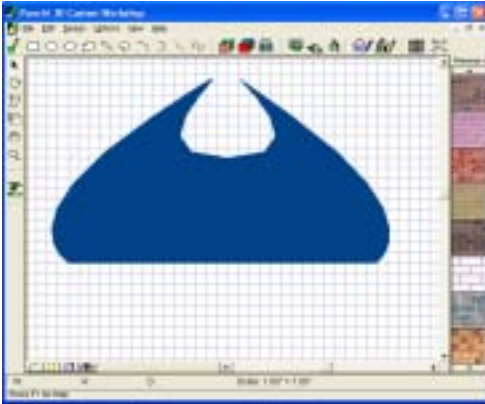



# ***Converting 2D Objects to 3D***

In the previous chapter you learned how to draw in 2D, now you will learn how to convert two-dimensional objects into 3D. You can create as much depth as you want in any direction necessary.


The Extrude technique adds depth to any object while the powerful Revolve command makes creating intricate objects like chair legs, table legs and columns very easy.

## Extruding a 2D Object


Once you draw an object in 2D you can add the third dimension at any time. The Extrude tool makes this a straight-forward process.

### To extrude a 2D object

- 1 On the View menu, click Reset View or right-click anywhere on the design window, then click Reset View on the pop-up menu that is displayed.
- 2 Click once on the object to be extruded. Selection handles appear.

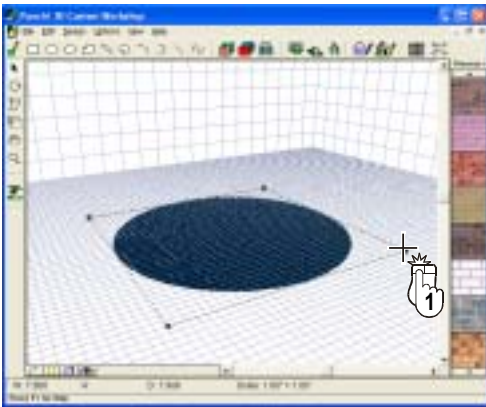

- 3 On the Standard toolbar, click the Extrude Tool.
- 4 Click an object handle, hold down the mouse button and move the pointer in the direction that you want the object to extrude. Dimensions appear in the position readout bar as you extrude.

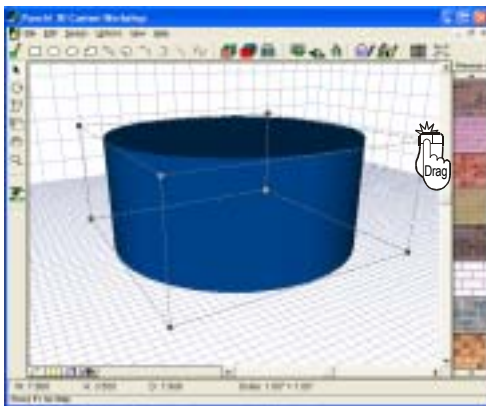


- 5 Release the mouse button to end extrusion mode.

## Revolving a 2D Object


Another way to add a third dimension is with the Revolve command. This command is useful when creating table legs, lamps, vases and so on. Radians and degrees are two ways of measuring circular distances. One radian, sometimes called a pi radian, equals 180 degrees. Two pi radians equal 360 degrees. To convert degrees to radians, multiply degrees by Pi, divided by 180. To convert radians into degrees, multiply radians by 180, divided by Pi.


### To revolve a 2D object

- 1 Click the object to be revolved.
- 2 On the Edit menu, click Revolve. The Revolve dialog box is displayed.

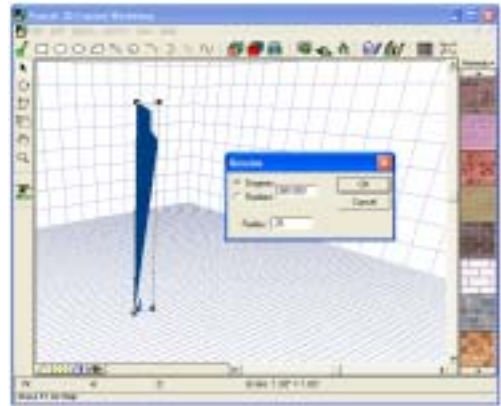

- 3 Type parameters in the dialog box. Measurements are from -360 to 360 degrees or -6.28 to 6.28 radians. The Radius is measured in the scale you have defined.

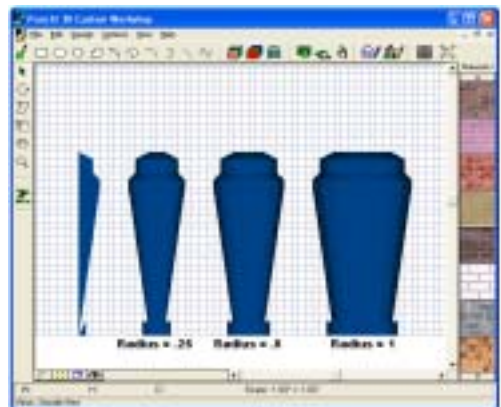

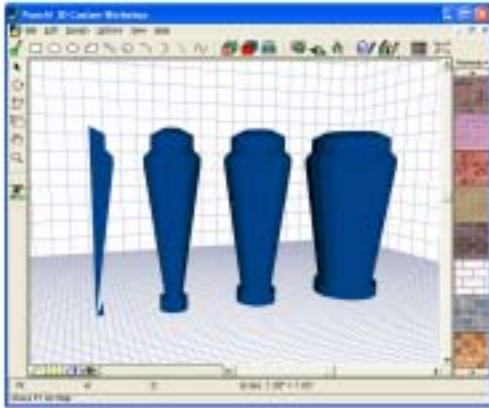



# ***Editing 3D Objects***

3D Custom Workshop makes it extremely easy to change objects once they are drawn. In this chapter, you will find instructions on techniques that make rotating, resizing and so on, very simple.


You will also learn how to use layers and create groups to make complex objects much more manageable. The flip and mirror techniques are also described and are useful when you need perfectly symmetrical objects.


## Applying Skew


To skew an object means to slant it along a selected axis. This is a useful tool for adding beveled edges to counters, diagonal legs to tables and so on.

### To skew an object

- 1 Click the object you want to skew. Selection handles appear around the object.

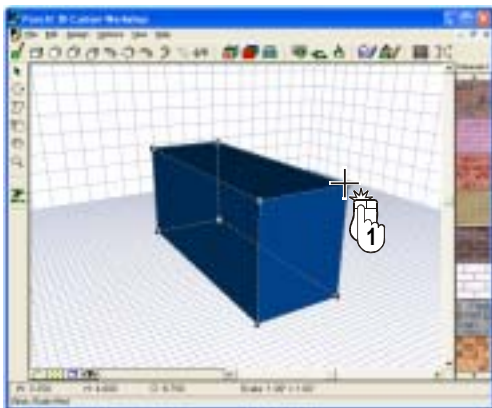

- 2 On the Design menu, click a drawing grid.
- 3 On the Standard toolbar, click the Skew Tool. 
- 4 Click a corner point of the object, hold down the mouse button and move the pointer in the direction that you want the object to be slanted. Dimensions appear in the position readout bar as you draw.

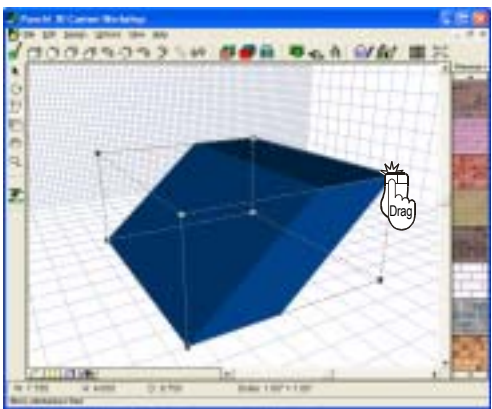


- 5 Release the mouse to stop skewing the object.


## Rotating an Object


With the rotate tool you can easily spin an object around any point on any drawing grid. This is useful when you want to face an object in a different direction from which it was drawn.

### To rotate an object

- 1 Click the object to be rotated. Selection handles appear around the object.

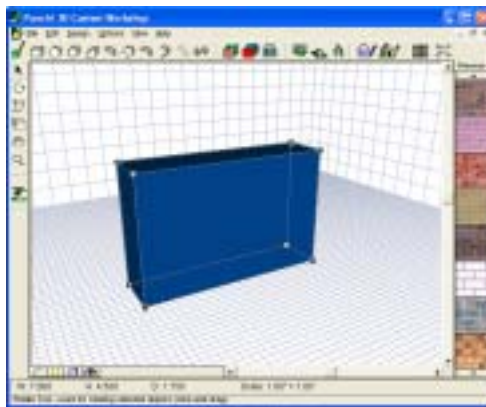

- 2 On the Design menu, click a drawing grid.
- 3 On the Standard toolbar, click the Rotate Tool. 
- 4 Click a corner point of the object, hold down the mouse button and move the pointer in the direction that you want to rotate.

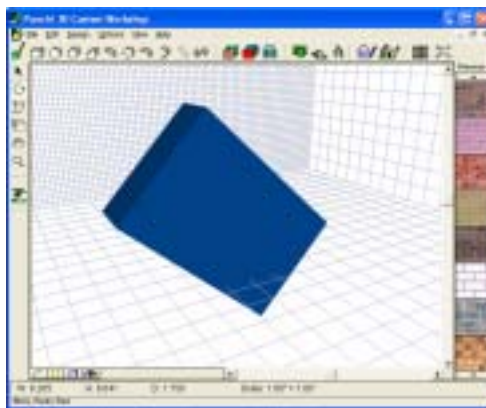

- 5 Release the mouse to stop rotating the object.

## Specifying Object Size

With the object size option you can specify exact measurements for each object, either as a percentage of the original size or by specifying dimensions in inches. This is useful if you know how large or small an object must be to fit a specific space in your home.

### To change an object's size

- 1 Select an object.
- 2 On the Options menu, click Object Size or double-click on the object you want to resize. Selection handles appear around the object. The Object Size dialog box is displayed.



- 3 Select the absolute size or percent to be scaled and type the necessary values.
- 4 Click from which part of the object you want to resize.
- 5 Click OK. The object is resized to the exact measurements or percentage you specified.

**Note:** Proportionately resizing an object takes two steps; for example, resize Width and Height first, then switch to Side Grid and resize Depth.

## Working in Layers

Using the Layer option you can store different information on different layers of your drawing. You can specify which layers are visible and which are hidden at any time during the illustration process. Many of the functions are available through the Layer Properties dialog box. To make complex objects more manageable, break them into logical layers. If you are drawing a chair, for example, you may want a separate layer for the back, the legs, the cushion and so on. From the Layer Properties menu, you can choose to show or hide certain layers, which makes viewing and working on individual layers easy and uncluttered.

### To define a new layer

- 1 On the Design menu, click Layer Properties. The Layer Properties dialog box is displayed.

- 2 Type the new layer's name in the Layer Name dialog box.
- 3 Click New.



- 4 Click OK.

### To hide a layer

- 1 On the Design menu, click Layers, then click a layer. This layer becomes active.
- 2 On the Design menu, select Layer Properties. The Layer Properties dialog box is displayed.
- 3 Select the layer you want to hide. If you select Hide all, only the active layer will remain visible.



- 4 Click Hide.
- 5 Click OK.

**Note:** The active layer cannot be hidden.

**Note:** You can easily distinguish which layers are hidden. Hidden layers do not have an asterisk next to them in the Layer Properties dialog box and in the Layers list on the Design menu the layer name will be grayed.

### To rename a layer

- 1 On the Design menu, click Layer Properties. The Layer Properties dialog box is displayed.
- 2 Click the layer you want to rename.
- 3 Type the new name in the Layer Name dialog box.



- 4 Click Rename.
- 5 Click OK.

### To remove a layer

- 1 On the Design menu, click Layer Properties. The Layer Properties dialog box is displayed.
- 2 Click the layer containing the object(s) you want to delete.




- 3 Click Remove.
- 4 Click OK. All objects on that layer are deleted.

### Setting a Nudge Distance

With Nudge you can move objects in a specific direction and in definable increments. The up, down, left and right selections are also available by using the arrow keys on your keyboard. Through the distance dialog box, distances as small as one inch can be defined.

### To change the nudge distance

- 1 On the Edit menu, click Nudge, Distance. The Nudge Distance dialog box is displayed.

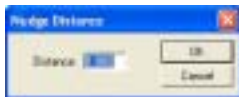

- 2 Type a new distance, then click OK.

### To move an object by nudging



- 1 Click the object you want to move.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Nudge, then click the direction (up, down, left, or right) or use the arrow keys on your keyboard.

### Using Flip

The Flip function takes the original object and reverses it either horizontally or vertically. Depending on which grid is active, flipping an object varies.

### To flip an object horizontally





- 1 Click the object you want to flip.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Flip, Horizontal.

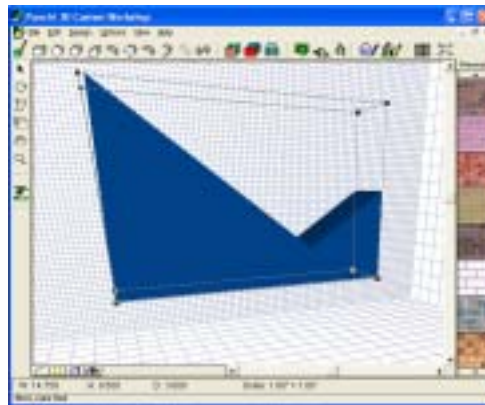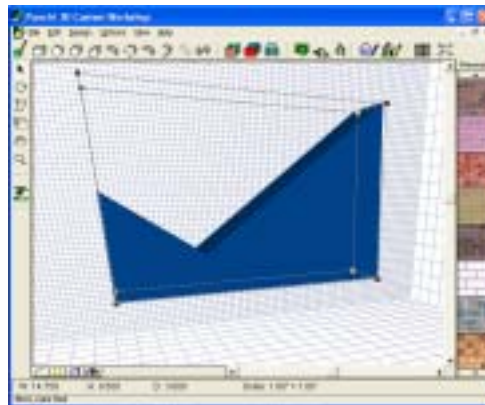




**To flip an object vertically**

- 1 Click the object you want to flip.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Flip, Vertical.

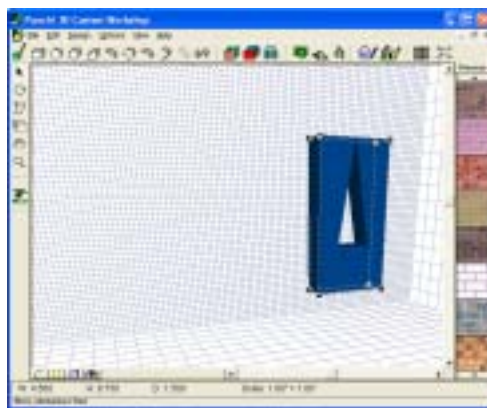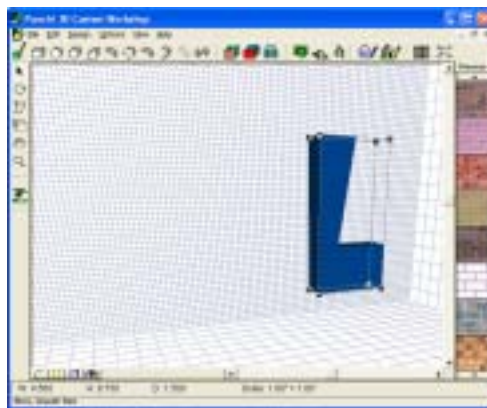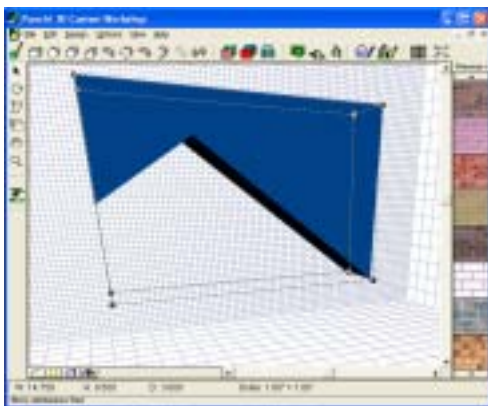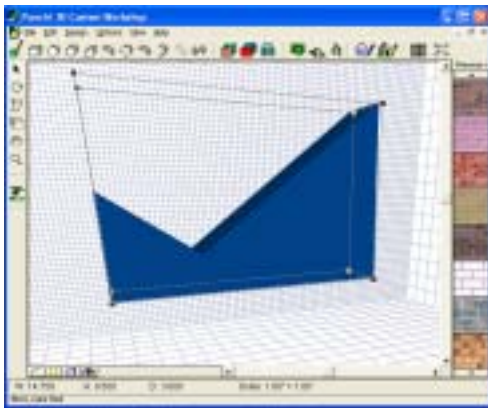

- 4 Move the object into position.

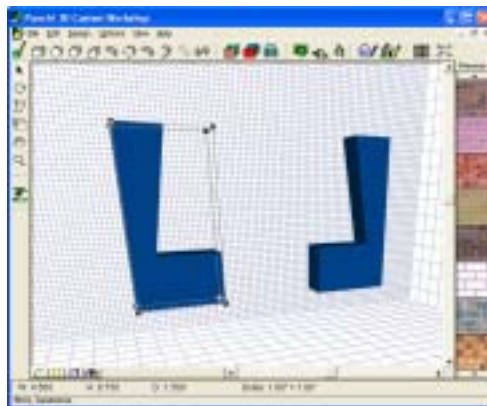**Using Mirror**



Mirror works similarly to the Flip function. The difference is that mirror leaves the original and makes a duplicate. Mirror creates two identical objects facing one another. Depending on which grid is active, mirroring an object varies.

**To mirror an object horizontally**


- 1 Click the object you want to mirror.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Mirror, Horizontal.

**To mirror an object vertically**

- 1 Click the object you want to mirror.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Mirror, Vertical.

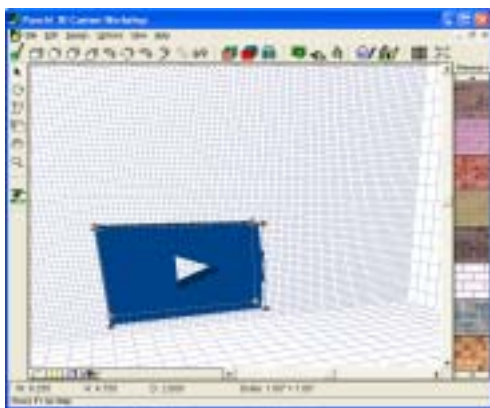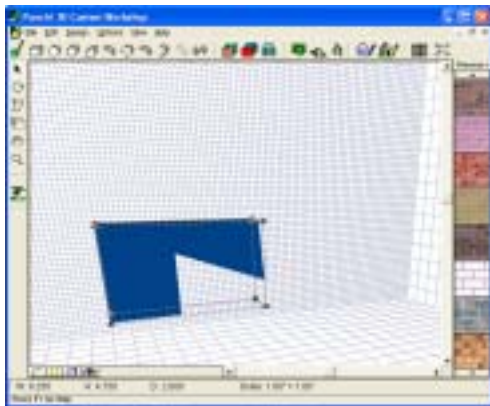

- 4 Move the object into position.


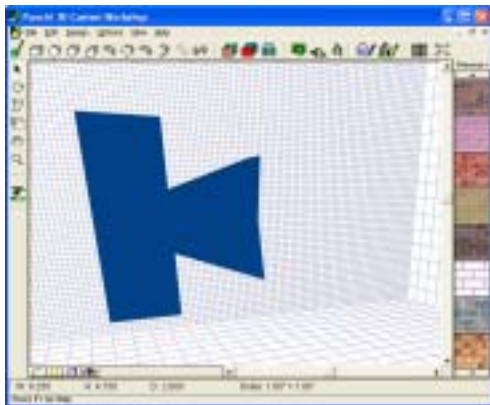


## Duplicating Objects

Similar to cutting and pasting, the duplicate feature creates an exact copy of the object you select. In the duplicate properties dialog box, you can specify the number and specific offset of a series of duplicates.



### To create a duplicate

- 1 Click the object you want to duplicate.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Duplicate Object or press CTRL+D.

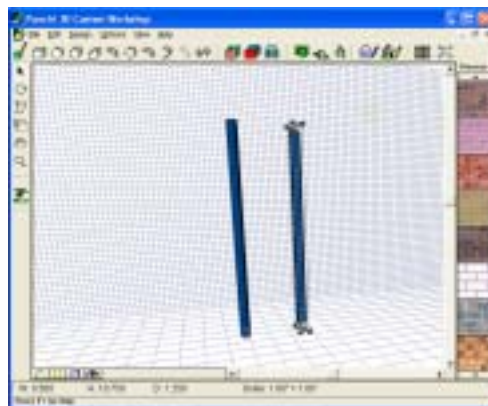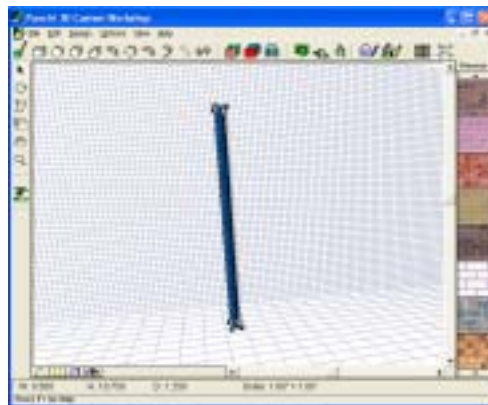

### To create a series of duplicate objects


- 1 Click the object you want to duplicate.
- 2 On the Design menu, click a drawing grid.
- 3 On the Edit menu, click Duplicate, Duplicate Properties. The Duplicate Properties dialog box is displayed.

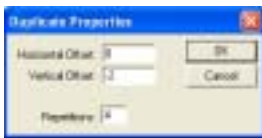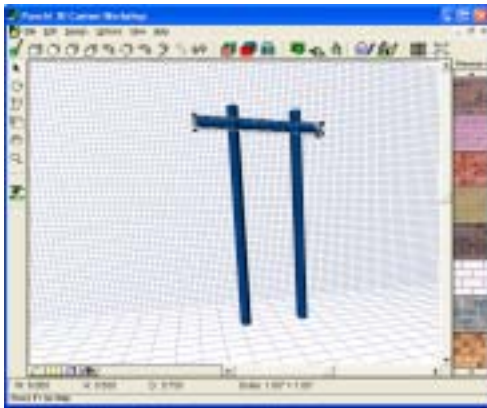

- 4 Type the horizontal and vertical offsets and the number of duplicates.

**Note:** These variables control the distance apart the duplicates are placed.

- 5 Click OK. The object is duplicated at the offset you defined.

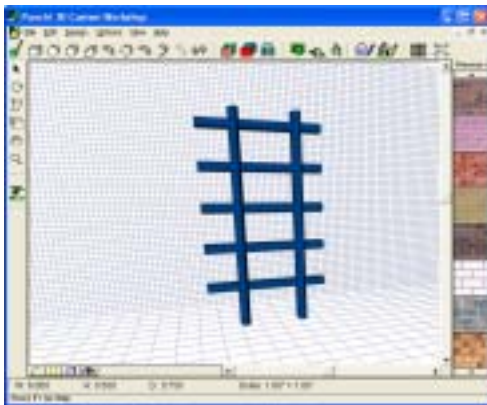

## Grouping Objects

By defining a Group, you create a set of selected objects that are then treated as one item. You can have unlimited groups in a drawing.

### To group objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Hold down SHIFT and click on each object that you want to be included in the group.
- 3 On the Edit menu, click Group or right-click and click Group on the pop-up menu that is displayed.

### To ungroup objects

- 1 On the Standard toolbar, click the Selection Tool.
- 2 Click the group you want to ungroup.
- 3 On the Edit menu, click Ungroup or right-click and click Ungroup on the pop-up menu that is displayed.



# ***Controlling Views***


You can control the way you see your design in 3D Custom Workshop. These views can make editing much easier or can simply make it clearer to view specific areas of your drawing.

In this chapter you will learn to use ClearView, perspective, orthographic, textured and wire-frame views. You will also learn how to zoom in on a specific area and how to set the camera angle.

## Using Perspective or Orthographic Views

Perspective view is the default view in 3D Custom Workshop. Perspective views give more information about depth and are often easier to view because it is similar to a “real world” view. Orthographic viewpoints make it much easier to compare, for example, two parts of the object, as there is no question of how the viewpoint may affect the perception of distance.


### To view in perspective


- Click the Viewpoint Tool, then click Perspective or on the View menu, click View in Perspective. 

**Note:** Parts of the drawing that are nearest to you will appear larger than those further away.



### To view in orthographic

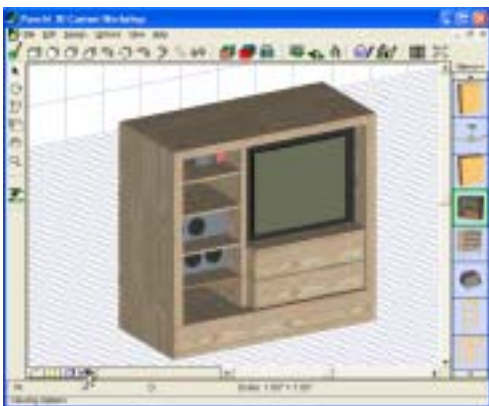

- Click the Viewpoint Tool, then click Orthographic or on the View menu, click View in Orthographic. 




## Using Different Views



Textured view gives a more realistic appearance and is the default view in 3D Custom Workshop. In wire frame view each individual line or arc is visible and able to be changed; detailed editing of the object may be easier in wire frame view. While in ClearView, you can view your design in an opaque state. 3D Custom Workshop’s technology includes anti-aliased, photo-realism. With this technology you can view your design with incredible detail, whether you are in shaded mode, ClearView and so on.


### To view wire frame mode

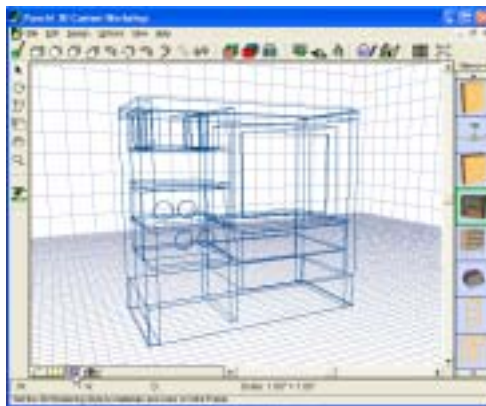- Click the Rendering Style button or on the View menu, click 3D Rendering Style, Wire Frame.  




### To view shaded mode

- Click the Rendering Style button or on the View menu, click 3D Rendering Style, Shaded View.  

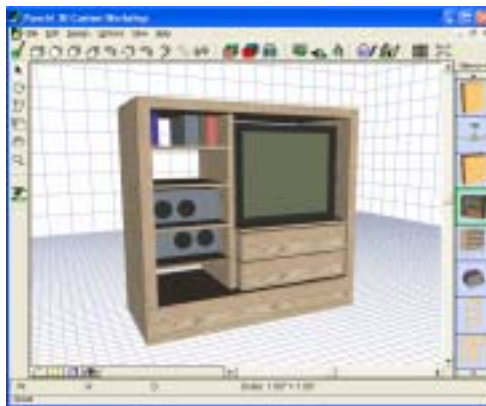

### To view using ClearView

- Click the ClearView button or on the View menu, click Render ClearView.

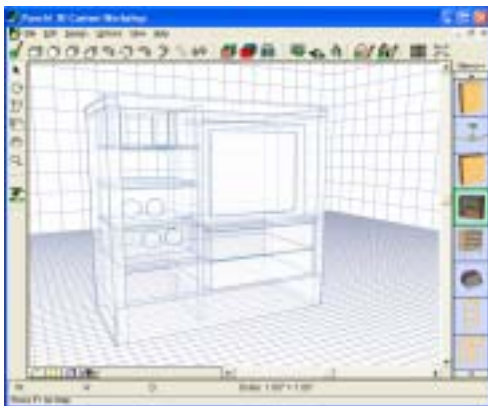

### To render using 3D final quality

- Click the Render Final Quality button or on the View menu, click Render 3D Final Quality.



### To set 3D render quality

- On the View menu, click 3D Final Quality, Low. This results in a fast rendering speed, but lower quality output.
- On the View menu, click 3D Final Quality, High. This results in a moderate rendering speed and average quality output.
- On the View menu, click 3D Final Quality, Ultra High. This results in a slower rendering speed and a high quality output.
- On the View menu, click 3D Final Quality, Excellent. This results in a very slow rendering speed, but a very high quality, sharp output.

## Using Zoom



At some point while illustrating your object, you may want a close-up view of a specific area. By using the zoom and pan tools in concert with the set zoom feature, you will be able to view any area of your drawing with pinpoint accuracy. With the pan tool, you can move the window to view a different area of the drawing without changing the magnification.

### To zoom in or out of your drawing

- 1 On the Selection toolbar, click the Zoom Tool.
- 2 Click on the design window.
- 3 Hold the mouse button down.




- 4 Move the pointer up to zoom in and move the pointer down to zoom out.

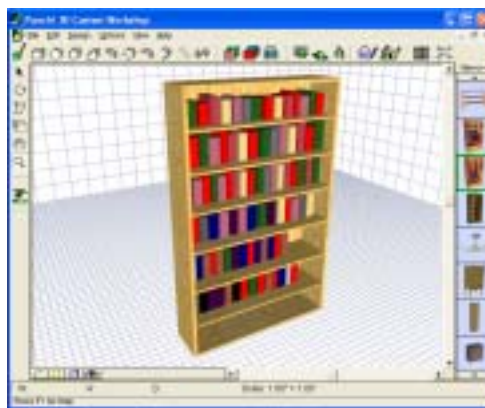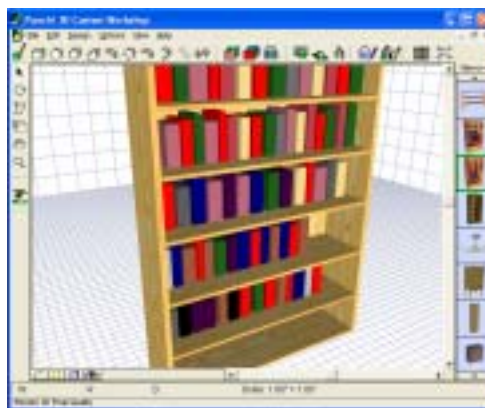

- 5 Release the mouse button.

### To set a specific zoom percentage

- 1 On the View menu, click Set Zoom. The Set Zoom dialog box is displayed.

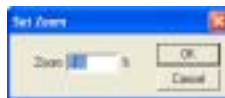

- 2 Type a zoom percentage into the dialog box.
- 3 Click OK.

### To pan across the drawing

- 1 Click the Pan Tool.
- 2 Click on the design window.
- 3 Hold the mouse button down.



- 4 Drag the object to the center of the window.



- 5 Release the mouse button.

### To adjust the lighting intensity

- 1 On the View menu, click 3D Lighting. The 3D Lighting dialog box is displayed.



- 2 Increase or decrease the overall lighting by clicking and dragging the slider.
- 3 Click OK.

## Setting the Camera Angle

With the 3D Camera Angle options you can view your design from six preset vantage points. They are particularly useful when you need to quickly view a specific area of your design or when you want to line up multiple objects.

### To view from 3D top view

- On the View menu, click 3D Camera Angle, Top.

### To view from 3D bottom view

- On the View menu, click 3D Camera Angle, Bottom.

### To view from 3D front view

- On the View menu, click 3D Camera Angle, Front.

### To view from 3D back view

- On the View menu, click 3D Camera Angle, Back.

### To view from 3D left view

- On the View menu, click 3D Camera Angle, Left.

### To view from 3D right view

- On the View menu, click 3D Camera Angle, Right.

### To return to the default view

- On the View menu, click Reset View.



# ***Applying Color and Material***


Punch! 3D Custom Workshop lets you customize any object by adding color and material. Using drag-and-drop, you can easily alter anything you design to fit into your color scheme.


Using color and material, you can make decorative changes to objects you have placed in your home as quickly as you think of them. This makes it easy to experiment with color and material variations without spending a cent!

## Setting the Object Color

All objects drawn with 3D Custom Workshop will be painted blue. You can change this default color to any color you want.

### To set the object color

- 1 On the Design toolbar, click the Color button. Colors appear in the Preview Bar. 
- 2 On the Design menu, click Object Color. The Color dialog box is displayed.

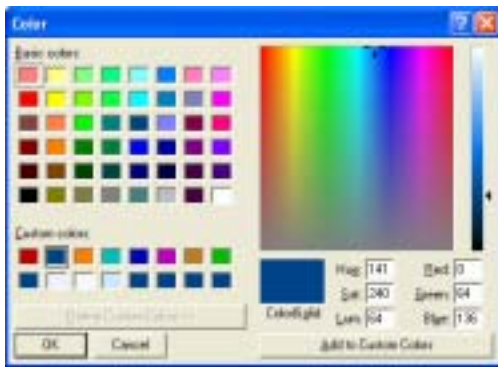



- 3 Click an area on the color spectrum window to select a color, then adjust the values, if necessary.
- 4 (optional) Adjust the current Red, Green and Blue values to create a custom color.
- 5 Click OK. The color you defined is applied and will be used for all subsequently-drawn objects.

## Applying Color and Materials



Whether you are drawing a fireplace, kitchen cabinets, or a loveseat, it's easy to apply the appropriate material. 3D Custom Workshop includes a wide variety of materials, plus you have the ability to create a custom color palette to suit your needs.

### To apply material

- 1 Click the Rendering Style button or on the View menu, click 3D Rendering Style, Textured. 
- 2 On the Design toolbar, click the Material button. Materials appear in the drag-and-drop Preview Bar. 
- 3 (optional) At the top of the Preview Bar, click the down arrow next to "Materials" to display the Materials style menu, then click to check Wood. Wood options are displayed on the Preview Bar.

- 4 Scroll to view the available wood materials.
- 5 Click the wood you want to apply, hold down the mouse button and drag the wood material onto the object. The wood you selected is applied.


### To apply color

- 1 Click the Rendering Style button or on the View menu, click 3D Rendering Style, Textured. 
- 1 On the Design toolbar, click the Color button. Colors appear in the Preview Bar. 
- 2 (optional) At the top of the Preview Bar, click the down arrow next to "Colors" to display the Colors style menu, then click to check Fall. The Fall color palette is displayed on the Preview Bar.
- 3 Scroll to view the available Fall colors.
- 4 Click the color you want to apply, hold down the mouse button and drag the color onto the object. The color you selected is applied.

## Using Custom Colors

With 3D Custom Workshop you can define your own custom color with the Color dialog box. You can start with one of the basic colors available, then change its red, blue, or green values, or click on a color in the color spectrum window to "mix" your own color. Using these techniques you can find the exact color you want, without restricting yourself to a set palette.

### To define a custom color

- 1 On the Design toolbar, click the Color button. Colors appear in the Preview Bar. 
- 2 (optional) At the top of the Preview Bar, click the down arrow next to "Colors" to display the Colors style menu, then click to check Summer. The Summer color palette is displayed on the Preview Bar.
- 3 Double-click one of the colors on the Preview Bar. The Color dialog box is displayed.



- 4 (optional) Adjust the current Red, Green and Blue values to create a custom color.
- 5 (optional) Click an area on the color spectrum window to select a color, then adjust the RGB values, if necessary.
- 6 Click OK. The color you defined is displayed on the Preview Bar.



# Index

## Numerics

100 224, 225, 226, 227  
2D objects, converting (3D Custom Workshop) 291  
2D view, resetting 32, 226  
2D views 32, 226  
2D views (3D Custom Workshop) 269  
2D, arranging windows 33  
2D, panning the view 32, 226  
2D, viewing in 3D 33  
2D, zooming 32, 226  
3D camera angle 129  
3D camera angle (Framing Editor) 191  
3D camera angle (Layout Manager) 211  
3D Custom Workshop floor grid 268  
3D Custom Workshop front grid 268  
3D Custom Workshop side grid 268  
3D cut-away slider 131, 248  
3D cut-away slider (Framing Editor) 194  
3D only view 128  
3D view 128  
3D view, displaying 128  
3D, adding shadows 132  
3D, adding shadows (Cabinet Wizard) 185  
3D, adding shadows (Fireplace Wizard) 234  
3D, adding shadows (Layout Manager) 212  
3D, arranging windows 33  
3D, fly around view 129, 183, 191, 211  
3D, fly around view (Fireplace Wizard) 232  
3D, hiding doors 132, 133, 193, 248, 252  
3D, hiding doors (Layout Manager) 213, 214  
3D, lighting intensity 131, 184, 192, 249, 306  
3D, lighting intensity (Fireplace Wizard) 234  
3D, lighting intensity (Layout Manager) 212  
3D, quarter view 33  
3D, viewing speed 129, 192  
3D, viewing speed (Layout Manager) 211  
3D, walk through 129, 183, 191  
3D, walk through (Fireplace Wizard) 232  
3D, walk through (Layout Manager) 211  
3-point freehand roof tool 88  
4-point freehand roof tool 88

## A

AC 79  
ac units, removing 80  
ac units, rotating 80

adding  
air conditioners 79  
heat pumps 79  
heating 79  
lighting 67  
object to library (3D Custom Workshop) 264  
railings 60  
roofing 86  
shadows 131, 184, 192  
shadows (Layout Manager) 212  
adding shadows 249  
adding shadows (Fireplace Wizard) 234  
age, customizing plant 142  
air conditioner 79  
air ducts  
moving 78  
placing 78  
rotating 78  
align text 29  
alter roof size 88  
alter roof slope 89  
alter topography 108  
angle, 3D camera 129  
angle, 3D camera (Framing Editor) 191  
angle, 3D camera (Layout Manager) 211  
angled text 29  
animation  
hiding in 3D (Framing Editor) 193  
viewing in 3D (Framing Editor) 193  
annotation 29  
annotation bar 9  
annotations 29  
appliance elevation 179  
apply color (Cabinet Wizard) 184  
apply color (Elevation Editor) 203  
apply color (Fireplace Wizard) 233  
apply color in LiveView 145  
apply material (Cabinet Wizard) 184  
apply material (Fireplace Wizard) 233  
apply material in LiveView 146  
arc, 2D circular (3D Custom Workshop) 287  
arc, 2D circular closed (3D Custom Workshop) 286  
arc, 2D closed (3D Custom Workshop) 286  
arc, 2D open (3D Custom Workshop) 287  
arc, circular (3D Custom Workshop) 277  
arc, drawing 113  
arc, drawing (Layout Manager) 215  
arc, open (3D Custom Workshop) 276

auto activate 37  
 automatic dimensioning, turning off 28, 42, 50  
 AVI, exporting 240, 245  
 AVI, opening 240

## B

back view (3D Custom Workshop) 306  
 background animation, suppress 133  
 background animation, suppress (Layout Manager) 213  
 background color 125  
 background colors (3D Custom Workshop) 263  
 backsplash height, change 182  
 backsplash thickness, change 182  
 baluster (deck), changing spacing 95  
 baluster spacing 95  
 base cabinet dimensions, change 180  
 base trim 144  
 base trim (Elevation Editor) 204  
 baseboard registers 80  
 basement, creating 45  
 basic terminology 12  
 bathtubs 73  
   placing 73  
   removing 73  
 bay window 54  
 beam 189  
   type, customizing (Framing Editor) 189  
   type, specifying (Framing Editor) 188  
 beams  
   hiding in 3D (Framing Editor) 193  
   viewing in 3D (Framing Editor) 193  
 beams, dimensioning 44  
 beams, length 44  
 beams, stiffener 44  
 BMP, exporting to 17  
 BMP, exporting to (3D Custom Workshop) 265  
 BMP, exporting to (Framing Editor) 194  
 bottom view (3D Custom Workshop) 306  
 break a wall 54  
 bring to front 116  
 bring to front (PhotoView Editor) 168  
 built-in oven 178  
 built-in refrigerator 178

## C

cabinet trim 180  
 cabinet, placing in design 186  
 cabinet, standard measurements 175  
 cabinets  
   import 17  
 cable jack 69  
 calculating construction costs 157  
 calculating square footage 28  
 camera 161  
 camera angle 129, 191  
 camera angle (3D Custom Workshop) 306  
 camera angle (Layout Manager) 211  
 camera angle, 3D 129  
 camera angle, 3D (Framing Editor) 191  
 camera angle, 3D (Layout Manager) 211  
 cased opening 198  
 ceiling and floor outlets, placing 66  
 ceiling fan 70

ceiling height 53  
 ceiling, creating 61  
 center text 29  
 center, snap to (Layout Manager) 219  
 centerpoint, snap to segment 21  
 change  
   backsplash height 182  
   backsplash thickness 182  
   base cabinet depth 181  
   base cabinet height 180  
   base cabinet width 180  
   deck height 94  
   door height 183  
   door type 55  
   exterior wall length 48  
   font of annotations 29  
   interior wall length 52  
   lot slope 108  
   rail height 182  
   roof pitch 89  
   roof slope 89  
   stile width 183  
   style of line 115  
   style of line (Layout Manager) 217  
   thickness of line 115  
   thickness of line (Layout Manager) 217  
   toe kick size 182  
   top cabinet depth 181  
   top cabinet elevation 181  
   top cabinet height 181  
   top cabinet thickness 181  
   width, pathway 104  
 chimney tab (Fireplace Wizard) 232  
 choosing a codec 256  
 circles, drawing 112, 167  
 circles, drawing (Layout Manager) 214  
 circular arc (3D Custom Workshop) 277  
 circular arc, 2D (3D Custom Workshop) 287  
 circular arc, drawing 114  
 circular arc, drawing (Layout Manager) 216  
 circular closed arc (3D Custom Workshop) 275  
 circular closed arc, 2D (3D Custom Workshop) 286  
 clear 122, 241  
 ClearView 129, 192, 212, 250  
 ClearView (3D Custom Workshop) 304  
 ClearView (Framing Editor) 192  
 ClearView (Layout Manager) 212  
 clipboard 122, 241  
 closed arc (3D Custom Workshop) 275  
 closed arc, 2D (3D Custom Workshop) 286  
 closing files 16, 241, 265  
 codec, choosing 256  
 codec, default 257  
 color (3D Custom Workshop) 307  
 color ramp 145  
 color ramp (Cabinet Wizard) 184  
 color ramp (Elevation Editor) 203  
 color ramp (Fireplace Wizard) 233  
 color, applying 145, 203  
 color, applying (3D Custom Workshop) 308  
 color, applying (Cabinet Wizard) 184  
 color, applying (Fireplace Wizard) 233  
 color, changing default (3D Custom Workshop) 308  
 color, plan layer 36  
 color, printing plan in 17  
 colors, custom 145

colors, custom (Elevation Editor) 203  
 colors, foreground and background (3D Custom Workshop) 263  
 column  
   material (Framing Editor) 190  
   material, customizing (Framing Editor) 190  
   size, specifying (Framing Editor) 190  
 columns  
   hiding in 3D (Framing Editor) 193  
   viewing in 3D (Framing Editor) 193  
 connector switches 66  
 construction costs, calculating (Home Estimator) 157  
 construction materials (RealModel) 172  
 contents, package 4  
 context-sensitive help 5  
 controlled walk-through  
   view 128  
 convert, degrees to radians (3D Custom Workshop) 292  
 copy 122, 241  
 copying from one floor 58  
 copying objects between floors 122, 225  
 copying staircases 60, 97  
 corner, snap to (Layout Manager) 219  
 counter top 176  
 cues, graphic 12  
 curve (3D Custom Workshop) 279  
 curve a pathway 104  
 curve tension (3D Custom Workshop) 289  
 curve, 2D (3D Custom Workshop) 288  
 curved  
   edging 105  
   railing 60, 96  
   staircase 59, 97  
   wall 53  
 curves, drawing 115, 168  
 custom cabinet features 180  
 custom color 145  
 custom color (3D Custom Workshop) 308  
 custom color (Elevation Editor) 203  
 custom color palette 145  
 custom color palette (Cabinet Wizard) 184  
 custom color palette (Elevation Editor) 203  
 custom color palette (Fireplace Wizard) 233  
 customize materials 146  
 customize multigon (Layout Manager) 217  
 customize, texture color 147  
 customizing colors (Home Estimator) 156  
 customizing railing 60  
 customizing railing (deck) 96  
 customizing staircases 59  
 customizing staircases (deck) 97  
 cut 122, 241  
 cut-away slider 131, 248  
 cut-away slider (Framing Editor) 194  
 cutting walls 51

**D**

deactivate undo 122, 241  
 deck  
   round 116  
   viewing in 3D (Framing Editor) 193  
 deck height, change 94  
 deck plan tab 93  
 deck, adding 94  
 decks  
   hiding in 3D (Framing Editor) 193  
   decks, calculating square footage 94  
   decks, handrails 95  
   decks, removing 94  
   default codec 257  
   defining slope 108  
   delete a roof 89  
   depth, change base cabinet 181  
   depth, change top cabinet 181  
   detail plan tab 111  
   diagonal, walls 51  
   diameter dimension 28  
   different color in a room 54  
   digital picture, importing (PhotoView) 161  
   Dimension Wall tool 25  
   dimensions  
     adding between walls 26  
     change endpoint 28  
     changing location 43, 50  
     from wall to center 43, 50  
     hiding 28, 42, 50  
   dimming lights 68, 69  
   display settings 5  
   dollhouse view 131, 248  
   dollhouse view (Framing Editor) 194  
   door 198  
   door dimensions, hiding 28, 42, 50  
   door header size (Framing Editor) 190  
   door height, change 183  
   door settings 55  
   doors 54  
     applying color 145  
     applying color (Elevation Editor) 203  
     applying texture 146  
     hiding in 3D 132  
     hiding in 3D (Layout Manager) 213  
     moving 55  
     removing 55  
     resizing 55  
     viewing in 3D 132  
     viewing in 3D (Layout Manager) 213  
   doors, hiding in 3D 248, 252  
   doors, viewing in 3D 248, 252  
   double oven 178  
   drag-and-drop, objects 136  
   drains, floor 75  
   drawing  
     arcs 113  
     arcs (Layout Manager) 215  
     circles 112, 167  
     circles (Layout Manager) 214  
     circular arcs 114  
     circular arcs (Layout Manager) 216  
     curves 115, 168  
     lines 112  
     lines (Layout Manager) 215  
     multigons 114, 167  
     multigons (Layout Manager) 216  
     ovals 112, 167  
     ovals (Layout Manager) 214  
     polygons 113, 167  
     polygons (Layout Manager) 215  
     rectangles 112, 167  
     rectangles (Layout Manager) 214  
     squares 112, 167  
     squares (Layout Manager) 214

drawing (3D Custom Workshop) 271  
 drawing animation paths 244  
 drawing from center (3D Custom Workshop) 281  
 drawing from corner (3D Custom Workshop) 280  
 drawing in 2D (3D Custom Workshop) 283  
 drawing scale, setting 12, 13  
 driveway 103  
     square footage 104  
 ducts  
     placing 78  
 duplicating (3D Custom Workshop) 300  
 DWG 223  
 DXF  
     export 223  
     import 223  
 DXF, exporting to (3D Custom Workshop) 265

**E**

earth-contact home 108  
 edging 104  
     removing 105  
 edit property line 100  
 edit text 29  
 editing a drawing 121  
 editing material perspective (PhotoView Editor) 169  
 editing objects 136  
 editing, 3D objects (3D Custom Workshop) 295  
 electrical  
     hiding in 3D 133  
     hiding in 3D (Layout Manager) 214  
     viewing in 3D 133  
     viewing in 3D (Layout Manager) 214  
 electrical outlet 66  
 electrical plan tab 65  
 electrical, hiding 248  
 electrical, viewing 248  
 elevate built-in oven 179  
 elevated area, remove 109  
 elevating objects 125, 139  
 elevating, PhotoView image 163  
 elevation  
     adjusting 129, 183, 191  
     adjusting (Layout Manager) 211  
     change top cabinet 181  
     increasing and decreasing 109  
     reshaping 109  
 Elevation Editor 197  
 elevation slider 9, 126  
 elevation, adjusting (Fireplace Wizard) 232  
 ellipses, see drawing circles and ovals 112, 167  
 email plans 17  
 endpoint, snap to 20  
 endpoint, snap to (Layout Manager) 219  
 estimation options (Framing Editor) 190  
 Estimator 155  
 excavation 109  
 existing files, opening 16  
 exiting 16  
 export  
     to BMP (in Framing Editor) 195  
 export to DXF 223  
 export, cabinet to 3D Custom Workshop (Cabinet Wizard) 186  
 export, fireplace to 3D Custom Workshop (Fireplace Wizard) 235  
 exporting 17

exporting (Framing Editor) 194  
 exporting a pricelist (Home Estimator) 158  
 exterior walls 48  
 extruding, 2D objects (3D Custom Workshop) 292  
 eyeglasses 130, 250  
 eyeglasses (Framing Editor) 192  
 eyeglasses (Layout Manager) 212

**F**

face dimensions (Fireplace Wizard) 231, 232  
 fan, ceiling 70  
 features, moving between plans 37, 123  
 features, moving between plans (Framing Editor) 195  
 fences  
     drawing 105  
     removing 106  
 file format (PhotoView) 162  
 files, closing 16, 241  
 files, closing (3D Custom Workshop) 265  
 files, opening 16  
 files, printing 17  
 files, saving 16  
 fill 102  
 fill, calculating square footage 101  
 fill, region 100  
 fill, reshaping 100  
 fills 115  
 fills (Layout Manager) 217  
 firebox dimensions (Fireplace Wizard) 231, 232  
 fireplace, placing in design (Fireplace Wizard) 235  
 flat roof 89  
 flip (3D Custom Workshop) 298  
 flip, entire plan 123  
 flipping, PhotoView image 164  
 float above topography 126  
 flood lights  
     adding 68  
     moving 68  
 floor cutout  
     adding 62  
     drawing 62  
     moving 62  
 floor drains 75  
 floor grid (3D Custom Workshop) 268  
 floor plan tab 47  
 flooring  
     automatic 43, 50  
     calculating square footage 62  
     drawing 61  
     removing 62  
     reshaping 61  
 flooring joists (Framing Editor) 188  
 FloorPlan Trace 151  
 floorplan, tracing 152  
 floors, adding 57  
 floors, removing 58  
 flowers 141  
 flush right text 29  
 fly around 129, 183, 191, 211  
     adjusting altitude (Cabinet Wizard) 183  
     adjusting altitude (Fireplace Wizard) 232  
     center of reference 129, 211  
     center of reference (Framing Editor) 191  
     speed 129, 192



speed (Layout Manager) 211  
fly around (Fireplace Wizard) 232  
follow topography 126  
font 30  
foreground and background colors (3D Custom Workshop) 263  
forum 6  
foundation  
    defining perimeter 42, 50  
    moving 43, 51  
    removing 43, 51  
    reshaping 43  
foundation piers 44  
foundation slope, changing 45  
foundation width 42, 50  
four-point freehand roof tool 88  
fps 256  
frames per second 256  
framing beam (Framing Editor) 188  
framing beam properties (Framing Editor) 188  
free rotate 124, 227, 242  
free rotate (Layout Manager) 218  
front grid (3D Custom Workshop) 268  
front view (3D Custom Workshop) 306  
full cabinet 176  
full cabinet, standard measurements 176  
furniture 136

## G

gable roof 86  
gambrel roof 89  
gas bib 75  
gas bib, moving 75  
gates 105  
    resizing 106  
gates, drawing 105  
gates, moving 106  
general tab (Fireplace Wizard) 231  
grid settings (3D Custom Workshop) 269  
grid size (3D Custom Workshop) 269  
grid spacing (3D Custom Workshop) 269  
grid spacing, selecting 13  
grid style 13  
grid, displaying 14  
grid, hiding (3D Custom Workshop) 269  
grid, using 13  
grids (3D Custom Workshop) 267  
grill settings, window 57  
ground fill region 100  
grouping objects (3D Custom Workshop) 301  
growing, plants 143  
guide, about 12

## H

handrail (deck), editing placement 95  
handrails (deck) 95  
handrails (deck), changing height 95  
handrails, removing from deck 95  
hardiness zone maps 142  
hearth & mantle tab (Fireplace Wizard) 231  
heat pump 79  
heat/vent lights, dimming 68, 69  
heating units, adding 79  
height, change backslash 182

height, change base cabinet 180  
height, change door 183  
height, change rail 182  
height, change top cabinet 181  
height, wall 53  
help, online 5  
hide  
    animation in 3D (Framing Editor) 193  
    beams in 3D (Framing Editor) 193  
    columns in 3D (Framing Editor) 193  
    deck in 3D (Framing Editor) 193  
    doors in 3D 132  
    doors in 3D (Layout Manager) 213  
    electrical in 3D 133  
    electrical in 3D (Layout Manager) 214  
    hvac in 3D 133  
    hvac in 3D (Layout Manager) 214  
    joists in 3D (Framing Editor) 193  
    materials in 3D 133  
    materials in 3D (Framing Editor) 193  
    materials in 3D (Layout Manager) 213  
    objects in 3D 133  
    objects in 3D (Layout Manager) 213  
    plants in 3D 133  
    plants in 3D (Layout Manager) 213  
    plumbing in 3D 133  
    plumbing in 3D (Layout Manager) 214  
    roofs in 3D 133  
    roofs in 3D (Framing Editor) 193  
    roofs in 3D (Layout Manager) 213  
    stairs in 3D (Framing Editor) 193  
    topography in 3D 133  
    topography in 3D (Framing Editor) 193  
    topography in 3D (Layout Manager) 213  
hide doors in 3D 248, 252  
hide electrical 248  
hide hvac in 3D 248  
hide layers (3D Custom Workshop) 297  
hide objects in 3D 248  
hide path name 252  
hide plants in 3D 248  
hide plumbing in 3D 248  
hide point elevations 252  
hide roofs in 3D 248  
hide segment time 252  
hide textures in 3D 248  
hide tools (Home Estimator) 156  
hide topography in 3D 248  
hiding  
    FloorPlan Trace image 153  
    plan layers 36  
    shadows (Cabinet Wizard) 185  
    shadows (Framing Editor) 192  
    shadows (Layout Manager) 212  
hiding KeyPoints 252  
hiding shadows (Fireplace Wizard) 234  
hiding, plan layers 256  
hip roof 86  
homeplans, included 16  
horizontally, flip entire plan 123  
hose bib, placing 74  
hot water heater 74  
how to estimate materials needed 157  
hvac  
    hiding in 3D 133  
    hiding in 3D (Layout Manager) 214

- viewing in 3D 133
- viewing in 3D (Layout Manager) 214
- hvac tab 77
- hvac units, moving 80
- hvac, hiding in 3D 248
- hvac, viewing in 3D 248

## I

- identifying which plant has been placed 142
- import a DXF file 223
- importing 17
- importing (FloorPlan Trace) 152
- Importing animation paths 240
- importing DXF 111
- importing image (PhotoView) 162
- importing objects 136
- inactive floor color 125
- insert PhotoView image 162
- installation 4
- installing, troubleshooting 4
- intensity, lighting 131, 184, 192, 249, 306
- intensity, lighting (Fireplace Wizard) 234
- intensity, lighting (Layout Manager) 212
- interior walls 49
- intersection, snap to 24
- intersection, snap to (Layout Manager) 219
- irregular walls 51

## J

- jacks, moving 69
- jacks, phone and cable 69
- jacks, removing 69
- joists
  - angle, specifying (Framing Editor) 189
  - hiding in 3D (Framing Editor) 193
  - material, customizing (Framing Editor) 189
  - material, specifying (Framing Editor) 189
  - size, specifying (Framing Editor) 189
  - spacing, specifying (Framing Editor) 189
  - viewing in 3D (Framing Editor) 193

## K

- Keep Tool Selected (PhotoView Editor) 167
- KeyPoint view, customize 252
- kitchen design, standard measurements 175
- kitchen island 177

## L

- landscape plan tab 99
- landscape, designing 99
- launch
  - Elevation Editor 198, 210
  - Estimator 156
  - Floorplan Trace 152
  - Framing Editor 188
  - PhotoView Editor 166
  - RealModel 172
- layer, viewing plan 36
- layers (3D Custom Workshop) 297

- layers, hiding (3D Custom Workshop) 297
- layers, renaming (3D Custom Workshop) 297
- layers, viewing 32, 226
- layers, working with 297
- Layout Manager 209
- leader dimension 28
- leader dimensions 28
- left view (3D Custom Workshop) 306
- length dimension 27
- length dimensions 27
- lengthen interior walls 52
- library paneling 144
  - removing 144
  - removing (Elevation Editor) 204
- library paneling (Elevation Editor) 204
- light switch 66
- lighting
  - adding (Fireplace Wizard) 234
  - adding (in Cabinet Wizard) 184
  - adding interior 67
  - adding outdoor 131
  - adding outdoor (Framing Editor) 192
  - adding outdoor (Layout Manager) 212
  - adjusting intensity (3D Custom Workshop) 306
  - adjusting intensity (Fireplace Wizard) 234
  - adjusting intensity (in Cabinet Wizard) 184
  - adjusting intensity (outdoor) 131
  - adjusting intensity (outdoor) (Elevation Editor) 205
  - adjusting intensity (outdoor) (in Framing Editor) 192
  - adjusting intensity (outdoor) (Layout Manager) 212
  - dimming 68, 69
  - moving 67
  - removing 68, 69
  - turning off and on 68, 69
- lighting (outdoor), adding 249
- line style 115
- line style (Layout Manager) 217
- line, 2D (3D Custom Workshop) 288
- lines, drawing 112
- lines, drawing (Layout Manager) 215
- link 147
- linked 48, 53
- LiveView 10, 127
- LiveView, opening a window 128
- LiveView, opening a window (Framing Editor) 190
- LiveView, printing 18
- locate plant 143
- log home components 136

## M

- mantle dimensions (Fireplace Wizard) 231
- manual activate 37
- mask 164
- masking, PhotoView image 164
- master pricelist, creating in Home Estimator 157
- matching scale (FloorPlan Trace) 152
- material estimations (Home Estimator) 157
- material, applying 146
- material, applying (3D Custom Workshop) 307
- material, applying (Cabinet Wizard) 184
- material, applying (Fireplace Wizard) 233
- material, customize size 147
- materials
  - hiding in 3D 133

- hiding in 3D (Framing Editor) 193
- hiding in 3D (Layout Manager) 213
- viewing in 3D 133
- viewing in 3D (Framing Editor) 193
- materials, applying (3D Custom Workshop) 308
- materials, customize 146
- materials
  - viewing in 3D (Layout Manager) 213
- mature plants 143
- measurement tools 9
- measurements, using the Virtual Ruler 28
- menu bar 8
- menu bar (3D Custom Workshop) 262
- mirror (3D Custom Workshop) 299
- modifying deck staircases 97
- modifying staircases 59
- move, entire plan 123, 242
- moving
  - AC units 80
  - air ducts 78
  - along the grid 14
  - bathubs 73
  - beams 44
  - ceiling fan 70
  - deck steps 95
  - decks 94
  - doors 55
  - features between plans 123
  - floor cutout 62
  - flooring 61
  - floors 58
  - gas bib 75
  - gates and fences 106
  - lighting 67, 68
  - objects 137
  - objects between floors 122
  - outlets 66
  - Photoview image 162
  - plants 142
  - railing 60, 96
  - showers 73
  - sinks 72
  - smoke detectors 70
  - staircases 59, 97
  - switches 66
  - thermostats 70
  - toilets 72
  - tubs 73
  - vents 79
  - walls 53
  - windows 56
- moving lighting 68, 69
- multigon (3D Custom Workshop) 273
- multigon, 2D (3D Custom Workshop) 285
- multigon, drawing 114, 167
- multigon, drawing (Layout Manager) 216

## N

- notations 29
- nudge 124, 227, 242
- nudge (3D Custom Workshop) 298

## O

- object center, snap to 22
- object color (3D Custom Workshop) 308
- object corner, snap to 24
- Object Description (3D Custom Workshop) 264
- Object Organizer, recycle button 138
- object selection mode (3D Custom Workshop) 279
- object-level editing 117
- object-level editing (PhotoView Editor) 168
- objects 136
  - converting 2D to 3D (3D Custom Workshop) 291
  - copying 122, 225
  - copying between floors 122, 225
  - editing 136
  - elevating 125, 139
  - hiding in 3D 133
  - hiding in 3D (Layout Manager) 213
  - import 17
  - moving 137
  - moving by coordinates 137
  - organizer 137
  - printing (3D Custom Workshop) 265
  - removing 137
  - rotating 124, 136, 227
  - rotating (3D Custom Workshop) 296
  - selecting (3D Custom Workshop) 279
  - specifying 3D size (3D Custom Workshop) 297
  - viewing in 3D 133
  - viewing in 3D (Layout Manager) 213
- objects, hiding in 3D 248
- objects, moving between floors 122
- objects, rotating 242
- objects, viewing in 3D 248
- offset dimension 26
- offset dimensions 26
- online help 5
- opacity, in ClearView 130, 250
- opacity, in ClearView (Framing Editor) 192
- opacity, in ClearView (Layout Manager) 212
- open arc (3D Custom Workshop) 276
- open arc, 2D (3D Custom Workshop) 287
- open percent 16
- open stairway 59
- opening 198
- opening a file (3D Custom Workshop) 264
- orthographic (3D Custom Workshop) 304
- outdoor hose bib 74
- outlets
  - moving 66
  - placing 66
  - removing 66
- oval (3D Custom Workshop) 272
- oval, 2D (3D Custom Workshop) 284
- ovals, drawing 112, 167
- ovals, drawing (Layout Manager) 214
- oven 178

## P

- paint a door 145
- paint a door (Elevation Editor) 203
- pan (3D Custom Workshop) 305
- pan tool 32, 226
- paneling, library 144

- paneling, library (Elevation Editor) 204
  - panning, 2D view 32, 226
  - parameters, undo 122, 241
  - paste 122, 241
  - pasting walls 51
  - path name, hide 252
  - path name, view 252
  - pathway 103
    - change width 104
    - square footage 104
    - straight 104
    - straight or curved 104
  - perimeter, foundation 42
  - perpendicular, snap to 25
  - perpendicular, snap to (Layout Manager) 219
  - perspective (3D Custom Workshop) 304
  - perspective editing (PhotoView Editor) 169
  - phone jack 69
  - phone jacks, moving 69
  - photograph 161
  - PhotoView 161
  - PhotoView Editor 166
  - PhotoView, file format 162
  - PhotoView, masking 164
  - PhotoView, tips for using 161
  - pi radian (3D Custom Workshop) 292
  - picture of my home 165
  - piers, foundation 44
  - pitch, roof 89
  - placing
    - air ducts 78
    - bathtubs 73
    - cabinets 17
    - ceiling and floor outlets 66
    - gas bib 75
    - hose bib 74
    - hot water heater 74
    - showers 73
    - sinks 72
    - sprinkler heads 107
    - toilets 72
  - plan full view 33
  - plan layer, viewing a 36
  - plan scale 18
  - plan tab, selecting 36
  - plan tab, selecting (Home Estimator) 157
  - plan tabs 8
  - plan, views 32, 226
  - plane (3D Custom Workshop) 278
  - plans, customizing visible 36
  - plant categories 141
  - plant database 142
  - Plant Fill 117
  - plant growth meter 143
  - PlantFinder 142
  - plants
    - adding 141
    - customizing age 142
    - find by name 143
    - hiding in 3D 133
    - hiding in 3D (Layout Manager) 213
    - moving 142
    - removing 142
    - sorting 142
    - viewing in 3D 133
    - viewing in 3D (Layout Manager) 213
  - plants, growing 143
  - plants, hiding in 3D 248
  - plants, viewing in 3D 248
  - play video after export 240, 245
  - plotter 17
  - plumbing
    - hiding in 3D 133
    - hiding in 3D (Layout Manager) 214
    - viewing in 3D 133
    - viewing in 3D (Layout Manager) 214
  - plumbing tab 71
  - plumbing, hiding in 3D 248
  - plumbing, viewing in 3D 248
  - point elevation, hide 252
  - point elevations, view 252
  - point selection mode (3D Custom Workshop) 280
  - Point tension, customize 251
  - point-level editing 117
  - point-level editing (PhotoView Editor) 168
  - polygon (3D Custom Workshop) 274
  - polygon, 2D (3D Custom Workshop) 285
  - polygons, drawing 113, 167
  - polygons, drawing (Layout Manager) 215
  - pond, adding 102
  - position readout bar (3D Custom Workshop) 262
  - post tension strand 45
  - PowerTool launch bar 10
  - preview bar (3D Custom Workshop) 262
  - preview bars 10
  - preview speed, setting 245, 257
  - print 172
    - a 3D LiveView rendering (Framing Editor) 195
    - print templates (RealModel) 172
    - printer setup (RealModel) 172
    - printing 3D LiveView 18
    - printing drawing in color 17
    - printing floorplans 17, 18, 265
    - to fit page 17
    - to fit page (Framing Editor) 194
    - to scale 18
    - to scale (Framing Editor) 195
  - printing a pricelist (Home Estimator) 159
  - properties bar 10
  - properties tab, selecting 37
  - property line 100
  - pumps (heat), adding 79
  - Punch! Cabinet Wizard 175
  - Punch! Online Community 6
  - Punch! Professional Home Design Suite, installing 4
  - Punch! Professional Home Design Suite, registering 4
  - Punch! Professional Home Design Suite, uses for 3
  - Punch! Software homepage 5
  - punchsoftware.com 6
- ## Q
- quarter view 33, 128
  - quarter view (Framing Editor) 191
- ## R
- R12 223
  - radians (3D Custom Workshop) 292
  - rail height, change 182
  - rail, cabinet 176

railings  
   adding 60  
   copying 61, 96  
   modifying 60  
   moving 60, 96  
   removing 61, 96  
 railings (deck)  
   adding 96  
 RealModel 171  
   attaching template textures & colors 174  
   construction material 172  
   scale 172  
 recently opened files 16  
 recessed lights, dimming 68, 69  
 rectangle (3D Custom Workshop) 272  
 rectangle, 2D (3D Custom Workshop) 284  
 rectangles, drawing 112, 167  
 rectangles, drawing (Layout Manager) 214  
 recycle button 138  
 redo 122, 241  
 reference grid, using 13  
 refrigerator 178  
 region, fill 100  
 registering the program 4  
 registers  
   moving 79  
   placing 79  
   removing 79  
 registration 4  
 remove library paneling 144  
 remove library paneling (Elevation Editor) 204  
 removing  
   air ducts 79  
   bathtubs 73  
   decks 94  
   doors 56  
   edging 105  
   floor cutout 62  
   flooring 62  
   floors 58  
   gas bib 75  
   handrails 95  
   hvac units 80  
   lighting 68, 69  
   objects 137  
   outlets 66  
   plants 142  
   post tension strands 45  
   railing 61, 96  
   registers 79  
   roofs 89  
   showers 74  
   sidewalks 104  
   sinks 72  
   skirt trim 95  
   staircases 60, 97  
   steps (deck) 95  
   switches 66  
   thermostats 70  
   toilets 72  
   topography 109  
   tubs 73  
   vents 79  
   windows 55  
 renaming layers (3D Custom Workshop) 297  
 render final quality (3D Custom Workshop) 304  
 rendered mode, printing in (3D Custom Workshop) 266  
 rendering, adjusting quality 130, 249  
 rendering, adjusting quality (Framing Editor) 192  
 rendering, adjusting quality (Layout Manager) 212  
 reorganizing objects 137  
 replacing PhotoView image 163  
 requirements, system 4  
 resetting 2D view 32, 226  
 reshaping  
   decks 94  
   flooring 61  
   topography 109  
 reshaping, fill 100  
 resize exterior wall 48  
 resize interior wall 52  
 resize material 147  
 resizing  
   bathtubs 73  
   doors 55  
   gates 106  
   PhotoView image 163  
   post tension strands 45  
   railing 61, 96  
   roofing 88  
   staircases 60, 97  
   steps 95  
   tubs 73  
 retaining wall height 107  
 retaining walls 106  
 reversing a staircase 60, 97  
 revolving, 2D objects (3D Custom Workshop) 292  
 right align text 29  
 right view (3D Custom Workshop) 306  
 rim joists, specifying (Framing Editor) 189  
 roof pitch, change 89  
 roof slope, change 89  
 roof, resizing 88  
 roofing tab 85  
 roofs  
   adding 86  
   constructing templates (RealModel) 173  
   gambrel 89  
   hiding in 3D 133  
   hiding in 3D (Framing Editor) 193  
   hiding in 3D (Layout Manager) 213  
   removing 89  
   saltbox 90  
   viewing in 3D 133  
   viewing in 3D (Framing Editor) 193  
   viewing in 3D (Layout Manager) 213  
 roofs, hiding in 3D 248  
 roofs, viewing in 3D 248  
 room templates 139  
 rotate 124, 227, 242  
   objects 136  
 rotate entire plan 123  
 rotate tool 124, 227, 242  
 rotate, free 136  
 rotate, specified amount 124, 227, 242  
 rotate, specified amount (Layout Manager) 218  
 rotate, specified amount (PhotoView Editor) 168  
 rotate, walls 52  
 rotated text 29  
 rotating, 3D objects (3D Custom Workshop) 296  
 rotating, air ducts 78  
 rotating, hvac units 80

rotating, objects 136  
 round deck 116  
 rules 115, 217

## S

saltbox roof 90  
 save as 16  
 save, custom texture 147  
 Saving animation paths 240  
 saving files 16, 240  
 scale, defining (RealModel) 172  
 scale, setting 13, 18  
 scanned image, importing 161  
 screen colors 124  
 scroll bars 10  
 scroll bars (3D Custom Workshop) 262  
 scroll mouse zoom 32  
 scroll mouse zoom (DXF Export & Import) 226  
 scroll mouse zoom (Elevation Editor) 201  
 second floor, adding 57  
 segment center, snap to (Layout Manager) 219  
 segment centerpoint, snap to 21  
 segment offset, snap to (Layout Manager) 219  
 segment time, hide 252  
 segment time, view 252  
 segment, snap to (Layout Manager) 220  
 segment-offset, snap to 25  
 selection mode, object (3D Custom Workshop) 279  
 selection mode, point (3D Custom Workshop) 280  
 selection, rotating 124, 227, 242  
 send to back 116  
 send to back (PhotoView Editor) 168  
 serial number 4  
 setting a nudge distance (3D Custom Workshop) 298  
 setting a temporary directory 240, 257  
 setting display size 256, 257  
 setting export quality 256  
 setting frames per second 256  
 settings, display 5  
 shadows 132, 185, 192, 249  
   adding 131  
   adding (Fireplace Wizard) 234  
   adding (Framing Editor) 192  
   adding (in Cabinet Wizard) 184  
   adding (Layout Manager) 212  
   hiding (Cabinet Wizard) 185  
   hiding (Framing Editor) 192  
   hiding (Layout Manager) 212  
 shadows (Fireplace Wizard) 234  
 shadows (Framing Editor) 192  
 shadows (Layout Manager) 212  
 shadows in preview 249, 257  
 shadows, adding 249  
 shadows, hiding (Fireplace Wizard) 234  
 shorten interior walls 52  
 show tools (Home Estimator) 156  
 shower, moving 73  
 shower, placing 73  
 showers, removing 74  
 showing  
   FloorPlan Trace image 153  
 shrubs 141  
 side grid (3D Custom Workshop) 268  
 side-by-side refrigerator 178

sidewalk 103  
   square footage 104  
 sidewalks, removing 104  
 single oven 178  
 sinks  
   moving 72  
   placing 72  
   removing 72  
 size, 3D objects 297  
 size, specifying (Framing Editor) 189  
 skewing objects (3D Custom Workshop) 296  
 skirt trim (deck), editing 94  
 skirt trim, removing 95  
 slab foundation 45, 46  
 slope  
   change 108  
 smoke detector 70  
 smoke detectors, moving 70  
 smoke detectors, removing 70  
 smooth 118  
 smoothing tension 118  
 snap grid, on and off (3D Custom Workshop) 269  
 snap to  
   center (Layout Manager) 219  
   corner (Layout Manager) 219  
   endpoint 20  
   endpoint (Layout Manager) 219  
   intersection 24  
   intersection (Layout Manager) 219  
   object center 22  
   object corner 24  
   perpendicular 25  
   perpendicular (Layout Manager) 219  
   segment (Layout Manager) 220  
   segment center (Layout Manager) 219  
   segment centerpoint 21  
   segment offset (Layout Manager) 219  
   segment-offset 25  
 snap to grid, settings 13  
 snap to grid, turning off 14  
 snaps bar 9  
 soffit 91  
 spa tub 73  
 spacing, baluster 95  
 spacing, grid 13  
 speed tips 5  
 speed, fly-around 129  
 speed, fly-around (Framing Editor) 192  
 speed, fly-around (Layout Manager) 211  
 speed, walk through 129, 192  
 speed, walk through (Layout Manager) 211  
 split front-to-back lot 108  
 split plan/3D view 33  
 split view 128  
 split view, 2D and 3D 128  
 split-level, creating 46, 58  
 sprinkler head  
   moving 108  
   placing 107  
   removing 108  
 square footage  
   calculating 28  
   calculating deck 94  
   calculating flooring 62  
   calculating ground fill 101  
   pathway 104

- property 100
- squares, drawing 112, 167
- squares, drawing (Layout Manager) 214
- staircases
  - copying 60, 97
  - customizing 59
  - modifying 59
  - moving 60
  - placing 59
  - removing 60, 97
  - resizing 60, 97
  - reversing the direction 60, 97
- staircases (deck)
  - customizing 97
  - modifying 97
  - placing straight 96
  - straight 96
- stairs
  - hiding in 3D (Framing Editor) 193
  - viewing in 3D (Framing Editor) 193
- stairway, open 59
- standard toolbar 7
- status bar 10
- status bar (3D Custom Workshop) 262
- steps (deck)
  - adding 95
  - changing the height 95
  - moving 95
  - removing 95
  - resizing 95
- stiffener beams 44
  - changing length 44
  - dimensioning 44
  - moving 44
- stile width, change 183
- stile, cabinet 176
- stock cabinets 175
- straight deck staircase 96
- straight edging 104
- straight railing 60, 96
- straight staircase 59
- straight staircases 59, 96
- straighten a curved pathway 104
- stud spacing 42, 50
- support column material (Framing Editor) 190
- support columns (Framing Editor) 188
- support, technical 6
- suppress background animation 133
- suppress background animation (Layout Manager) 213
- switches
  - connector 66
  - moving 66
  - placing 66
  - removing 66
- system requirements 4
- system settings 5

## T

- tabs
  - deck plan 93
  - detail plan 111
  - electrical plan 65
  - floor plan 47
  - foundation 41

- hvac 77
- landscape plan 99
- plumbing 71
- roofing 85
- technical support 6
- temp directory, setting 240, 257
- template organizer 140
- template, printing textures 173
- template, RealModel wall 172
- templates 139
- text
  - adding 29
  - alignment 29
  - at an angle 29
  - edit 29
  - formatting 30
- texture, attaching (RealModel) 174
- texture, printing template (RealModel) 173
- textured (3D Custom Workshop) 304
- textured mode 250
- textures, hiding in 3D 248
- textures, viewing in 3D 248
- thermostat 70
- thickness, change backsplash 182
- thickness, change top cabinet 181
- three-point freehand roof tool 88
- title bar 8
- title bar (3D Custom Workshop) 262
- To 248
- toe kick size, change 182
- toekick 176
- toilets
  - moving 72
  - placing 72
  - removing 72
- tool guides 8
- toolbars 8
- toolbars (3D Custom Workshop) 262
- tools, measurement 9
- top cabinet depth, change 181
- top cabinet elevation, change 181
- top cabinet height, change 181
- top cabinet thickness, change 181
- top cabinet with microwave 177
- top view (3D Custom Workshop) 306
- topography 108
  - alter 108
  - hiding in 3D 133
  - hiding in 3D (Framing Editor) 193
  - hiding in 3D (Layout Manager) 213
  - removing 109
  - viewing in 3D 133
  - viewing in 3D (Framing Editor) 193
  - viewing in 3D (Layout Manager) 213
- topography slope
  - change 108
- topography, hiding in 3D 248
- topography, reshaping 109
- topography, viewing in 3D 248
- tracing (FloorPlan Trace) 152
- tracing, floorplan 152
- translucency slider 130
- translucency slider (in Framing Editor) 192
- translucency slider (Layout Manager) 212
- transparent fill 115, 116, 217, 218
- transparent fill (Layout Manager) 217

transparent, mask 164  
 trees 141  
 trim style, cabinet 180  
 troubleshooting scroll mouse 32  
 tubs, placing 73  
 turn on/off lights 68, 69  
 two colors on one wall 54  
 two textures on one wall 144  
 two textures on one wall (Elevation Editor) 204

## U

undo 122, 241  
 undo parameters 122, 241  
 unit of measurement (3D Custom Workshop) 263  
 units of measurement, setting 13  
 unsmooth 118  
 URL, Punch 5  
 USDA zone maps 142  
 user interface 7

## V

vents, moving 79  
 vents, placing 79  
 vents, removing 79  
 vertically, flip entire plan 123  
 view  
   animation in 3D (Framing Editor) 193  
   beams in 3D (Framing Editor) 193  
   columns in 3D (Framing Editor) 193  
   deck in 3D (Framing Editor) 193  
   doors in 3D 132  
   doors in 3D (Layout Manager) 213  
   electrical in 3D 133  
   electrical in 3D (Layout Manager) 214  
   hvac in 3D 133  
   hvac in 3D (Layout Manager) 214  
   joists in 3D (Framing Editor) 193  
   materials in 3D 133  
   materials in 3D (Layout Manager) 213  
   objects in 3D 133  
   objects in 3D (Layout Manager) 213  
   plants in 3D 133  
   plants in 3D (Layout Manager) 213  
   plumbing in 3D 133  
   plumbing in 3D (Layout Manager) 214  
   roof in 3D (Framing Editor) 193  
   roofs in 3D 133  
   roofs in 3D (Layout Manager) 213  
   stairs in 3D (Framing Editor) 193  
   textures in 3D (Framing Editor) 193  
   topography in 3D 133  
   topography in 3D (Framing Editor) 193  
   topography in 3D (Layout Manager) 213  
 view doors in 3D 248, 252  
 view electrical 248  
 view hvac in 3D 248  
 view objects in 3D 248  
 view path name 252  
 view plants in 3D 248  
 view plumbing in 3D 248  
 view point elevations 252  
 view roofs in 3D 248  
 view segment time 252

view textures in 3D 248  
 view topography in 3D 248  
 view, 3D only 128  
 view, adding shadows 132, 192  
 view, adding shadows (Layout Manager) 212  
 view, adding shadows to 185  
 view, adding shadows to (Fireplace Wizard) 234  
 view, adjusting lighting 131, 184, 192, 249, 306  
 view, adjusting lighting (Elevation Editor) 205  
 view, adjusting lighting (Fireplace Wizard) 234  
 view, adjusting lighting (Layout Manager) 212  
 view, camera angle 129, 191  
 view, camera angle (Layout Manager) 211  
 view, full 3D 34  
 view, full plan 33  
 view, quarter 33, 128  
 view, quarter (Framing Editor) 191  
 view, speed 129, 192  
 view, speed (Layout Manager) 211  
 view, split 33, 128  
 viewing elevations (Framing Editor) 193  
 viewing elevations in ClearView 129, 250  
 viewing elevations in ClearView (Framing Editor) 192  
 viewing elevations in ClearView (Layout Manager) 212  
 viewing, 2D plan 32, 226  
 viewing, all floors 32, 226  
 viewing, layer combinations 32, 226  
 viewing, plan layer 36  
 viewing, working floor 32, 226  
 viewpoint angle 132  
 viewpoint angle (Layout Manager) 212  
 viewpoint tool 32  
 viewpoints 32  
 views (3D Custom Workshop) 303  
 views, 2D (3D Custom Workshop) 269  
 views, ClearView (3D Custom Workshop) 304  
 views, controlled fly-around 129  
 views, controlling 31  
 views, final quality (3D Custom Workshop) 304  
 views, fly-around 129  
 views, fly-around (Cabinet Wizard) 183  
 views, fly-around (Fireplace Wizard) 232  
 views, fly-around (Framing Editor) 191  
 views, fly-around (Layout Manager) 211  
 views, orthographic (3D Custom Workshop) 304  
 views, perspective (3D Custom Workshop) 304  
 views, textured (3D Custom Workshop) 304  
 views, wire frame (3D Custom Workshop) 304  
 virtual ruler 9  
 virtual ruler, hiding 28  
 VRML, exporting to 17

## W

wainscoting 144  
 wainscoting (Elevation Editor) 204  
 walk-through  
   adjusting elevation 129  
   adjusting elevation (Cabinet Wizard) 183  
   adjusting elevation (Fireplace Wizard) 232  
   adjusting elevation (Layout Manager) 211  
   speed 129, 192  
   speed (Layout Manager) 211  
   view 128  
   view (Cabinet Wizard) 183



---

- view (Fireplace Wizard) 232
- walk-through (Framing Editor)
  - adjusting elevation (Framing Editor) 191
  - view (Framing Editor) 191
- wall break tool 54
- wall cabinet 176
- walls
  - changing length 52
  - cutting and pasting 51
  - defining height 53
  - diagonal 51
  - exact length exterior 48
  - exact length interior 49
  - exterior 48
  - interior 49
  - moving 53
  - retaining 106
  - retaining height 107
  - second floor 58
  - slanted 52
- walls, constructing templates (RealModel) 173
- walls, irregular 51
- walls, rotating 52
- wall-spacing dimensions 26
- watch plants grow 143
- wheel mouse zoom control 32
- wheel mouse zoom control (DXF Export & Import) 226
- wheel mouse zoom control (Elevation Editor) 201
- width, change
  - base cabinet 180
- width, change stile 183
- width, foundation 42, 50
- window dimensions, hiding 28, 42, 50
- window header size (Framing Editor) 190
- window layout 7
- window layout (3D Custom Workshop) 261
- window, grill settings 57
- window, LiveView 128, 190
- windows 56
  - arranging 33
  - elevating 57
  - moving 56
  - resizing 56
  - stacking 57
- wire frame (3D Custom Workshop) 304
- wireframe, printing in (3D Custom Workshop) 265
- Wolfgang Trost Architects 17
- working elevation, setting 126
- working floor button 10
- working floor color 124
- working floor, viewing 32, 226
- working in groups (3D Custom Workshop) 301
- working in layers (3D Custom Workshop) 297

## **Z**

- zero-offset dimension 28
- zoom (3D Custom Workshop) 305
- zoom factor 32, 226
- zoom percentage (3D Custom Workshop) 305
- zoom tool 32, 226
- zoom, setting the factor 32, 226
- zoom, troubleshooting wheel mouse 32
- zooming in 2D 32, 226